


IRONHORSE® HELICAL GEARBOX USER MANUAL TABLE OF CONTENTS

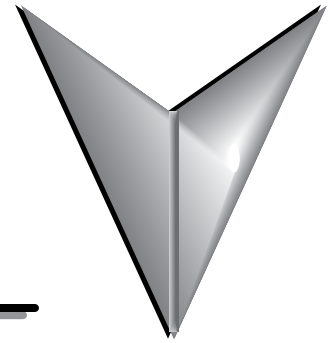

IRONHORSE HELICAL GEARBOX USER MANUAL

<i>WARNINGS AND TRADEMARKS</i>	W-1
~ WARNING ~	W-1
Trademarks.	W-1
~ AVERTISSEMENT ~	W-2
Marques de commerce	W-2
<i>USER MANUAL REVISION HISTORY.</i>	H-1
<i>USER MANUAL TABLE OF CONTENTS.</i>	TOC-1
<i>CHAPTER 1: GETTING STARTED</i>	1-1
Manual Overview	1-2
IronHorse® Helical Gearbox Introduction.	1-3
Part Number Explanation.	1-4
Nameplate Information.	1-4
<i>CHAPTER 2: SPECIFICATIONS</i>	2-1
Gearbox Selection Factors	2-2
IronHorse® Cast-Iron Helical Gearbox Specifications	2-3
IronHorse® Cast-Iron Helical Gearbox Accessories.	2-7
IronHorse Cast-Iron Helical Gearbox Dimensions	2-8
<i>CHAPTER 3: INSTALLATION, MAINTENANCE, AND LUBRICATION</i>	3-1
Safety Notification.	3-2
Installation.	3-3
Mounting Positions	3-4
Starting Up.	3-4
Inspection and Maintenance	3-4
Lubrication.	3-5
Filler / Oil Gauge / Drain Plug Locations	3-6
Recommended Lubricant.	3-7
Recommended Lubricant Amount by Box Size and Mounting Position	3-7
Seal Sizes.	3-8
Bearing Sizes.	3-8
Storage.	3-9
<i>APPENDIX A: GLOSSARY OF TERMS</i>	A-1
Glossary of Gearbox Terms.	A-2
<i>APPENDIX B: GEARBOX SELECTION</i>	B-1
Gearbox Selection Procedure.	B-2

**BLANK
PAGE**