

IRONHORSE® HELICAL GEARBOX USER MANUAL TABLE OF CONTENTS



IRONHORSE HELICAL GEARBOX USER MANUAL

<i>WARNINGS AND TRADEMARKS</i>	W-1
<i>WARNING</i>	W-1
<i>Trademarks</i>	W-1
<i>AVERTISSEMENT</i>	W-2
<i>Marques de commerce</i>	W-2
<i>USER MANUAL REVISION HISTORY</i>	H-1
<i>USER MANUAL TABLE OF CONTENTS</i>	TOC-1
<i>CHAPTER 1: GETTING STARTED</i>	1-1
<i>Manual Overview</i>	1-2
<i>IronHorse® Helical Gearbox Introduction</i>	1-3
<i>Part Number Explanation</i>	1-4
<i>Nameplate Information</i>	1-4
<i>CHAPTER 2: SPECIFICATIONS</i>	2-1
<i>Gearbox Selection Factors</i>	2-2
<i>IronHorse® Cast-Iron Helical Gearbox Specifications</i>	2-3
<i>IronHorse Cast-Iron Helical Gearbox Dimensions</i>	2-8
<i>CHAPTER 3: INSTALLATION, MAINTENANCE, AND LUBRICATION</i>	3-1
<i>Safety Notification</i>	3-2
<i>Installation</i>	3-3
<i>Mounting Positions</i>	3-4
<i>Starting Up</i>	3-4
<i>Inspection and Maintenance</i>	3-4
<i>Lubrication</i>	3-5
<i>Filler / Oil Gauge / Drain Plug Locations</i>	3-6
<i>Recommended Lubricant</i>	3-7
<i>Recommended Lubricant Amount by Box Size and Mounting Position</i>	3-7
<i>Storage</i>	3-8
<i>APPENDIX A: GLOSSARY OF TERMS</i>	A-1
<i>Glossary of Gearbox Terms</i>	A-2
<i>APPENDIX B: GEARBOX SELECTION</i>	B-1
<i>Gearbox Selection Procedure</i>	B-2

**BLANK
PAGE**