

# USER MANUAL TABLE OF CONTENTS



## CONTENTS OF THIS USER MANUAL

<u>IRONHORSE GENERAL PURPOSE AC MOTORS USER MANUAL</u>	<u>CF-1</u>
<u>WARNINGS</u>	<u>W-1</u>
~ WARNING ~	W-1
Trademarks	W-1
~ AVERTISSEMENT ~	W-2
Marques de commerce	W-2
<u>USER MANUAL REVISION HISTORY</u>	<u>H-1</u>
<u>IRONHORSE GENERAL PURPOSE AC MOTORS USER MANUAL TABLE OF CONTENTS</u>	<u>TOC-1</u>
<u>CHAPTER 1: GETTING STARTED</u>	<u>1-1</u>
Manual Overview	1-2
Overview of this Publication	1-2
Who Should Read This Manual	1-2
Technical Support	1-2
Special Symbols	1-2
Available Models	1-3
MTF2 Conveyor/Farm-Duty T-Frame Single-Phase Motors – Features and Specifications	1-3
MTR2 Rolled-Steel 56C/56HC-Frame Single-Phase Motors – Features and Specifications	1-4
MTRJ Centrifugal Jet Pump One-Phase Motors – Features and Specifications	1-6
MTDP Open Drip-Proof AC Three-Phase Motors – Features and Specifications	1-7
MTR2 and MTRP Rolled-Steel 56C/56HC-Frame Three-Phase Motors – Features and Specifications	1-10
MTRJ Centrifugal Jet Pump Three-Phase Motors – Features and Specifications	1-12
MTCP2 Premium-Efficiency Cast-Iron Three-Phase Motors – Features and Specifications	1-13
Receiving and Inspection	1-26
Unpacking	1-26
IronHorse® Part Number Explanation	1-26
Reshipping	1-27
Long Term Storage	1-27
Warranty	1-27
<u>CHAPTER 2: MOUNTING AND INITIAL STARTUP</u>	<u>2-1</u>
Safety Information	2-2
Danger!	2-2
Wiring Notes: PLEASE READ PRIOR TO INSTALLATION.	2-2
Applicable Codes	2-2
Motor Dimensions	2-3
(Dimensions = inches)	2-3

MTF2 T-Frame Single-phase Farm-Duty Motor Dimensions	2-3
MTR2 56(H)C-Frame Single-phase Rolled-steel Motor Dimensions	2-3
MTR2 56C-Frame Three-phase Rolled-steel Motor Dimensions	2-4
MTRP 56HC-Frame Three-phase Rolled-steel Motor Dimensions	2-5
MTDP Open Drip-Proof Three-phase Rolled-steel Motor Dimensions	2-6
MTCP2 Premium-Efficiency T-Frame Three-Phase Motor Dimensions	2-7
MTCP2 Premium-Efficiency TC-Frame Three-Phase Motor Dimensions	2-11
Terminal and Wiring Diagrams	2-13
IronHorse® Single-Phase Motors	2-13
IronHorse® Three-Phase Motors	2-14
Single-Phase Motors Reversing Diagrams	2-16
Motor Mounting	2-18
General Mounting Information	2-18
Motor Mounting Orientation	2-18
Proper Installation Conditions	2-19
Coupling Alignment	2-19
Motor Nameplate & Starter Information	2-20
Typical IronHorse® Motor Nameplate	2-20
Motor Starter Information	2-20
Locked Rotor Amps	2-20
Inspection Before Startup	2-21
Initial Startup Inspection	2-21
<b>CHAPTER 3: MAINTENANCE</b>	<b>3-1</b>
Routine Maintenance	3-2
Bearing Size Information	3-3
<b>CHAPTER 4: ACCESSORIES</b>	<b>4-1</b>
Replacement Parts	4-2
Junction boxes, c-flanges, Drive Bells, and Current Diverter Rings for IronHorse® MTDP Drip-Proof Three-Phase Motors	4-2
Capacitors and Centrifugal Switches for IronHorse® Single-Phase Motors	4-4
Spare/Replacement Parts for MTF2 Single-Phase Farm-Duty Motors	4-4
Spare/Replacement Parts for MTR2/MTRJ Single-Phase Motors	4-6
Spare/Replacement Parts for MTR2/MTRP/MTRJ Three-Phase Motors	4-7
Spare/Replacement Parts for MTCP2 Premium-Efficiency Three-Phase Motors	4-8
C-Flange Kits	4-10
C-Flange Kits for MTCP2 Premium-Efficiency Three-Phase Motors	4-10
STABLE™ Slide Bases	4-12
Slide Base Selection	4-13
Slide Base Dimensions	4-14
<b>CHAPTER 5: REFERENCE INFORMATION</b>	<b>5-1</b>
Using IronHorse® Motors with AC Drives	5-2
Voltage Spike Considerations for AC Drive Control	5-3
Radial Overhung Load	5-4
F1 and F2 Mounting	5-5
Junction Box Dimensions	5-6
Minimum Sheave Diameters	5-7
Decibel Levels	5-8

<i>Shipping Crate Dimensions</i> .....	5-10
<i>Performance Curves for MTF2 Motors</i> .....	5-11
<i>Performance Curves for MTR2 Motors</i> .....	5-16
<i>Performance Curves for MTDP Motors</i> .....	5-34
<i>Performance Curves for MTRP Motors</i> .....	5-50
<i>Speed/Torque Curves for MTCP2 Motors (1800 RPM)</i> .....	5-57
<i>Speed/Torque Curves for MTCP2 Motors (1200 RPM)</i> .....	5-64
<i>Speed/Torque Curves for MTCP2 Motors (3600 RPM)</i> .....	5-68
<b>CHAPTER 6: LEGACY MOTORS</b> .....	<b>6-1</b>
Chapter Overview.....	6-3
MTCP Series Motors.....	6-3
MTCP Features and Specifications.....	6-3
MTCP Specifications.....	6-4
MTCP Motor Performance Data.....	6-6
MTCP Motor Dimensions.....	6-10
MTCP Junction Box Dimensions.....	6-16
MTCP Decibel Levels.....	6-17
Spare/Replacement Parts for MTCP Premium-Efficiency Three-Phase Motors.....	6-18
MTCP Bearing Size Information.....	6-20
MTR Series Motors.....	6-21
MTR Features and Specifications (Single-Phase Motors).....	6-21
MTR Features and Specifications (Three-Phase Motors).....	6-22
MTR Motor Dimensions.....	6-24
MTR Junction Box Dimensions.....	6-25
MTR Terminal and Wiring Diagrams.....	6-25
MTR Motors Decibel Levels.....	6-25
Spare/Replacement Parts for MTR Single-Phase Motors.....	6-26
MTR Bearing Size Information.....	6-26
MTSS Series Motors.....	6-27
MTSS Features and Specifications.....	6-27
MTSS Motor Dimensions.....	6-29
MTSS Junction Box Dimensions.....	6-30
MTSS Decibel Levels.....	6-30
MTSS Motor Mounting.....	6-31
Spare/Replacement Parts for MTSS Stainless-Steel Three-Phase Motors.....	6-32
MTSS Bearing Size Information.....	6-32
MTC EAct Series Motors.....	6-33
MTC Features and Specifications.....	6-33
MTC Motor Dimensions.....	6-41
MTC Junction Box Dimensions.....	6-46
MTC Motors Decibel Levels.....	6-47
C-Flange Kits for MTC EAct Three-Phase Motors.....	6-47
MTC Motors Bearing Size Information.....	6-49
MTF Farm-Duty T-Frame Single-Phase Motors – Features and Specifications.....	6-50
Motor Dimensions.....	6-51
MTF T-Frame Single-phase Farm-Duty Motor Dimensions.....	6-51
Terminal and Wiring Diagrams.....	6-51
Replacement Parts.....	6-52

<i>Capacitors and Centrifugal Switches for IronHorse® Single-Phase Motors</i> .....	6-52
<i>Spare/Replacement Parts for MTF Single-Phase Farm-Duty Motors</i> .....	6-52
<i>Junction Box Dimensions</i> .....	6-53