

USER MANUAL TABLE OF CONTENTS



CONTENTS OF THIS USER MANUAL

<u>IRONHORSE GENERAL PURPOSE AC MOTORS USER MANUAL</u>	<u>CF-1</u>
<u>WARNINGS</u>	<u>W-1</u>
WARNING.....	W-1
Trademarks.....	W-1
<u>AVERTISSEMENT</u>	<u>W-2</u>
Marques de commerce.....	W-2
<u>USER MANUAL REVISION HISTORY</u>	<u>H-1</u>
<u>IRONHORSE GENERAL PURPOSE AC MOTORS USER MANUAL TABLE OF CONTENTS</u>	<u>TOC-1</u>
<u>CHAPTER 1: GETTING STARTED</u>	<u>1-1</u>
Manual Overview.....	1-2
Overview of this Publication.....	1-2
Who Should Read This Manual.....	1-2
Technical Support.....	1-2
Special Symbols.....	1-2
Available Models.....	1-3
MTF Farm-Duty T-Frame Single-Phase Motors – Features and Specifications.....	1-3
MTR2 Rolled-Steel 56C/56HC-Frame Single-Phase Motors – Features and Specifications.....	1-4
MTR2 and MTRP Rolled-Steel 56C/56HC-Frame Three-Phase Motors – Features and Specifications.....	1-6
MTCP2 Premium-Efficiency Cast-Iron Three-Phase Motors – Features and Specifications.....	1-8
Receiving and Inspection.....	1-21
Unpacking.....	1-21
IronHorse® Part Number Explanation.....	1-21
Reshipping.....	1-22
Long Term Storage.....	1-22
Warranty.....	1-22

CHAPTER 2: MOUNTING AND INITIAL STARTUP	2-1
Safety Information.....	2-2
Danger!.....	2-2
Wiring Notes: PLEASE READ PRIOR TO INSTALLATION.....	2-2
Applicable Codes.....	2-2
Motor Dimensions.....	2-3
MTF T-Frame Single-phase Farm-Duty Motor Dimensions.....	2-3
MTR2 56(H)C-Frame Single-phase Rolled-steel Motor Dimensions.....	2-3
MTR2 56C-Frame Three-phase Rolled-steel Motor Dimensions.....	2-4
MTRP 56HC-Frame Three-phase Rolled-steel Motor Dimensions.....	2-5
MTCP2 Premium-Efficiency T-Frame Three-Phase Motor Dimensions.....	2-6
MTCP2 Premium-Efficiency TC-Frame Three-Phase Motor Dimensions.....	2-10
Terminal and Wiring Diagrams.....	2-12
IronHorse® Single-Phase Motors.....	2-12
IronHorse® Three-Phase Motors.....	2-12
Single-Phase Motors Reversing Diagrams.....	2-13
Motor Mounting.....	2-15
General Mounting Information.....	2-15
Motor Mounting Orientation.....	2-15
Proper Installation Conditions.....	2-16
Coupling Alignment.....	2-16
Motor Nameplate & Starter Information.....	2-17
Typical IronHorse® Motor Nameplate.....	2-17
Motor Starter Information.....	2-17
Locked Rotor Amps.....	2-17
Inspection Before Startup.....	2-18
Initial Startup Inspection.....	2-18
CHAPTER 3: MAINTENANCE	3-1
Routine Maintenance.....	3-2
Bearing Size Information.....	3-3
CHAPTER 4: ACCESSORIES	4-1
Replacement Parts.....	4-2
Capacitors and Centrifugal Switches for IronHorse® Single-Phase Motors.....	4-2
Spare/Replacement Parts for MTF Single-Phase Farm-Duty Motors.....	4-2
Spare/Replacement Parts for MTR2 Single-Phase Motors.....	4-3
Spare/Replacement Parts for MTR2/MTRP Three-Phase Motors.....	4-4
Spare/Replacement Parts for MTCP2 Premium-Efficiency Three-Phase Motors.....	4-5
C-Flange Kits.....	4-7
C-Flange Kits for MTCP2 Premium-Efficiency Three-Phase Motors.....	4-7
STABLE™ Slide Bases.....	4-9
Slide Base Selection.....	4-10
Slide Base Dimensions.....	4-11

CHAPTER 5: REFERENCE INFORMATION	5-1
<i>Using IronHorse® Motors with AC Drives</i>	5-2
<i>Voltage Spike Considerations for AC Drive Control</i>	5-3
<i>Radial Overhung Load</i>	5-4
<i>F1 and F2 Mounting</i>	5-5
<i>Junction Box Dimensions</i>	5-6
<i>Minimum Sheave Diameters</i>	5-7
<i>Decibel Levels</i>	5-8
<i>Shipping Crate Dimensions</i>	5-10
<i>Performance Curves for MTR2 Motors</i>	5-11
<i>Performance Curves for MTRP Motors</i>	5-29
<i>Speed/Torque Curves for MTCP2 Motors (1800 RPM)</i>	5-36
<i>Speed/Torque Curves for MTCP2 Motors (1200 RPM)</i>	5-43
<i>Speed/Torque Curves for MTCP2 Motors (3600 RPM)</i>	5-47
CHAPTER 6: LEGACY MOTORS	6-1
Chapter Overview	6-2
MTCP Series Motors	6-2
MTCP Features and Specifications	6-2
MTCP Specifications	6-3
MTCP Motor Performance Data	6-5
MTCP Motor Dimensions	6-9
MTCP Junction Box Dimensions	6-15
MTCP Decibel Levels	6-16
Spare/Replacement Parts for MTCP Premium-Efficiency Three-Phase Motors	6-17
MTCP Bearing Size Information	6-19
MTR Series Motors	6-20
MTR Features and Specifications (Single-Phase Motors)	6-20
MTR Features and Specifications (Three-Phase Motors)	6-21
MTR Motor Dimensions	6-23
MTR Junction Box Dimensions	6-24
MTR Terminal and Wiring Diagrams	6-24
MTR Motors Decibel Levels	6-24
Spare/Replacement Parts for MTR Single-Phase Motors	6-25
MTR Bearing Size Information	6-25
MTSS Series Motors	6-26
MTSS Features and Specifications	6-26
MTSS Motor Dimensions	6-28
MTSS Junction Box Dimensions	6-29
MTSS Decibel Levels	6-29
MTSS Motor Mounting	6-30
Spare/Replacement Parts for MTSS Stainless-Steel Three-Phase Motors	6-31
MTSS Bearing Size Information	6-31
MTC EAct Series Motors	6-32
MTC Features and Specifications	6-32
MTC Motor Dimensions	6-40
MTC Junction Box Dimensions	6-45
MTC Motors Decibel Levels	6-46
C-Flange Kits for MTC EAct Three-Phase Motors	6-46
MTC Motors Bearing Size Information	6-48

BLANK
PAGE