

TABLE OF CONTENTS



Chapter 1: Getting Started	1-1
Manual Overview	1-2
Overview of this Publication	1-2
Who Should Read This Manual	1-2
Technical Support	1-2
Special Symbols	1-2
Available Models	1-3
Single-Phase Motors Features and Specifications	1-3
Three-Phase Motors Features and Specifications	1-4
Receiving and Inspection	1-15
Unpacking	1-15
IronHorse Part Number Information	1-15
Reshipping	1-16
Long Term Storage	1-16
Warranty	1-16

Chapter 2: Mounting & Initial Startup2-1

 Safety Information2-2

 Motor Dimensions2-3

 56C-Frame Single-phase Motor Dimensions2-3

 56C-Frame Three-phase Motor Dimensions2-3

 T-Frame Three-phase Motor Dimensions2-4

 TC-Frame Three-phase Motor & C-Flange Dimensions2-8

 Terminal Diagrams2-9

 Motor Mounting2-10

 STABLE™ Slide Bases2-10

 Proper Installation Conditions2-11

 Coupling Alignment2-11

 Motor Nameplate & Starter Information2-12

 Typical IronHorse Motor Nameplate2-12

 Motor Starter Information2-12

 Locked Rotor Amps2-13

 Inspection Before Startup2-14

 Initial Startup Inspection2-14

Chapter 3: Preventative Ongoing Maintenance3-1

 Routine Maintenance3-2

 Bearing Size Information3-3

Chapter 4: Accessories4-1

 Capacitors and Centrifugal Switches4-2

 C-Flange Kits4-3

 STABLE Slide Bases4-4

Chapter 5: Reference	5-1
Using IronHorse Motors with AC Drives	5-2
Voltage Spike Considerations for AC Drive Control	5-2
Double Punched Motors	5-3
F1 and F2 Mounting	5-4
Junction Box Dimensions	5-5
Minimum Sheave Diameters	5-6
Decibel Levels	5-7
Shipping Crate Dimensions	5-8