


Installation Instructions

Metal Work Series 70
Pneumatic Valves

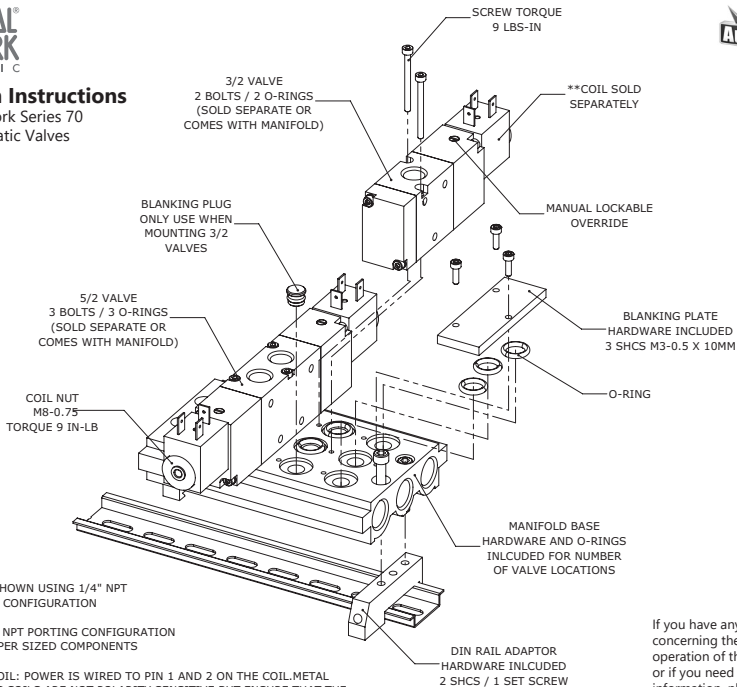

MODEL SHOWN USING 1/4" NPT
PORTING CONFIGURATION

FOR 1/8" NPT PORTING CONFIGURATION
USE PROPER SIZED COMPONENTS

**FOR COIL: POWER IS WIRED TO PIN 1 AND 2 ON THE COIL. METAL WORK DC COILS ARE NOT POLARITY SENSITIVE BUT ENSURE THAT THE CABLE/CONNECTOR USED DOES NOT HAVE POLARITY REQUIREMENTS. THE 3RD PIN IS FOR GROUND WHICH MUST BE CONNECTED

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call AutomationDirect.com Tech Support at 770-844-4200



Installation Instructions

Metal Work Series 70
Pneumatic Valves with Compact Manifold

