





If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Automation Direct.com Tech Support at 770-844-4200

FOR DC CONNECTIONS, CONNECTOR MAY OR



STAND ALONE INSTALLATION

(AFR2 SERIES FILTER -REGULATOR SHOWN)

NOTES:

ALL FILTERS AND LUBRICATORS MUST BE MOUNTED VERTICALLY WITH BOWLS DOWN.

AR2 SERIES REGULATOR ALONE CAN BE MOUNTED WITH KNOB DOWN, MOVE GAUGE TO OPPOSITE SIDE MAINTAIN LEFT TO RIGHT FLOW DIRECTION

NOTE FLOW DIRECTION ARROW WHEN INSTALLING

REPLACEABLE FILTER ELEMENT

PULL DOWN TAB & TWIST BOWL TO RELEASE

SERIES DRAIN PORT

2 M5X0.8

3 ØG1/4

4 ØG1/4

6 ØG1/4



FILTER RETAINER

- USE HEX WRENCH TO REMOVE
FOR FILTER REPLACEMENT
(AFE SERIES FILTER ELEMENT)

INCLUDED

DRAIN:
IT IS RECOMMENDED TO PIPE DRAIN
PORT TO APPROPRIATE DRAIN, ESPECIALLY
FILTERS WITH AUTO-DRAIN FEATURE