

Table of Contents

Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
Contents of the Manual	1-2
Supplemental Manuals	1-2
Technical Assistance	1-2
Chapters	1-3
Appendices	1-3
OP-1500 and OP-1510 Overview	1-4
Plan your System	1-4
General Panel Information	1-5
About the Pushbuttons	1-5
LCD Display Window	1-6
Keypad Entry	1-6
Annunciator Lamps	1-6
Back-Panel Layout	1-7
Serial Communications Port	1-7
Power Receptacle	1-7
Address Block	1-7
Access the Back Panel	1-7
Frequently Asked Questions	1-8

Chapter 2: Installation and Specifications

Preparing Panel Labels	2-2
Labeling the Lamps and Pushbuttons	2-2
Creating and Installing the labels	2-2
Template for Creating Labels	2-3
Dimensions for Mounting	2-4
Panel Specifications	2-5
Physical Specifications	2-5
Environmental Specifications	2-5
Operating Specifications	2-5
Connecting a Power Supply	2-6
Power Supply Connections	2-6
Multi-Panel Power Supply connection	2-6
Preparing the Panel for Configuration	2-7
Selecting Configuration Mode	2-7
Configuration Cable	2-7
Preparing the Panel for Communications	2-8
Assigning an Address	2-8
How to Set the Address	2-8
OP-9001 Multi-panel Configurations	2-8
The Termination Resistor	2-8
Choosing the Proper Connecting Cable	2-9

Connecting Cable Details	2-10
Connecting Cable	2-10
 Chapter 3: Understanding the Features	
Learning the Features	3-2
Status and Control Registers	3-3
Status and Control Register Overview	3-3
Bit Level Access	3-3
Status and Control Register Definition	3-4
Message and Menu Operations	3-5
Operator Panel	3-5
Messages	3-5
Static Messages	3-5
Dynamic Messages	3-5
Interactive Messages	3-5
Displaying Messages	3-6
Static Message Operation	3-6
Static Display	3-6
Dynamic Message Operation	3-7
Dynamic Message Top Line	3-8
Dynamic Message Bottom Line	3-9
Interactive Message Operations	3-10
Numeric keypad Entry	3-10
Arrow Adjustment Entry	3-10
Interactive Message Top Line	3-11
Interactive Message Bottom Line	3-12
Status and Control Bits used with Interactive Messages	3-13
Using the Data Available and Data Acknowledge Bits	3-13
Menu and Sub-Menus (OP-1510 Only)	3-14
Menu Items	3-14
Menu Operation	3-15
Using the Menu bits	3-16
Using Menu and Function Select bits	3-16
Pushbuttons and Lamps	3-17
Pushbutton Operation	3-17
Lamp Operation	3-17
Pushbutton Example	3-18
Pushbuttons Using Direct Access to Status Register bits	3-18
Pushbutton LEDs	3-18
Lamp Example	3-19
Lamp Flash	3-19
Memory Mapping Process	3-20
OP Base Register Memory Definition	3-20
Operator Panel Base Memory	3-20
DirectLOGIC User Memory Overview	3-22
Mapping Operation	3-23
Mapping Example (PLCDirect and Compatibles)	3-23
DL105/DL205/ DL405	3-23
DL105/DL205/ DL405	3-24

Mapping Example (PLC Direct DL305)	3–25
DL305 Family	3–25
DL305 (DL330/DL340 Only)	3–25
DL305 Only (DL330/DL340 Only)	3–26

Chapter 4: Configuring Your Operator Panel

Preparing for Configuration	4–2
Configuration	4–2
OPEditor Software	4–2
More about the OPEditor	4–3
OPEditor Documentation	4–3
System Requirements	4–3
How to Configure Your Panel	4–4
Step 1	4–4
Step 2	4–4
Step 3	4–4
Step 4	4–4
Step 5	4–5
Step 6	4–6
Step 7	4–6
Step 8	4–6
Step 9	4–6
Step 10	4–6

Chapter 5: Maintenance and Troubleshooting

Troubleshooting the OP-1500/1510 Panels	5–2
Troubleshooting	5–2
Panel Configuration Problems	5–2
Panel to PLC Communications	5–3
Allen Bradley Panel to PLC Communications	5–4

Appendix A: Application Worksheet

Application Worksheet Example	A–2
Application Worksheet Form	A–5

Appendix B: Application Examples

Example Scenario	B–2
DL105/DL205/DL350/DL405 Example	B–3

Appendix C: Application Examples

Example Senario	C-2
DL305 (DL330/DL340 Only) Example	C-3

Appendix D: Application Examples

Example Senario	D-2
Allen Bradley Example	D-3
