

# Table of Contents

---

## Chapter 1: Getting Started

<b>Introduction</b> .....	<b>1-2</b>
The Purpose of this Manual .....	1-2
Supplemental Manuals .....	1-2
Technical Support .....	1-2
Chapters .....	1-3
Appendices .....	1-3
<b>Conventions Used</b> .....	<b>1-3</b>
Key Topics for Each Chapter .....	1-3
<b>OP-440 Overview</b> .....	<b>1-4</b>
Plan your System .....	1-4
General Panel Information .....	1-4
LCD Display Window .....	1-4
Back-Panel Layout .....	1-5
Serial Communications Port .....	1-5
Power Receptacle .....	1-5
<b>Frequently Asked Questions</b> .....	<b>1-6</b>

## Chapter 2: Installation and Specifications

<b>Dimensions for Mounting</b> .....	<b>2-2</b>
<b>Panel Specifications</b> .....	<b>2-3</b>
Physical Specifications .....	2-3
Environmental Specifications .....	2-3
Operating Specifications .....	2-3
<b>Power Supply Connections</b> .....	<b>2-4</b>
Power Supply Connections .....	2-5
<b>Connecting the Configuration Cable</b> .....	<b>2-5</b>
Configuration Cable .....	2-5
<b>Selecting a Communications Cable</b> .....	<b>2-6</b>
<b>Communications Cable Details</b> .....	<b>2-7</b>
OP400 Series Communications Cables .....	2-7

## Chapter 3: Understanding the Features

<b>Learning the Features</b> .....	<b>3-2</b>
<b>PLC Registers</b> .....	<b>3-3</b>
Register Overview .....	3-3
Register Definition .....	3-4
<b>Messages</b> .....	<b>3-5</b>
Displaying Messages on the LCD Screen .....	3-5
Static Messages .....	3-5
Dynamic Messages .....	3-5
<b>Displaying Messages</b> .....	<b>3-6</b>

---

Static Message Operation .....	3-6
Static Display .....	3-6
Dynamic Message Operation .....	3-7
Dynamic Message Top Line .....	3-8
Dynamic Message Third Line .....	3-8
Displaying Data With a Decimal Point .....	3-9
Displaying BCD and Binary Numbers .....	3-10
Displaying BCD Double Numbers .....	3-10
Displaying Floating Point Numbers .....	3-11
<b>Memory Mapping Process .....</b>	<b>3-12</b>
OP Base Register Memory Definition .....	3-12
Operator Panel Base Memory .....	3-12
<b>DirectLOGIC User Memory Overview .....</b>	<b>3-15</b>

## Chapter 4: Configuring Your Operator Panel

<b>Preparing for Configuration .....</b>	<b>4-2</b>
OP-WINEDIT Software .....	4-2
More about OP-WINEDIT .....	4-2
HELP Screens .....	4-2
Application Worksheets .....	4-3
Computer System Requirements .....	4-3
<b>How to Configure Your Panel .....</b>	<b>4-3</b>

## Chapter 5: Programming Examples

<b>Examples Using DirectLogic PLCs .....</b>	<b>5-2</b>
Register Usage .....	5-2
<b>Examples Using DL05, DL105, DL205, D3-350 and DL405 .....</b>	<b>5-3</b>
Defining the Status Register .....	5-3
Displaying Messages .....	5-4
Displaying Binary Numbers .....	5-5
Displaying BCD Double Numbers .....	5-6
Displaying Floating Point Numbers Example 1 .....	5-7
Displaying Floating Point Numbers Example 2 .....	5-8
<b>Example Using D3-330/340 .....</b>	<b>5-9</b>
Defining the Status Register .....	5-9
<b>Examples Using Allen-Bradley SLC 5/03, 5/04 and Micrologix .....</b>	<b>5-10</b>
Interfacing to A-B Memory .....	5-10
Displaying Floating Point Numbers .....	5-10
Displaying BCD Numbers .....	5-10
Displaying Binary Numbers .....	5-11
<b>Troubleshooting the OP-440 Panels .....</b>	<b>5-12</b>
Troubleshooting .....	5-12
Power .....	5-12
Supply Problems .....	5-12
Configuration .....	5-12
Problems .....	5-12
Communication .....	5-12
Problems .....	5-12
Getting Help .....	5-12

---

## **Appendix A: Worksheets**

### **Index**

---