

Table of Contents

| | |
|-----------------------------------------------------------------|-----------|
| Introduction | * |
| OP-609 Combination Panel | 1 |
| General Overview | 1 |
| Applications | 1 |
| Features | 1 |
| Configuration Options | 2 |
| PLC Stand Alone | 2 |
| PLC Multi Modules | 2 |
| Use With A PLC | 3 |
| Memory Mapping | 3 |
| Configuration | 3 |
| Reading Pushbutton Status | 4 |
| Turning On a Lamp | 4 |
| Flashing A lamp | 4 |
| Turning On the Insert Indicator Light | 4 |
| Flashing An Insert LED | 4 |
| Force Commands | 4 |
| Examples of Use with A PLC<i>Direct</i> PLC | 5 |
| Defining the Base Register Address | 5 |
| Turning On a Lamp | 5 |
| Flashing a Lamp | 5 |
| Using a Pushbutton | 5 |
| Lighting an Inset LED | 6 |
| Flashing an Inset LED | 6 |
| Forcing Button Status | 7 |
| Examples of Use with an Allen-Bradley PLC | 8 |
| Interfacing to A-B Memory | 8 |
| Turning On a Lamp | 8 |
| Flashing a Lamp | 8 |
| Using a Pushbutton | 8 |
| Lighting an Inset LED | 9 |
| Flashing an Inset LED | 9 |
| Forcing Button Status | 10 |
| Set Up and Interconnect | 11 |
| Legending the Lamps and Buttons | 11 |
| Lamp Colors | 11 |
| Configuration | 12 |
| Configuration Selections | 12 |
| Single Panel PLC Based Systems | 12 |
| Multi Panel PLC Applications (Uses Communications Master) | 12 |
| Addressing | 13 |
| Connection to the System | 14 |
| Connection to a Computer or PLC | 14 |
| Serial Connection to Communications Master | 14 |
| Termination | 14 |
| Power | 14 |

| | |
|--------------------------------------------------------------------------------|------------|
| Label Templates | 15 |
| Specifications | 16 |
| Physical | 16 |
| Electrical | 16 |
| Communications | 16 |
| Communications Failure Operation | 16 |
| Panel Mounting Dimensions | 16 |
| Appendix A, Example Programs | A-1 |
| Understanding the Example Programs | A-2 |
| Software Requirements | A-2 |
| 9 Steps to Using the Example Programs | A-3 |
| Step 1: Power Supply Connections | A-3 |
| Step 1A: Multi-Panel Power Supply Connections (Optional) | A-3 |
| Step 2: Selecting Configuration Mode: Setting the OP-Panel DIP Switches | A-4 |
| Step 3: Selecting Cables | A-4 |
| Choosing Your Connecting Cables | A-5 |
| Connecting Cable Details | A-6 |
| Step 4: Connecting Configuration Cable OP–ACBL–1 | A-7 |
| Step 5: Installing Example Programs on Your Personal Computer Hard Drive | A-7 |
| Step 6: Loading OP-WINEDIT Example Program into the OP-Panel | A-8 |
| Step 7: Setting the OP-Panel DIP Switch Positions for Program/Run Mode | A-9 |
| Step 8: Loading DirectSOFT Example Program into the PLC | A-9 |
| Step 9: Connecting the OP-Panel to the PLC and Running the Program | A-9 |
| Running the OP-609 Example Program | A-10 |
| OP-9001 Multi-Panel Configurations | A-11 |
| Appendix B, Troubleshooting the OP-609 | B-1 |
| Troubleshooting the OP-609 Panel | B-2 |
| Troubleshooting | B-2 |
| Panel Configuration Problems | B-2 |
| Panel to PLC Communications Problems | B-3 |
| Allen-Bradley Panel to PLC Communications Problems | B-4 |