



OPT2168 OPT2169

Reflex Sensors with Background Suppression



Operating Instructions

Translation of the Original Operating Instruction Subject to change without notice Available as PDF version only Version: 1.0.0 Status: 16.11.2020 www.wenglor.com

Table of Contents

1.	General	3
	1.1 Information Concerning these Instructions	3
	1.2 Explanations of Symbols	
	1.3 Limitation of Liability	
	1.4 Copyrights	4
2.	For Your Safety	5
	2.1 Use for Intended Purpose	5
	2.2 Use for Other than the Intended Purpose	
	2.3 Personnel Qualifications	
	2.4 Modification of Products	
	2.5 General Safety Precautions	
	2.6 Laser/LED Warnings	
	2.7 Approvals and protection class	
3.	Technical Data	
	3.1 Technical Data	
	3.1.1 Spot Diameter	
	3.1.2 Switching Distance Deviation	
	3.2 Layout 3.3 Control Panel	
	3.4 Scope of Delivery	
4.	Transport and Storage	
	4.1 Transport 4.2 Storage	
_	-	
5.	Installation and Electrical Connection	
	5.1 Installation 5.2 Electrical Connection	
	5.3 Diagnostics	-
_	-	
6.	Settings	
	6.1 Object Detection Directly in Front of a Background or an Undersurface	
	6.2 Detection of Objects Without Interfering Background	
7.	IO-Link	.15
8.	Maintenance Instructions	.16
9.	Proper Disposal	.16
10	Appendix	
10.	10.1 List of Abbreviations	
	10.2 Change Index, Operating Instructions	
	10.3 EU Declaration of Conformity	
		-



1. General

1.1 Information Concerning these Instructions

- These instructions apply to the products with ID codes OPT2168 and OPT2169.
- They make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- · Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change. The current version can be found at www.automationdirect.com in the product's separate download area.



NOTE!

The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

1.2 Explanations of Symbols

- Safety precautions and warnings are emphasized by means of symbols and attention-getting words
- · Safe use of the product is only possible if these safety precautions and warnings are adhered to

The safety precautions and warnings are laid out in accordance with the following principle:



Attention-Getting Word! Type and Source of Danger!

Possible consequences in the event that the hazard is disregarded.

• Measures for averting the hazard.

The meanings of the attention-getting words, as well as the scope of the associated hazards, are listed below.

	DANGER! This word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.
	WARNING! This word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.
	CAUTION! This word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	ATTENTION! This word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.
i	NOTE! A note draws attention to useful tips and suggestions, as well as information regarding efficient, error-free use.

1.3 Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art and applicable standards and guidelines. Subject to change without notice.
- A valid declaration of conformity can be accessed at www.automationdirect.com in the product's separate download area.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as "wenglor") excludes all liability in the event of:
 - · Non-compliance with the instructions
 - · Use of the product for purposes other than those intended
 - · Use by untrained personnel
 - · Use of unapproved replacement parts
 - · Unapproved modification of products
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating
 instructions, unless wenglor was verifiably aware of such errors at the point in time at which the operating
 instructions were prepared.

1.4 Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.



2. For Your Safety

2.1 Use for Intended Purpose

The product is based on the following functional principle:

Reflex Sensors with Background Suppression

Reflex sensors with background suppression analyze the light reflected from objects. As these sensors work according to the principle of angular measurement, the color, shape and surface characteristics of the object have almost no influence on the detection range. Even dark objects can be reliably detected against a bright background. The output is switched as soon as an object passes the selected range.

This product can be used in the following industry sectors:

- Special machinery manufacturing
 Consumer goods industry
- Heavy machinery manufacturing
- Logistics
- Automotive industry
- Food industry
- Packaging industry
- Pharmaceuticals industry
- · Plastics industry
- Woodworking industry

- Paper industry
 - Electronics industry
 - · Glass industry
 - Steel industry
 - Aviation industry
 - · Chemicals industry
 - Alternative energy
 - Raw materials extraction

2.2 Use for Other than the Intended Purpose

- Not a safety component in accordance with 2006/42/EC (Machinery Directive)
- The product is not suitable for use in potentially explosive atmospheres.
- The product may only be used with accessories supplied or approved by wenglor, or combined with approved products. A list of approved accessories and combination products can be accessed at www.automationdirect.com on the product detail page.

DANGER!

Risk of personal injury or property damage in case of use for other than the intended purpose!

Use for other than the intended purpose may lead to hazardous situations.

Observe instructions regarding use for intended purpose.

2.3 Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel must have uninterrupted access to the operating instructions.

DANGER!

Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!

Personal injury and damage to equipment may occur.

• Adequate training and qualification of personnel.

2.4 Modification of Products

DANGER!



Risk of personal injury or property damage if the product is modified!

Personal injury and damage to equipment may occur. Non-observance may result in loss of the CE marking and the guarantee may be rendered null and void. • Modification of the product is impermissible.

2.5 General Safety Precautions

NOTE!

• These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.



- In the event of possible changes, the respectively current version of the operating instructions can be accessed at www.automationdirect.com in the product's download area.
- · Read the operating instructions carefully before using the product.
- Protect the sensor against contamination and mechanical influences.

2.6 Laser/LED Warnings

The respective laser class or LED group is listed in the product's technical data.

LASER CLASS 1 EN 60825-1:2014

Laser Class 1 (EN 60825-1)

Applicable standards and safety regulations must be observed.



Laser Class 2 (EN 60825-1)

Applicable standards and safety regulations must be observed. The enclosed laser warning labels must be attached and visible at all time. Do not stare into beam.



2.7 Approvals and protection class



3. Technical Data

3.1 Technical Data

Optical Data		
Service life (ambient temp. = +25 °C)	100000 h	
Max. permissible ambient light	10000 Lux	
Electrical Data		
Supply power	1030 V DC	
IO-Link supply voltage	1830 V DC	
	-4060 °C	
Switching output voltage drop	< 2 V	
Switching output switching current	100 mA	
Switching output residual current	< 50 µA	
Short-circuit protection	Yes	
Reverse polarity protected	Yes	
Overload-proof	Yes	
Lockable	Yes	
Interface	IO-Link	
IO-Link version	1.1	
Protection class	III	
Mechanical Data		
Setting method	Potentiometer	
Housing material	Plastic	
Degree of protection	IP67/IP68	
Lens cover	PMMA	

Technical	Order Number Data	OPT2168	OPT2169	
Range		150 mm		
Adjustable	Range	3015	50 mm	
Switching	Hysteresis	<10	0 %	
Light Sour	ce	Blue	Light	
Laser Clas	s (EN 60825-1)	-	-	
Spot Diam	eter	see Ta	able 1	
Current co	nsumption	< 20) mA	
Switching	frequency			
Response	time			
Switching (Interferen	frequency ce-free-Mode)			
Response (Interferen	time ce-free-Mode)			
Temperatu	ire drift	< 5 %		
Temperatu	ire range	−40…60 °C		
Setting met	hod	Potentiometer		
	PNP	×		
	NPN		×	
Output function	NC, NO antivalent	×	×	
	NO			
	NC			
Connection		M8	×1	
Connectio	n diagram No.	215	213	
Suitable mounting technology No.			7	

3.1.1 Spot Diameter


Range	50 mm	100 mm	150 mm
Spot diameter	5 mm	7 mm	10 mm

Table 1



3.1.2 Switching Distance Deviation


Typical characteristic curve based on Kodak white (90 % remission).

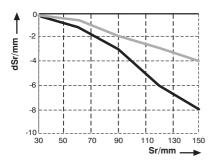




3.2 Layout

OPT2168, OPT2169

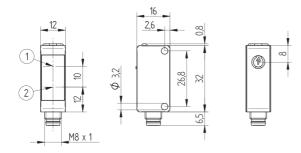

3.3 Control Panel

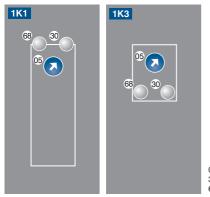

05 = switching distance adjuster 30 = switching status indicator / contamination warning 68 = supply power indicator

3.4 Scope of Delivery

- Sensor
- Safety precautions
- Laser warning label (for Class 2)
- Mounting-Set 01



4. Transport and Storage

4.1 Transport

Upon receipt of shipment, the goods must be inspected for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device, making reference to damage in transit.

4.2 Storage

The following points must be taken into condition with regard to storage:

- Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- · Protect the product against mechanical impacts.
- · Protect the product against exposure to direct sunlight.



ATTENTION!

Risk of property damage in case of improper storage!

The product may be damaged.

· Storage instructions must be complied with.

5. Installation and Electrical Connection

5.1 Installation

- Protect the product from contamination during installation.
- Observe all applicable electrical and mechanical regulations, standards, and safety rules.
- Protect the product against mechanical influences.
- Make sure that the sensor is mounted in a mechanically secure fashion.
- Specified torque values must be complied with (see section "3. Technical Data", page 7).

ATTENTION!

Risk of property damage in case of improper installation!

The product may be damaged. • Installation instructions must be complied with.



CAUTION!


Risk of personal injury or property damage during installation!

 
Personal injury and damage to the product may occur.

• A safe installation environment must be assured.



5.2 Electrical Connection

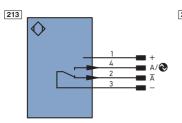



Leaend

Legen	d		PT	Platinum measuring resistor	ENAR5422	Encoder A/Ā (TTL)
+	Supply Voltage +		nc	not connected	ENBRS422	Encoder B/B (TTL)
-	Supply Voltage 0 V		U	Test Input	ENA	Encoder A
~	Supply Voltage (AC Voltage)		Ū	Test Input inverted	ENв	Encoder B
А	Switching Output	(NO)	W	Trigger Input	Amin	Digital output MIN
Ā	Switching Output	(NC)	W -	Ground for the Trigger Input	Амах	Digital output MAX
V	Contamination/Error Output	(NO)	0	Analog Output	Аок	Digital output OK
V	Contamination/Error Output	(NC)	0-	Ground for the Analog Output	SY In	Synchronization In
E	Input (analog or digital)		BZ	Block Discharge	SY OUT	Synchronization OUT
Т	Teach Input		Awv	Valve Output	OLT	Brightness output
Z	Time Delay (activation)		а	Valve Control Output +	М	Maintenance
S	Shielding		b	Valve Control Output 0 V	rsv	reserved
RxD	Interface Receive Path		SY	Synchronization	Wire Co	olors according to IEC 60757
TxD	Interface Send Path		SY-	Ground for the Synchronization	BK	Black
RDY	Ready		E+	Receiver-Line	BN	Brown
GND	Ground		S+	Emitter-Line	RD	Red
CL	Clock		÷	Grounding	OG	Orange
E/A	Output/Input programmable		SnR	Switching Distance Reduction	YE	Yellow
۲	IO -Link		Rx + / -	Ethernet Receive Path	GN	Green
PoE	Power over Ethernet		Tx+/-	Ethernet Send Path	BU	Blue
IN	Safety Input		Bus	Interfaces-Bus A(+)/B(-)	VT	Violet
OSSD	Safety Output		La	Emitted Light disengageable	GY	Grey
Signal	Signal Output		Mag	Magnet activation	WH	White
BI_D+/-	Ethernet Gigabit bidirect. data	a line (A-D)	RES	Input confirmation	PK	Pink
FNnes422	Encoder 0-pulse 0-0 (TTL)	. /	EDM	Contactor Monitoring	GNYE	Green/Yellow



DANGER!

Risk of personal injury or property damage due to electric current!


Voltage conducting parts may cause personal injury or damage to equipment. • The electric device may only be connected by appropriately qualified personnel.

5.3 Diagnostics

Causes for Triggering the Contamination Warning (blinking LED):

Display LED	Diagnosis/Cause	Elimination	
	Contamination	Carefully clean the optic cover with a cloth.	
Continuous blinking	Aged emitter diode	Replace the sensor.	
at approx. 2.5 Hz	Unreliable working range	Increase the sensor's switching distance.Reduce distance between sensor and object.	
	Short-circuit	Check electrical wiring and eliminate the short-circuit.	
Continuous blinking at approx. 5 Hz	Over-temperature	Disconnect the sensor from supply power and allow it to cool down.	
	Hardware error	Replace the sensor.	

Contamination Warning Flowcharts

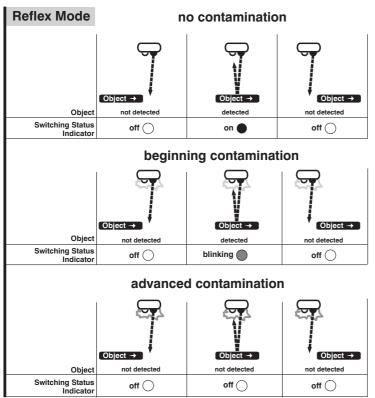



Required action in case of fault:

NOTE!

- Shut down the machine.
- Analyze and eliminate the cause of error with the help of the diagnostics information.
- If the error cannot be eliminated, please contact AutomationDirect's support department.
- Do not operate in case of indeterminate malfunctioning.
- The machine must be shut down if the error cannot be unequivocally clarified or reliably eliminated.



DANGER!

Risk of personal injury or property damage in case of non-compliance!

The system's safety function is disabled. Personal injury and damage to equipment. • Required action as specified in case of fault.

6. Settings

6.1 Object Detection Directly in Front of a Background or an Undersurface

- Adjust and securely mount the sensor such that the spot strikes the object to be detected at a right angle.
- Turn the potentiometer all the way to the right.
- Remove the object and slowly turn the potentiometer back until the output is switched. The background or the undersurface is now suppressed.
- Put the object back under the spot and check to determine whether or not the sensor is activated again.

6.2 Detection of Objects Without Interfering Background

- Adjust and securely mount the sensor such that the spot strikes the object to be detected.
- Turn the potentiometer all the way to the left.
- Turn up the potentiometer up until activation occurs and, if required, turn it up a bit further for increased switching reliability.

7. IO-Link

Further settings are possible via the IO-Link interface. The IODD can be found at www.automationdirect.com in the product's download area.

8. Maintenance Instructions

NOTE!



- This wenglor sensor is maintenance-free.
- Cleaning and inspection of the plug connections at regular intervals are advisable.
- Do not clean the sensor with solvents or cleansers which could damage the product.
- The product must be protected against contamination during initial start-up.

9. Proper Disposal

wenglor sensoric GmbH does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.

10. Appendix

10.1 List of Abbreviations

Abbreviation	Meaning
Tu	Ambient temperature
Ub	Supply voltage
IODD	IO Device Description
MTTFd	Mean Time to Dangerous Failure

10.2 Change Index, Operating Instructions

Version	Date	Description/Change
1.0.0	16.11.20	Initial version of the operating instructions

10.3 EU Declaration of Conformity

The EU declaration of conformity can be found on our website at www.automationdirect.com in the product's download area.