



# TABLE OF CONTENTS

---

## In This Manual

|  |            |
|--|------------|
| User Caution .....   | ii         |
| Publication History.....   | v          |
| <b>Chapter 1 - Getting Started.....</b>                            | <b>1-1</b> |
| Introduction .....   | 1-2        |
| Intended Use of This Product .....                                 | 1-2        |
| Purpose of this Manual .....                                       | 1-3        |
| Important Online Resources .....                                   | 1-3        |
| Conventions Used.....  | 1-4        |
| Key Topics for Each Chapter.....                                   | 1-4        |
| Install Programming Software .....                                 | 1-5        |
| Mounting Hardware.....   | 1-8        |
| Power the System .....   | 1-9        |
| <b>Chapter 2 - Specifications .....</b>                            | <b>2-1</b> |
| Overview .....   | 2-2        |
| Right Side Expansion - Productivity1000 Input/output Modules ..... | 2-2        |
| Left Side Expansion - Arduino MKR-compatible Shields .....         | 2-2        |
| P1AM-100 Arduino Compatible CPU.....                               | 2-3        |
| P1AM-100 Module Faceplate Layout.....                              | 2-4        |
| P1AM-100 MicroB USB Programming Port .....                         | 2-5        |
| microSD Slot.....  | 2-6        |
| P1AM-100 CPU Headers.....  | 2-7        |

## Table of Contents

---

|   |             |
|---|-------------|
| <b>P1AM-200 Arduino Compatible CPU .....</b>                        | <b>2-8</b>  |
| P1AM-200 Module Faceplate Layout .....                              | 2-9         |
| P1AM-200 MicroB USB Programming Port .....                          | 2-10        |
| microSD Slot.....   | 2-11        |
| P1AM-200 CPU Headers.....   | 2-12        |
| Powering Your ProductivityOpen System .....                         | 2-13        |
| <b>AutomationDirect Shields.....</b>                                | <b>2-14</b> |
| Ethernet Communications Shield.....                                 | 2-14        |
| Serial Communications Shield.....                                   | 2-16        |
| Header Pin Breakout Module .....                                    | 2-17        |
| <b>Productivity I/O Modules Overview .....</b>                      | <b>2-19</b> |
| <br><b>Chapter 3 - Installation and Wiring .....</b>                | <b>3-1</b>  |
| <b>Safety Guidelines .....</b>                                      | <b>3-3</b>  |
| Plan for Safety.....  | 3-3         |
| Three Levels of Protection .....                                    | 3-4         |
| System Power Disconnect.....  | 3-4         |
| Emergency Stop Circuits.....  | 3-5         |
| <b>Introduction to the ProductivityOpen Mechanical Design .....</b> | <b>3-6</b>  |
| Typical P1AM-100.....   | 3-6         |
| <b>Dimensions and Installation .....</b>                            | <b>3-7</b>  |
| <b>Basic Dimensions .....</b>                                       | <b>3-9</b>  |
| <b>Mounting Guidelines .....</b>                                    | <b>3-12</b> |
| Enclosures.....   | 3-12        |
| Mounting Position.....  | 3-12        |
| Using Mounting Rails.....   | 3-12        |
| Mounting Clearances .....   | 3-13        |
| Temperature Considerations .....                                    | 3-13        |
| Power Considerations .....  | 3-13        |
| Grounding .....   | 3-14        |
| Agency Approvals .....  | 3-14        |
| DIN Rail Mounting P1AM-100 System .....                             | 3-15        |
| Surface Mounting P1AM-100 System .....                              | 3-15        |
| Connecting the I/O Modules .....                                    | 3-16        |

|  |             |
|--|-------------|
| <b>Wiring Guidelines .....</b>   | <b>3-17</b> |
| Power Supply Wiring.....   | 3-17        |
| Grounding .....  | 3-17        |
| Fuse Protection.....   | 3-18        |
| <b>I/O Module Wiring Options.....</b>                                  | <b>3-19</b> |
| Hand Wiring System.....  | 3-19        |
| ZIPLink Wiring System.....   | 3-20        |
| Terminal Block With Pigtail Cable .....                                | 3-20        |
| Input and Output Module ZIPLink Selections .....                       | 3-21        |
| Analog Modules ZIPLink Selections.....                                 | 3-22        |
| Removable Terminal Blocks (Optional) .....                             | 3-23        |
| Terminal Block Installation .....                                      | 3-24        |
| Terminal Block Removal.....  | 3-25        |
| Planning the I/O Wiring Routes.....                                    | 3-25        |
| <b>System Wiring Strategies.....</b>                                   | <b>3-26</b> |
| CPU Isolation Boundaries.....  | 3-26        |
| Sinking/Sourcing Concepts .....  | 3-27        |
| I/O "Common Terminal" Concepts .....                                   | 3-28        |
| DC Input Wiring Methods.....   | 3-29        |
| DC Output Wiring Methods.....  | 3-29        |
| CPU DC Sinking Output to Sinking Load Device.....                      | 3-30        |
| Relay Outputs - Wiring Methods.....                                    | 3-31        |
| Types of Additional Transient Protection.....                          | 3-34        |
| <b>Appendix A - Security Considerations for Controls Networks.....</b> | <b>A-1</b>  |
| Security Considerations for Control Systems Networks.....              | A-2         |