Output Specifications

Outputs per Module		8		
Operating Voltage Range (Tolerance)	(CE)	6.25 - 24 VDC (-15% / + 20%) 6 - 120 VAC (-15% / + 10%)		
	(UL)	120VAC / 30VDC, 4A / point		
Output type		6 Relays, FORM A (SPST)		
		2 Relays, FORM C (SPDT)		
AC Frequency		47 - 63 Hz		
Maximum Output Current @ Temp		4A / point @ 60°C for both AC and DC		
		2A / point if used with ZIP Link Cable		
Minimum Load Current		5mA @ 5VDC		
Maximum Inrush Current		4A for 10ms		
OFF to ON Response		m 10ms		
ON to OFF Response		m 10ms		
Status Indicators		Logic Side (8 points)		
Commons		8 Isolated (1 point / common)		
External Fuses (user supplied)		6.3A Max		

VAUTOMATIONDIRECT Productivity²⁰⁰⁰



P2-08TRS Relay Output

The P2-08TRS high-current isolated relay output module provides eight 4A surge-protected outputs for extended relay life. Module offers both normally open and normally closed relay contacts for use with the Productivity2000 system.

Output Specifications	. 1
Module Installation	.2
QR Code	.2
Hot Swap Information	.2
Wiring Options	.3
Wiring Diagram and Schematic	.3
Warning	.4
Typical Relay Life	
Removable Terminal Block	
Specifications	.4
General Specifications	.4

Document Name	Edition/Revision	Date
P2-08TRS-DS	2nd Ed.	9/5/2019

Copyright 2016, AutomationDirect.com Incorporated/All Rights Reserved Worldwide

Terminal Block sold separately, (see wiring options on page 3).

Warranty: Thirty-day money-back guarantee. Two-year limited replacement. (See www.productivity2000.com for details).

Module Installation

WARNING: Do not apply field power until the following steps are completed. See hot-swapping procedure for exceptions.

Step One: Align module catch with base slot and rotate module into connector.

Step Two: Pull top locking tab toward module face. Click indicates lock is engaged.

2 rotate to seated position 1 Align with slot

Step Three: Attach field wiring using the removable terminal block or *ZIP*Link wiring system.



QR Code




Use any QR Code reader application to display the module's product insert.

Caution: If possible, remove field power prior to proceeding. If not, then **EXTREME** care **MUST** be taken to prevent damage to the module, or even personal injury due to a short circuit from the live terminal block.

Important Hot-Swap Information

The Productivity2000 supports hot-swap! Individual modules can be taken offline, removed, and replaced while the rest of the system continues controlling your process. Before attempting to use the hot-swap feature, be sure to read the hot-swap topic in the programming software's help file or our online documentation at AutomationDirect.com for details on how to plan your installation for use of this powerful feature.


Tech Support 770-844-4200

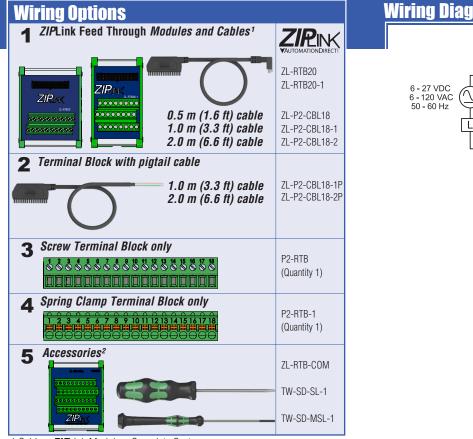

1.Cable + *ZIP*Link Module = Complete System

2. ZL-RTB-COM provides a common connection point for power or ground

Wiring Diagram and Schematic

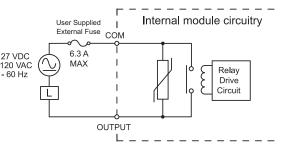

6 - 27 VDC 6 - 120 VAC 50 - 60 Hz NC1 NO1 \sim Ð C1 EIO C2 -L EI⊖∽ NO2 C3 -L FIO NO3 EI⊖|∞ C4 -L EIØ® NO4 -L EIØJ= NC5 C5 Чī NO5 ⊒I⊖I ≓ C6 Чī ∓0B NO6 EIQI C7 - [۶ NO7 C8 Чī WARNING: To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

Typical Relay Life		
Voltage & Type of Load	Operations at 4A Load Current	
30VDC Resistive	100,000	
30VDC Solenoid	100,000	
120VAC Resistive	100,000	
120VAC Solenoid	100,000	

Removable Terminal Block Specifications

Part Number	P2-RTB	P2-RTB-1
Number of Positions	18 Screw Terminals	18 Spring Clamp Terminals
Wire Range	30–16 AWG (0.051–1.31 mm²) Solid / Stranded Conductor 3/64 in. (1.2 mm) Insulation Maximum 1/4 in. (6–7 mm) Strip Length	28–16 AWG (0.081–1.31 mm ²) Solid / Stranded Conductor 3/64 in. (1.2 mm) Insulation Maximum 19/64 in. (7–8 mm) Strip Length
Conductors	"USE COPPER CONDUCTORS, 75°C" or Equivalent.	
Screw Driver Width	0.1 inch (2.5 mm) Maximum*	
Screw Size	M2	N/A
Screw Torque	2.5 lb⋅in (0.28 N⋅m)	N/A

General Specifications

Operating Temperature	0° to 60°C (32° to 140°F),
Storage Temperature	-20° to 70°C (-4° to 158°F)
Humidity	5 to 95% (non-condensing)
Environmental Air	No corrosive gases permitted
Vibration	IEC60068-2-6 (Test Fc)
Shock	IEC60068-2-27 (Test Ea)
Field to Logic Side Isolation	1800VAC applied for 1 second
Insulation Resistance	>10MΩ @ 500VDC
Heat Dissipation	3W
Enclosure Type	Open Equipment
Module Keying to Backplane	Electronic
Module Location	Any I/O slot in a Productivity2000 System.
Field Wiring	Use ZIP Link Wiring System or removable terminal block (not included). See "Wiring Options" on page 3.
EU Directive	See the "EU Directive" topic in the Productivity Suite Help File. Information can also be obtained at: www.productivity2000.com
Connector Type (not included)	18 position removable terminal block
Agency Approvals	UL 61010-1 and UL 61010-2-201 File E139594, Canada and USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010- 2-201 Safety)*

*Meets EMC and Safety requirements. See the D.O.C. for details.

*Recommend Screw Driver TW-SD-MSL-1