


Input Specifications

Inputs per Module	16	
Operating Voltage Range (Tolerance)	CE	100-240 VAC (± 20%)
	UL	100-240 VAC (± 20%)
AC Frequency	47 - 63 Hz	
Input Current (Typical)	8.5mA @ 100VAC (50Hz)	
	10mA @ 100VAC (60Hz)	
	17mA @ 240VAC (50Hz)	
	20mA @ 240VAC (60Hz)	
Maximum Input Current @ Temp	26mA @ 60°C (288VAC)	
Input Impedance	15kΩ (50Hz), 12kΩ (60Hz)	
ON Voltage Level	> 70VAC	
OFF Voltage Level	< 20VAC	
Minimum ON Current	5mA	
Maximum OFF Current	2mA	
OFF to ON Response	< 10ms	
ON to OFF Response	< 25ms	
Status Indicators	Logic side (16 points)	
Commons	2 Isolated for 120V	
	2 Non-Isolated for 240V (external jumper required)	

P2-16NA AC Input

The P2-16NA AC Input Module provides sixteen 100-240 VAC inputs for use with the Productivity2000 system.

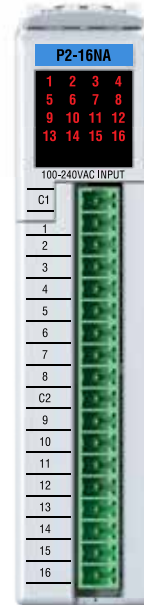

Input Specifications	1
Module Installation	2
QR Code	2
Hot Swap Information.....	2
Wiring Options.....	3
Wiring Diagram and Schematic.....	3
Warning	4
Removable Terminal Block Specifications	4
General Specifications	4

Document Name	Edition/Revision	Date
P2-16NA-DS	1st Ed.	8/15/2014


Terminal Block sold separately, (see wiring options on page 3).

Warranty: Thirty-day money-back guarantee. Two-year limited replacement. (See www.productivity2000.com for details).


Module Installation

WARNING: Do not apply field power until the following steps are completed. See hot-swapping procedure for exceptions.

Step One: Align module catch with base slot and rotate module into connector.

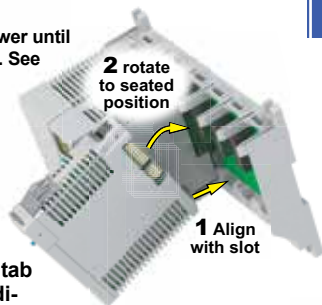

Step Two: Pull top locking tab toward module face. Click indicates lock is engaged.

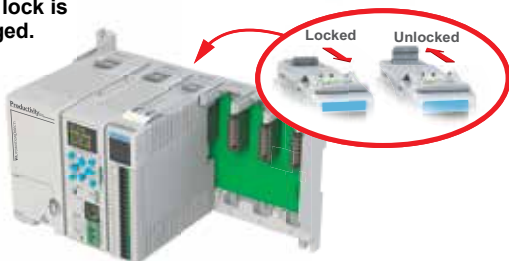

Step Three: Attach field wiring using the removable terminal block or ZIPLink wiring system.



QR Code



Use any QR Code reader application to display the module's product insert.

Caution: *If possible, remove field power prior to proceeding. If not, then **EXTREME** care **MUST** be taken to prevent damage to the module, or even personal injury due to a short circuit from the live terminal block.*

Important Hot-Swap Information

The Productivity2000 supports hot-swap! Individual modules can be taken offline, removed, and replaced while the rest of the system continues controlling your process. Before attempting to use the hot-swap feature, be sure to read the hot-swap topic in the programming software's help file or our online documentation at AutomationDirect.com for details on how to plan your installation for use of this powerful feature.

Wiring Options

1 ZIPLink Connection System Cable + ZIPLink Module = Complete System

ZIPLink pre-wired terminal block cables



0.5m (1.6FT) cable
1.0m (3.3FT) cable
2.0m (6.6FT) cable

ZL-P2-CBL18
ZL-P2-CBL18-1
ZL-P2-CBL18-2



ZIPLink Modules

Feed through

ZL-RTB20



2 Terminal Block with pigtail cable



1.0m (3.3FT) cable
2.0m (6.6FT) cable

ZL-P2-CBL18-1P
ZL-P2-CBL18-2P



3 Screw Terminal Block only





P2-RTB
(Quantity 1)

4 Spring Clamp Terminal Block only



P2-RTB-1
(Quantity 1)

Wiring Diagram and Schematic

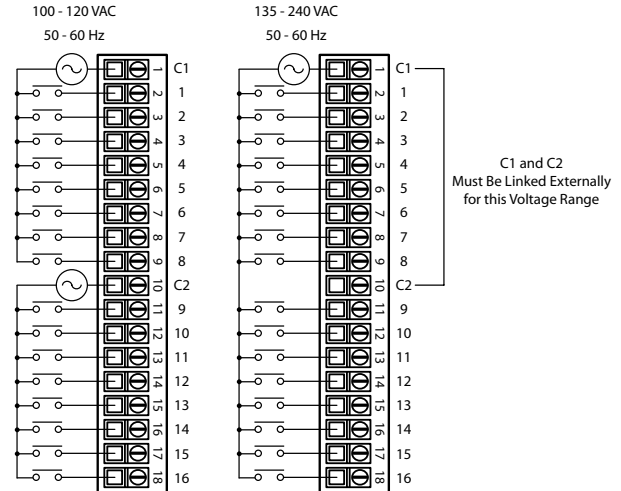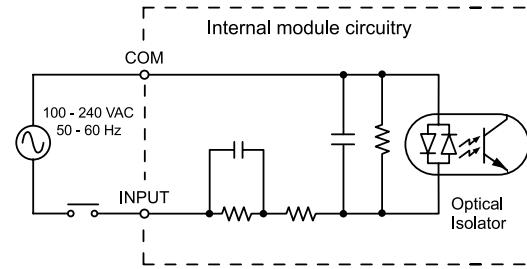

WARNING: To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

General Specifications

Operating Temperature	0° to 60°C (32° to 140°F)
Storage Temperature	-20° to 70°C (-4° to 158°F)
Humidity	5 to 95% (non-condensing)
Environmental Air	No corrosive gases permitted
Vibration	IEC60068-2-6 (Test Fc)
Shock	IEC60068-2-27 (Test Ea)
Field to Logic Side Isolation	1800VAC applied for 1 second
Insulation Resistance	>10MΩ @ 500VDC
Heat Dissipation	600mW
Enclosure Type	Open Equipment
Agency Approvals	UL508 file E139594, Canada & USA CE (EN61131-2*)
Module Keying to Backplane	Electronic
Module Location	Any I/O slot in a Productivity2000 System.
Field Wiring	Use ZIPLink Wiring System or removable terminal block (not included). See "Wiring Options" on page 3.
EU Directive	See the "EU Directive" topic in the Productivity2000 Help File. Information can also be obtained at: www.productivity2000.com
Connector Type (not included)	18 position removable terminal block
Weight	90g (3.2oz)

*Meets EMC and Safety requirements. See the D.O.C. for details.

Removable Terminal Block Specifications

Part Number	P2-RTB	P2-RTB-1
Number of Positions	18 Screw Terminals	18 Spring Clamp Terminals
Wire Range	30-16 AWG (0.051 - 1.31 mm ²) Solid / Stranded Conductor 3/64 in. (1.2 mm) Insulation Maximum 1/4 in. (6-7 mm) Strip Length	28-16 AWG (0.081 - 1.31 mm ²) Solid / Stranded Conductor 3/64 in. (1.2 mm) Insulation Maximum 19/64 in. (7-8 mm) Strip Length
Conductors	"USE COPPER CONDUCTORS, 75°C" or Equivalent.	
Screw Driver Width	1/8 inch (3.8 mm) Maximum	
Screw Size	M2	N/A
Screw Torque	2.5 lb-in (0.28 N·m)	N/A