

TABLE OF CONTENTS



Chapter 1 - Getting Started!	1-1
Introduction	1-2
Purpose of this Manual.....	1-2
About Getting Started.....	1-2
Online Help Files and Other Documentation	1-2
Technical Support.....	1-2
Conventions Used	1-3
Key Topics for Each Chapter.....	1-3
Before you begin	1-4
Productivity Suite System Requirements	1-5
Step 1: Install Programming Software	1-6
Step 2: Launch Programming Software	1-10
Online Help.....	1-11
Step 3: Install Hardware	1-12
Step 4: Apply Power to CPU.	1-15
Step 5: Establish PC to CPU Communications	1-16
Step 6: Open/Read Hardware Configuration	1-17
Step 7: Create a Project	1-19
Rung #1.....	1-19
Rung #2	1-23
Step 8: Save Project	1-25
Step 9: Write Project to CPU	1-26
Step 10: Place CPU in RUN Mode	1-27
Step 11: Test the Project Using Monitor Mode	1-28

Table of Contents

Chapter 2 - Specifications	2-1
Overview	2-2
CPU System.....	2-2
P3-03B, P3-05B, P3-08B, P3-11B Bases	2-3
Base Configuration	2-3
P3-01AC and P3-01DC Power Supplies	2-5
No Power Budgeting	2-5
P3-01AC Specifications.....	2-6
P3-01DC Specifications.....	2-7
Power Connections	2-8
Grounding	2-8
Productivity3000[®] CPU Modules	2-9
Productivity[®] 3000 CPU Modules	2-10
P3-550 Specifications (Retired 06/2023)	2-11
LCD Message Display (P3-550).....	2-13
Front Panel LCD Monitoring and Configuration (P3-550)	2-14
P3-550E Specifications	2-15
LCD Message Display (P3-550E)	2-17
Front Panel LCD Monitoring and Configuration (P3-550E).....	2-18
P3-530 Specifications.....	2-19
Battery (Optional).....	2-21
Port Specifications	2-22
USB IN Port P3-550	2-22
P3-550(E)	2-23
P3-530	2-23
Ethernet Port.....	2-23
Remote I/O Port P3-550(E).....	2-23
P3-550(E)	2-24
P3-530	2-24
USB OUT Port.....	2-24
EXP I/O OUT Port.....	2-24
P3-550(E)	2-25
P3-530	2-25
RS-232 Port.....	2-25
RS-485 Port.....	2-26

P3-EX Expansion Module.....2-27
 P3-EX Expansion Module Example2-28
 Port Specifications2-30

Remote Slave Modules2-31
 P3-RS/P3-RX Remote Slave Module Example (P3-550(E) only).....2-32
 P3-RS Remote Slave Module Specifications2-33
 P3-RS Remote Slave Module Front Panel.....2-34
 Status Indicators.....2-34
 LCD Message Display (P3-RS only).....2-35
 P3-RX Remote Slave Module Specifications.....2-36
 P3-RX Remote Slave Module Front Panel.....2-37
 Status Indicators.....2-37
 Setting the Remote Slave Address.....2-38
 Port Specifications2-40
 USB IN Port (P3-RS only).....2-40
 P3-RS2-40
 Remote I/O Port2-41
 P3-RS2-41
 P3-RX.....2-41
 EXP I/O OUT Port.....2-42
 P3-RS2-42
 P3-RX.....2-42
 RS-232 Serial Port2-43
 P3-RS2-43
 P3-RX.....2-43
 RS-485 Serial Port2-44
 P3-RS2-44
 P3-RX.....2-44

I/O Modules Overview2-45

Discrete I/O Modules.....2-46

P3-16SIM Input Simulator2-47

P3-08ND3S Isolated Sinking/Sourcing Input.....2-48
 Wiring Diagrams.....2-50

P3-16ND3 Sinking/Sourcing Input2-51
 Wiring Diagrams.....2-53

Table of Contents

P3-32ND3 Sinking/Sourcing Input	2-54
Wiring Diagrams.....	2-55
P3-64ND3 Sinking/Sourcing Input	2-56
Wiring Diagrams.....	2-57
P3-08NAS AC Isolated Input	2-58
Wiring Diagrams.....	2-60
P3-16NA AC Input	2-61
Wiring Diagrams.....	2-63
P3-08TD1S Sinking Output	2-64
Wiring Diagrams.....	2-66
P3-08TD2S Sourcing Output	2-67
Wiring Diagrams.....	2-69
P3-16TD1 Sinking Output	2-70
Wiring Diagrams.....	2-72
P3-16TD2 Sourcing Output	2-73
Wiring Diagrams.....	2-75
P3-32TD1 Sinking Output	2-76
Wiring Diagrams.....	2-78
P3-32TD2 Sourcing Output	2-79
Wiring Diagrams.....	2-81
P3-64TD1 Sinking Output	2-82
Wiring Diagrams.....	2-84
P3-64TD2 Sourcing Output	2-85
Wiring Diagrams.....	2-87
P3-08TAS Isolated AC Output	2-88
Wiring Diagrams.....	2-90
P3-16TA AC Output	2-91
Wiring Diagrams.....	2-93
P3-08TRS Isolated Relay Output	2-94
Wiring Diagrams.....	2-96
P3-16TR Relay Output	2-97
Wiring Diagrams.....	2-99

P3-08TRS-1 Isolated Relay Output	2-100
Wiring Diagrams.....	2-102
P3-16TD3P Sinking/Sourcing Protected Output.....	2-103
Wiring Diagrams.....	2-105
Chapter 3 - Analog I/O Specifications	3-1
Analog I/O Modules Overview.....	3-2
Analog I/O Modules.....	3-3
P3-04ADS Isolated Analog Input.....	3-4
Wiring Diagrams.....	3-6
Module Configuration	3-8
LCD Panel Display	3-9
P3-08AD Analog Input.....	3-10
Wiring Diagrams.....	3-12
Module Configuration	3-13
LCD Panel Display	3-14
P3-16AD-1 Analog Input	3-15
Wiring Diagrams.....	3-17
Module Configuration	3-18
LCD Panel Display	3-19
P3-16AD-2 Analog Input.....	3-20
Wiring Diagrams.....	3-22
Module Configuration	3-23
LCD Panel Display	3-24
P3-08RTD Analog Input.....	3-25
Wiring Diagrams.....	3-27
Module Configuration	3-28
LCD Panel Display.....	3-29
P3-08THM Analog Input.....	3-30
Wiring Diagrams.....	3-32
Module Configuration	3-33
LCD Panel Display.....	3-34

Table of Contents

P3-04DA Analog Output	3-35
Wiring Diagrams.....	3-37
Configuration Settings.....	3-39
LCD Panel Display.....	3-40
P3-08DA-1 Analog Output	3-41
Wiring Diagrams.....	3-43
Module Configuration	3-44
LCD Panel Display.....	3-45
P3-08DA-2 Analog Output	3-46
Wiring Diagrams.....	3-48
Module Configuration	3-49
LCD Panel Display.....	3-50
P3-06DAS-1 Isolated Analog Output (Retired)	3-51
Wiring Diagrams.....	3-53
Module Configuration	3-54
LCD Panel Display.....	3-55
P3-06DAS-2 Isolated Analog Output	3-56
Wiring Diagrams.....	3-58
Module Configuration	3-59
LCD Panel Display.....	3-60
P3-16DA-1 Analog Output	3-61
Wiring Diagrams.....	3-63
Module Configuration	3-64
LCD Panel Display.....	3-65
P3-16DA-2 Analog Output	3-66
Wiring Diagrams.....	3-68
Module Configuration	3-69
LCD Panel Display.....	3-70
P3-8AD4DA-1 Analog Input/Output	3-71
Wiring Diagrams.....	3-74
Module Configuration	3-75
LCD Panel Display.....	3-76

P3-8AD4DA-2 Analog Input/Output	3-77
Wiring Diagrams.....	3-80
Module Configuration.....	3-81
LCD Panel Display.....	3-82
Chapter 4 - Speciality Modules Specifications	4-1
High-Speed Pulse Input (HSI) Module Overview	4-2
HSI Specifications.....	4-2
HSI LED Indicators.....	4-5
HSI Wiring Examples.....	4-6
High-Speed Output (HSO) Module Overview	4-9
HSO LED Indicators	4-12
HSO Wiring Examples	4-12
High-Speed Module Tester Utility	4-16
P3-SCM Serial Communications Module	4-17
P3-SCM Specifications.....	4-17
P3-SCM LED Indicators.....	4-21
Chapter 5 - Installation and Wiring	5-1
Safety Guidelines	5-2
Plan for Safety.....	5-2
Three Levels of Protection.....	5-3
Orderly System Shutdown	5-3
System Power Disconnect	5-3
Emergency Stop Circuits.....	5-4
Productivity3000[®] Mechanical Design Introduction	5-5
Typical Productivity3000 System.....	5-5
Dimensions and Installation	5-6
Base Dimensions.....	5-6
Mounting Guidelines	5-7
Enclosures.....	5-7
Mounting Position	5-7
Mounting Clearances	5-7
Grounding	5-7

Table of Contents

Temperature Considerations.....	5-7
Power Considerations.....	5-7
Class 1, Division 2 Approval.....	5-9
Agency Approvals.....	5-9
Using Mounting Rails.....	5-10
Installing the Power Supply.....	5-11
Installing the CPU.....	5-12
Installing the I/O Modules.....	5-13
Wiring Guidelines.....	5-14
Wiring to the Power Supply.....	5-14
Grounding.....	5-14
Fuse Protection.....	5-15
I/O Module Wiring Options.....	5-16
ZIPLink Wiring System.....	5-16
Terminal Block With Pigtail Cable.....	5-16
Removable Terminal Blocks (Optional).....	5-20
Terminal Block Removal.....	5-20
System Wiring Strategies.....	5-22
CPU Isolation Boundaries.....	5-22
Sinking/Sourcing Concepts.....	5-23
I/O "Common Terminal" Concepts.....	5-24
DC Input Wiring Methods.....	5-25
DC Output Wiring Methods.....	5-25
Relay Outputs - Wiring Methods.....	5-27
Relay Outputs – Transient Suppression for Inductive Loads in a Control System.....	5-28
Types of Additional Transient Protection.....	5-30
Chapter 6 - Communications.....	6-1
Communications: Capabilities.....	6-3
Communication Ports.....	6-3
Communications: Ethernet.....	6-4
Communications: Remote I/O.....	6-5
Communications: GS Drive Devices.....	6-6

Communications: Modbus RTU 6-8

Communications: Custom Protocol In and Out 6-11

Communications: Connectivity 6-12
 Communication Ports..... 6-12

Communications: Ethernet Port..... 6-13

Communications: Remote I/O Ethernet Port..... 6-14

Communications: USB OUT Port 6-15

Communications: RS-232 Port 6-17

Communications: RS-485 Port 6-18

Communications ASCII and Custom Protocol Functionality 6-19
 ASCII Instructions..... 6-19
 Custom Protocol Instructions..... 6-20

Communications: Ethernet..... 6-22
 TCP and UDP Port Numbers..... 6-22
 IP Addressing and Subnetting 6-22
 PC Setup..... 6-23
 CPU Setup..... 6-24
 TCP Connection Behavior with Modbus TCP and Network Instructions..... 6-25

Communications Modbus Functionality..... 6-26
 Master/Client Function Code and Data Type Support..... 6-26
 Slave/Server Function Code and Data Type Support..... 6-28
 Assigning Modbus Addresses to Tags..... 6-29
 Modbus Options..... 6-32
 Modbus Instructions 6-35
 Network Instructions..... 6-37
 Automatic Poll versus Manual Polling and Interlocking 6-38
 Message Queue..... 6-40

EtherNet/IP for the Productivity Series 6-41
 Terminology Definitions..... 6-41
 Network Layer Chart 6-42
 EtherNet/IP Data..... 6-42
 Class 1 and Class 3 Connections 6-43
 Troubleshooting Tips: 6-49

Table of Contents

Ethernet IP I/O Message Troubleshooting:.....	6-51
Ethernet IP Explicit Message Troubleshooting:	6-51
ProNET	6-52
Custom Protocol over Ethernet Functionality	6-53
Hardware Configuration	6-54
Custom Protocol Ethernet Instruction.....	6-55
Communications: Remote I/O and GS-Drives	6-56
Things To Consider for the design of Remote I/O and GS-Drives	6-56
Configuration of Remote Slaves	6-57
Configuration of GS-Drive Connections	6-60
Communications: Port Configuration.....	6-64
Ethernet Configuration.....	6-65
External Ethernet Port Settings	6-65
Remote Access Configuration	6-67
Local Ethernet Port Settings	6-67
Remote Access Configuration.....	6-67
Serial Configuration.....	6-68
RS-232 and RS-485 Port Settings	6-68
Communications: Error Codes.....	6-72
P3000 EtherNet/IP Error Codes	6-73
Chapter 7 - Maintenance and Troubleshooting	7-1
Hardware Maintenance	7-2
Standard Maintenance.....	7-2
Air Quality Maintenance.....	7-2
CPU Battery Replacement.....	7-2
LCD Display Replacement	7-2
Diagnostics	7-3
Diagnostics	7-3
Critical Errors.....	7-3
Non-Critical Errors.....	7-3
Finding Diagnostic Information.....	7-3
Error Codes.....	7-3

CPU Indicators	7-4
PWR Indicator	7-5
Incorrect Base Power	7-5
Faulty CPU	7-5
Device or Module Causing the Power Supply to Shutdown.....	7-6
Run Indicator	7-7
CPU Indicator	7-7
Communications Problems	7-7
I/O Module Troubleshooting	7-8
Things to Check.....	7-8
Error Codes.....	7-8
Some Quick Steps	7-8
Testing Output Points	7-9
Noise Troubleshooting	7-10
Electrical Noise Problems	7-10
Reducing Electrical Noise	7-10
Run Time vs. Stop Mode Transfer Instruction	7-11
Run Time Transfers.....	7-12
Stop Mode Transfers.....	7-12
Forcing I/O Points	7-14
Advantages of Forces.....	7-14
Enabling Forces.....	7-14
Forcing Tags in Your System.....	7-15
Identifying Forced Values	7-17
Force Value Timing Chart.....	7-18
Appendix A - European Union Directives (CE)	A-1
In This Appendix	A-1
European Union (EU) Directives	A-2
Member Countries	A-2
Applicable Directives	A-2
Compliance	A-2

Table of Contents

General Safety	A-3
Special Installation Manual.....	A-4
Basic EMC Installation Guidelines	A-4
Enclosures.....	A-4
Mains Filter	A-5
Suppression and Fusing.....	A-5
Internal Enclosure Grounding.....	A-5
Equipotential Grounding	A-5
Communications and Shielded Cables.....	A-6
Analog and RS232 Cables.....	A-7
Multidrop Cables	A-7
Shielded Cables Within Enclosures	A-7
Analog Modules and RF Interference.....	A-7
Network Isolation.....	A-8
Items Specific to the Productivity3000®	A-9
Appendix B - Productivity3000® Error Codes.....	B-1
Communications Error Codes	B-2
Module Error Codes	B-3
CPU Error Codes.....	B-5
Project Error Codes.....	B-6
Project Error Messages	B-8
Appendix C - Security Considerations for Control Systems Networks.....	C-1
Security Considerations for Control Systems Networks.....	C-2