

SEN-TESTER-001


Before using this Sensor Tester the first time, please do the following:

- Open battery compartment
- Invert the battery

Functions and Features

This Sensor Tester is used for fast field checks of the following sensor types with operating voltage 10-30V

- Inductive Sensors
- Capacitive Sensors
- Photoelectric Sensors
- Ultrasonic Sensors
- Automatic PNP/NPN recognition
- Built-in step-up voltage converter
- Built-in steel target (non-standardized) for checking inductive sensors
- LED and acoustic indicators
- Automatic switch off after approximately 120 sec of non-use

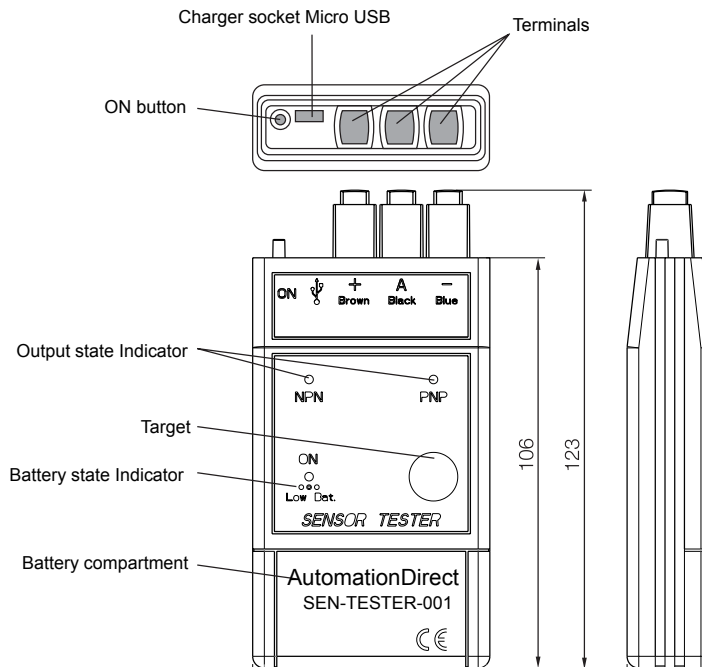

Technical Data	
Connection for Sensor Type	PNP and NPN; N.C. and N.O.
Maximum Sensor Current Drain	Max: 100 mA
Power Supply	Akku LiPo 9V; 600 mAh
LED Indicators:	
Switched output (PNP/NPN)	LED Yellow
Operating Voltage	LED Green
Replace Battery	LED Green Blinking
Agency Approval	CE
NOTE: Use only LiPo 9V 9min 500mAh) or Akaline 6LR61 9V. Do NOT charge Akaline 6LR61 9V.	