

## **XTH Series Head Mounted RTD and TC Temperature Transmitters - Fixed Range**



**₽**\$\u00e4\


**XTH Series - Fixed Range** 

XTH product insert Rev. 1 AutomationDirect.com

#### Installation


- Transmitter comes with installation screw kit for both North American and European installations
- Ambient Temperature: -40 to 185°F (-40 to 85°C)
- Installation area:
  Field housing; connection head
  Form B according to DIN 43729
- Installation angle: No limit

Note: Max. torque 3/4 pound-feet (1 Nm)

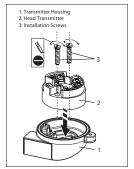


North American installation

XTH product insert Rev. 1

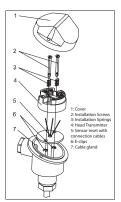


European installation

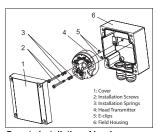



Remote Installation of head transmitter into field housing


### Dimensions inches [mm]

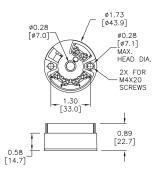

#### Wiring

 

 

 


# Shielding

3-wire

### Safety instructions:

- To comply with UL61010-1 unit must be supplied by class 2 power supply.
- Disconnect power before making connections
 
#### **Load Impedance**



RLmax =  $(V_{powersupply}-8V)$  / 0.025A (current output) e.g. (24V - 8V) / 0.025A = 640  $\Omega$ 

Please take note when installing the head transmitter remotely from the sensor in a field housing: The shield on the 4-20 mA signal output must have the same potential as the shield at the sensor connections. When using grounded thermocouples, shielding of the output 4 to 20 mA cable is recommended. In plants with strong electromagnetic fields, shielding of all cables with a low ohm connection to the transmitter housing is recommended.

Due to the danger of lightning strikes it is recommended that shielded cable be used in installations outside of buildings.

XTH product insert Rev. 1



Please visit www.automationdirect.com for specifications and additional information.