

# STRIDE® MODBUS GATEWAY USER MANUAL TABLE OF CONTENTS



## CONTENTS

<b>Chapter 1: Getting Starting</b> . . . . .	<b>1-1</b>
User Manual Overview . . . . .	1-2
Introduction . . . . .	1-3
Product Overview . . . . .	1-3
Hardware . . . . .	1-3
Hardware Reset Button . . . . .	1-5
DIP Switches . . . . .	1-5
LEDs . . . . .	1-5
Installation, DIN Rail Mounting. . . . .	1-6
Dimensional Drawings . . . . .	1-7
Wiring . . . . .	1-8
Power . . . . .	1-8
Ethernet Wiring . . . . .	1-9
Serial Port Wiring . . . . .	1-10
Operation . . . . .	1-11
Transparent Mode . . . . .	1-11
Agent Mode . . . . .	1-11
<b>Chapter 2: Summary of Modbus Modes</b> . . . . .	<b>2-1</b>
Introduction . . . . .	2-2
Mode 1: Transparent, RTU Master mode:	
Modbus TCP Client/Master Device to Gateway to Modbus RTU Slave Devices . . . . .	2-3
Mode 2: Agent, RTU Master mode:	
Modbus TCP Client/Master Device to Gateway Memory. Gateway Talks Directly to Modbus RTU Slave Devices . . . . .	2-4
Mode 3: Transparent, RTU Slave mode:	
Modbus RTU Master Device to Gateway to Modbus TCP Server/Slave Devices . . . . .	2-6
Mode 4: Agent, RTU Slave mode:	
Modbus RTU Master Device to Gateway Memory. Gateway Talks Directly to Modbus TCP Server/Slave Devices . . . . .	2-7
<b>Chapter 3: Web Console Configuration</b> . . . . .	<b>3-1</b>
Initial Connection . . . . .	3-2
Device Info Page. . . . .	3-3
Network Settings . . . . .	3-4
Operating Settings . . . . .	3-5
For Modbus RTU/ASCII Master to Modbus TCP Servers (Slaves) . . . . .	3-5
For Modbus TCP Master (Client) Device to Modbus RTU/ASCII Slave Devices . . . . .	3-6
Serial Settings . . . . .	3-7

Agent Settings . . . . .	3-8
Gateway Settings . . . . .	3-8
Message List . . . . .	3-9
Data in Gateway Memory . . . . .	3-11
Import/Export . . . . .	3-12
Export . . . . .	3-12
Import . . . . .	3-12
Upgrade Firmware . . . . .	3-13
Change Password . . . . .	3-14
Load Factory Default . . . . .	3-15
Reboot . . . . .	3-16
Appendix A: Application Examples . . . . .	A-1
Example 1:	
Using Modbus Poll to STRIDE Modbus Gateway with BRX Slave . . . . .	A-2
Example 2:	
Using Modbus Poll to STRIDE MB Gateway with CLICK Slave . . . . .	A-9
Example 3:	
Using P3000 as Master (Client) to STRIDE Modbus Gateway with CLICK Slave . . . . .	A-17
Appendix B: Stride Modbus Gateway Operating Mode Examples . . . . .	B-1
Example 1:	
TRANSPARENT Mode, with Modbus TCP Master (Client) Devices to Modbus RTU/ASCII Slave Devices . . . . .	B-2
Example 2:	
TRANSPARENT Mode, with Modbus RTU/ASCII Master Devices to Modbus TCP Slave (Server) Devices . . . . .	B-6
Example 3:	
AGENT Mode, with Modbus TCP Master (Client) Devices to Modbus RTU/ASCII Slave Devices . . . . .	B-11
Example 4:	
AGENT Mode, with Modbus RTU/ASCII Master Devices to Modbus TCP Slave (Server) Devices . . . . .	B-16
Appendix C: Modbus Error Codes . . . . .	C-1
Modbus Error Codes . . . . .	C-2