


Index

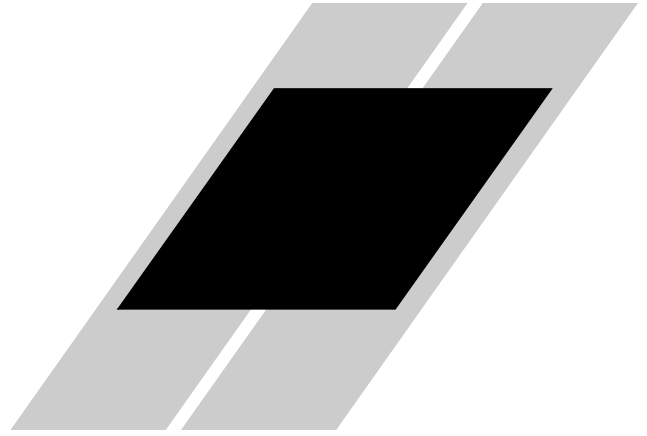

A

A Group functions 3–9
AC reactors 5–3
Acceleration 1–21, 3–8
 characteristic curves 3–23
 second function 3–21
 two-stage 4–15
Access levels 3–5, 3–28, 4–19
Access to terminals 2–2
Accessories 5–2
Alarm signal 4–30
Algorithms 3–43
Algorithms, torque control 3–5
Ambient temperature 2–8, A–2
Analog input settings 3–10
Analog inputs
 current/voltage select 4–20
 operation 4–32
 wiring examples 4–32
Analog outputs
 configuration 3–40
 FM type 4–34
 operation 4–33
 PWM type 4–33
Arrival frequency A–2
Automatic restart 3–24
Automatic voltage regulation 3–20
Auto-tuning 4–35, A–2
Auto-tuning constants 3–43
AVR 3–20

B

B Group functions 3–24
Base frequency A–2
Bibliography A–8

Braking 1–20
 dynamic 5–5
 resistive 1–23
 settings 3–16
Braking resistor 2–5, A–2
Braking resistor selection
 external braking units 5–9
 internal braking units 5–8
Braking unit 2–5
Break-away torque A–2

C

C Group functions 3–34
Capacitor life curve 6–11
Carrier frequency 3–30, A–2
Catching a spinning motor 3–32
Cautions
 inverter mounting 2–7
 operating procedures 4–2
CE approval A–2
CE-EMC guidelines C–2
Chassis ground connection 2–18
Choke 2–5, A–2
Choke, DC link 5–4
Chopper frequency 3–30
Clearance 2–8
Coasting 3–32
Constant torque 3–13
Constant volts/hertz operation 1–18
Contact information xviii
Control algorithms 3–13
Copy Unit 1–3
Cover removal 2–19
Current overload 3–27

D

- D Group parameters 3–6
- DC braking 3–16, 4–12, 4–13, A–3
- DC link
 - choke 5–4
- Deadband A–3
- Deceleration 1–21, 3–8, 4–12
 - characteristic curves 3–23
 - second function 3–21
 - two-stage 4–15
- Default parameter values B–2
- Default settings
 - restoring 6–8
- Derating curves 1–11
- Derivative gain 3–19
- Digital operator 2–21, 3–3
- Digital operator panel A–3
- Digital operators 1–3
- Dimensions
 - inverter 2–9
 - terminals 2–15
- Diode A–3
- Duty cycle A–3
- Dynamic braking 1–20, 5–5, A–3
 - usage ratio 3–33, 5–6

E

- Editing parameters 2–21, 2–24
 - in Run Mode 3–5, 3–28, 4–19
- Electromagnetic compatibility C–2
- Electronic thermal overload 3–25
- EMC installation guidelines C–2
- EMC installation recommendations C–6
- EMI A–3
- EMI filter 5–4
- Environmental specs 1–9
- Error A–3
 - PID loop 4–29
- Error codes
 - trip events 6–5
- Event clearing 4–21
- External trip 4–17

F

- F Group functions 3–8
- Factory default settings 3–30
- Factory settings, restoring 6–8
- Fan control 3–33
- Fan outlet 2–8, 2–19
- FAQ 1–22
- Features 1–2, 2–2
- Filters
 - noise suppression 5–2
- Fine-tuning functions 3–24
- Forward run command 4–9
- Four-quadrant operation A–3
- Free-run stop 3–32, 4–12, 4–16, A–3
- Frequency arrival signals 4–26
- Frequency display scaling 3–30
- Frequency limits 3–17
- Frequency matching 3–32
- Frequency setting A–4
- Frequency source setting 3–9
- Frequency-related functions 3–17
- Frequently asked questions 1–22
- Functions 1–20, 2–22
- Fuse ratings 2–14

G

- Glossary of terms A–2

H

- H Group parameters 3–43
 - Harmonics A–4
 - History of trip events 3–7
 - Horsepower A–4
-

I

IGBT 1-17, A-4
 test method 6-15
Index of terminal functions 4-7
Inertia A-4
Initialization 6-8
Initialization codes 3-30
Input circuits 4-8
Input terminals 2-15
Inspection
 electrical measurements 6-12
 IGBT test method 6-15
 measurement techniques 6-14
 procedures 6-9
 unpacking 2-2
Installation instructions 2-6
Insulation test 6-10
Integral gain 3-19
Intelligent input terminals 3-34, 4-8
Intelligent output terminals 3-38, 4-24
Intelligent terminal A-4
Intelligent terminal functions 3-34
Intelligent terminal index 4-7
Inverter 1-22, A-4
Inverter specifications 1-5
Isolation transformer A-4

J

Jog command 4-12
Jog frequency settings 3-11
Jogging operation A-4
Jump frequencies 3-18
Jump frequency A-5

K

Keypad
 features 2-21, 3-3
 navigation 2-23, 3-4
 navigation, trip events 6-7
Keypad features 2-21
Keypads 1-3, 3-2

L

LEDs 2-21, 3-3
Line reactor A-5
Linear accel/decel 3-23
Logic terminals 3-34, 3-38, 4-6

M

Main profile parameters 3-8
Maintenance procedures 6-9
Megger test 6-10
Model number 1-4
Model number convention 1-4
Momentum A-5
Monitor mode 2-23, 2-27, 2-28, 3-4
Monitoring functions 3-6
Motor
 speed calculation 2-28
Motor constants 3-43
 auto-tuning 4-35
Motor load A-5
Motor poles 1-23, 2-26
Motor wiring 2-18
Mounting dimensions 2-9
Mounting location 2-7
Multiple motors
 configuration 4-40
Multi-speed operation 4-10, A-5
Multi-speed profiles 1-21
Multi-speed settings 3-11

N

Nameplate 1-4
Navigational map 2-23, 3-4
 trip events 6-7
NEC A-5
NEMA A-5
NEMA rating 2-8
Noise filters 5-2
 AC reactor 2-5

O

- Open-collector outputs 4-24, A-5
- Operational modes 3-5
- Operator interfaces 1-3
- Optional components 2-5
- Options 1-2
- Output adjustment parameters 3-41
- Output circuits 4-24
- Output deviation for PID control 4-29
- Output frequency 3-8
- Output overload 3-27
- Output terminals 2-18
- Overload advance notice signal 4-28
- Overload restriction 3-27

P

- Parameter editing 2-21, 2-24
- Parameter settings tables B-2
- Parameters 1-20, 2-22
- PID loop 1-24, A-5
 - operation 4-39
 - output deviation 4-29
 - settings 3-19
- PLC, connecting to 4-4
- Poles of motor 2-26
- Potentiometer 2-25, 4-32
- Power factor A-5
- Powerup test 2-19
 - observations 2-28
- Powerup, unattended start 4-18
- Process variable A-5
- Program mode 2-23, 2-28, 3-4
- Programming device 3-2
- Proportional gain 3-19
- Pulse-width modulation 4-33
- PV source setting 3-19
- PWM A-6

R

- Ratings label 1-4
- Reactance A-6
- Read/write copy unit 1-3, 3-2
- Rectifier A-6
- Reduced torque 3-13
- Regenerative braking A-6
- Regulation A-6
- Regulatory agency approvals 1-4
- Relay alarm contacts 4-30
- Remote control 4-23
- Reset function 4-21
- Restart Mode 3-32
- Reverse run command 4-9
- Reverse torque A-6
- Revision history xvii
- RF noise filter 5-4
- Rotor A-6
- Run command 4-9
- Run command source setting 3-9
- Run mode 2-28, 3-5
- Run signal 4-25
- Running the motor 2-27
- Run-time edits 3-5, 3-28, 4-19

S

- Safety messages i
- Saturation voltage A-6
- Scaling 3-30
- S-curve accel/decel 3-23
- Second accel and decel 3-21
- Second motor 4-14
- Sensorless vector control 3-14, A-6
- Set 2nd motor 4-14
- Setpoint A-6
- Single-phase power A-7
- Sinking I/O 4-4
- Slip A-7
- Software lock 3-5, 3-28, 4-19
- Sourcing I/O 4-4
- Spare parts 6-11

Specifications

- derating curves 1-11
- general 1-9
- inverter 1-5
- label 1-4, 2-3
- logic signals 4-6
- Speed control 1-17, 1-21, 4-10
- Speed pot 2-25
- Squirrel cage A-7
- Standard functions 3-9
- Stator A-7
- Stop command 4-9
- Stop Mode 3-32
- Supply wiring 2-15
- Switching frequency 3-30
- Symbol definitions i
- System description 2-5

T

- Tachometer A-7
- Technical support xviii
- Term definitions A-2
- Terminal listing 4-7
- Thermal overload 3-25
- Thermal protection 4-22
- Thermal switch A-7
- Thermistor A-7
- Thermistor input 4-22
- Three-phase power A-7
 - motor phase connections 1-18
- Torque 1-18, A-8
- Torque boost 3-13
- Torque control algorithms 3-5, 3-13, 3-43
- Torque specs, terminals 2-15
- Transistor A-8
- Trip A-8
- Trip events 3-7
 - clearing 6-5
 - error codes 6-5
 - external 4-17
 - monitoring 6-5
- Trip history 6-7
- Trip mode 4-21
- Troubleshooting tips 6-3
- Two-stage accel/decel 4-15

U

- UL instructions xii
- Unattended start protection 4-18
- Unpacking 2-2
- Up/Down functions 4-23

V

- V/f control 3-13
- Variable torque 3-13
- Variable-frequency drives
 - introduction 1-17
- Velocity profile 1-21
- Ventilation 2-8, 2-19
- Voltage gain 3-14

W

- Warnings
 - operating procedures 4-3
 - troubleshooting 6-2
- Warranty 6-16
- Watt loss A-8
- Wiring
 - analog inputs 4-32
 - gauge 2-14
 - logic 2-18
 - logic connector 4-6
 - output 2-18
 - power input 2-15
 - preparation 2-13
 - system diagram 4-5

Z

- Zero-phase reactor 5-4

