


Wiring Diagram – Cap Run Motor


SR22 Single Phase Motor Connectivity									
IH, MTR2 - Rotation - Clockwise (Viewed from ODE)									
IH MTR2 Nameplate	115/1PH			230/1PH					
	L1	N	Jumper To L1	L1	L2	Jumper To L1			
	1L1	3L2	5L3	1L1	3L2	5L3			
	SR22 Soft Starter			SR22 Soft Starter					
	2T1	4T2	6T3	2T1	4T2	6T3			
	Line 1 T1 (Blue) T3 (Org) T8 (Red)	Line 2 T2 (Wht) T4 (Yel) T5 (Blk)	Jumper to 2T1	Line 1 T1 (Blue)	Line 2 T4 (Yel) T5 (Blk)	Jumper To 2T1	T3 (Org) T8 (Red) T2 (Wht)	Connect Together	
IH, MTR2 - Rotation - Counter Clockwise (Viewed from ODE)									
IH MTR2 Nameplate	115/1PH			230/1PH					
	L1	N	Jumper To L1	L1	L2	Jumper To L1			
	1L1	3L2	5L3	1L1	3L2	5L3			
	SR22 Soft Starter			SR22 Soft Starter					
	2T1	4T2	6T3	2T1	4T2	6T3			
	Line 1 T1 (Blue) T3 (Org) T5 (Blk)	Line 2 T2 (Wht) T4 (Yel) T8 (Red)	Jumper to 2T1	Line 1 T1 (Blue)	Line 2 T4 (Yel) T8 (Red)	Jumper to 2T1	T3 (Org) T5 (Blk) T2 (Wht)	Connect Together	

MTR2-P33-1AB18
MTR2-P33-1AB36
MTR2-P50-1AB50
MTR2-P50-1AB36
MTR2-P75-1AB18
MTR2-P75-1AB36
MTR2-001-1AB18
MTR2-001-1AB36

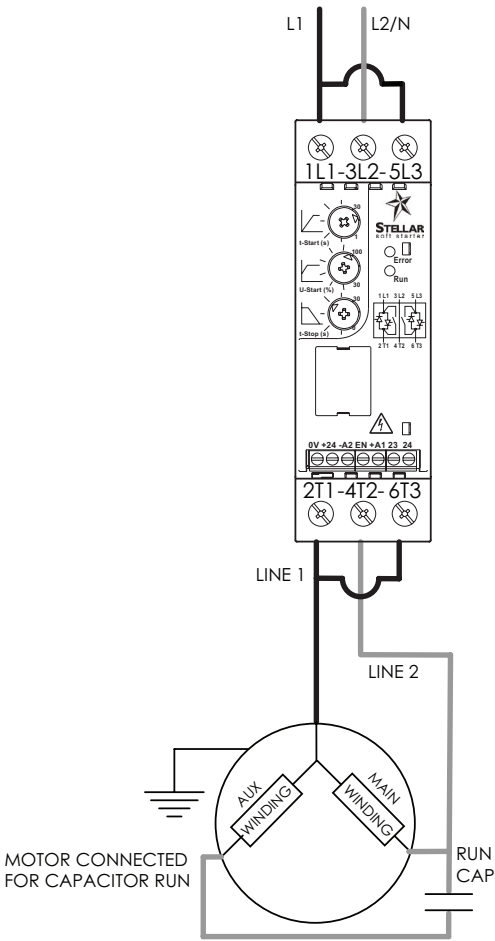

SR22 Soft Starter Single Phase Operation – 2a

Wiring Diagram – Cap Start/Cap Run Motor – High Start Torque

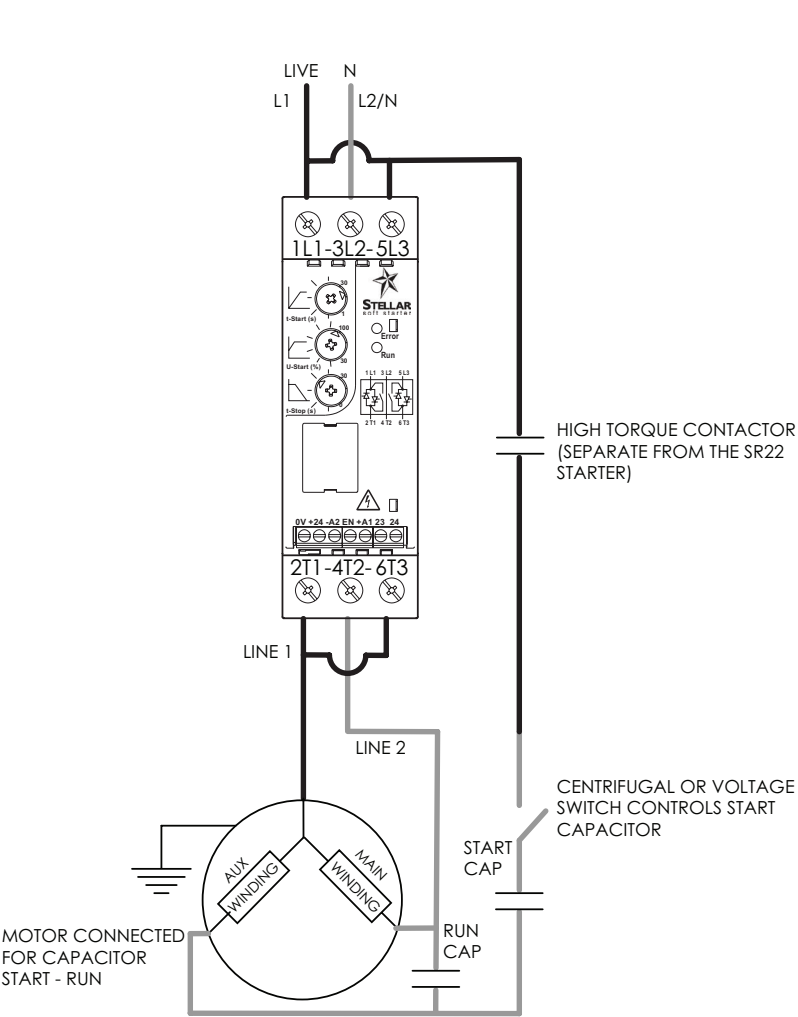

SR22 Single Phase Motor Connectivity									
IH, MTR2 - Rotation - Clockwise (Viewed from ODE) - High Start Torque - Cap Start / Cap Run Only!									
115/1PH					230/1PH				
T8 (Red) >		L1	N	Jumper To L1	L1		L2	Jumper To L1	< T8 (Red)
IH MTR2 Nameplate	1L1		3L2		5L3				
	SR22 Soft Starter								
	2T1		4T2		6T3				
	Line 1		Line 2		Jumper to 2T1		T3 (Org) Connect Together T2 (Wht)		
	T1 (Blue) T3 (Org)		T2 (Wht) T4 (Yel) T5 (Blk)						
T1 (Blue)		T4 (Yel) T5 (Blk)		Jumper To 2T1					
IH, MTR2 - Rotation - Counter Clockwise (Viewed from ODE) - High Start Torque - Cap Start / Cap Run Only!									
115/1PH					230/1PH				
T5 (Blk) >		L1	N	Jumper To L1	L1		L2	Jumper To L1	< T5 (Blk)
IH MTR2 Nameplate	1L1		3L2		5L3				
	SR22 Soft Starter								
	2T1		4T2		6T3				
	Line 1		Line 2		Jumper to 2T1		T3 (Org) Connect Together T2 (Wht)		
	T1 (Blue) T3 (Org)		T2 (Wht) T4 (Yel) T8 (Red)						
T1 (Blue)		T4 (Yel) T8 (Red)		Jumper to 2T1					

MTR2-1P5-1AB18
MTR2-1P5-1AB36
MTR2-002-1AB18
MTR2-002-1AB36

<

SR22 Soft Starter Single Phase Operation – 2b