

STELLAR™ SOFT STARTER USER MANUAL TABLE OF CONTENTS



- Chapter 1: Mechanical Installation1-1
 - Manual Overview1-2
 - 1 – Mechanical Installation1-3
- Chapter 2: Electrical Installation2-1
 - 2.1 – Warnings & Agency Approvals2-2
 - 2.2 – Electrical Connections - Specifications2-3
 - 2.3 – Standard Wiring Configurations2-4
 - 2.4 – Motor Control Circuits2-6
 - 2.5 – Electrical Connections - Terminal Locations2-9
 - 2.6 – Power Supply Connections2-12
 - 2.7 – Control Card Connections2-13
 - 2.8 – (Reserved for Future Use)2-13
 - 2.9 – Typical Motor Power at Rated Voltage2-14
 - 2.10 – Fuse and Current Ratings2-15
- Chapter 3: Applications3-1
 - 3.1 – Motor Suitability and Associated Considerations3-2
 - 3.2 – Rules for Specific Applications3-5
 - 3.3 – Concepts and Principles of Fixed-Speed Induction Motor Starting and Control3-8
 - 3.4 – Principles of the Optimizing Mode3-15
 - 3.5 – Chapter 3 Glossary of Terms3-20
 - 3.6 – Power Factor Conversion Chart3-21

Chapter 4: Electromagnetic Compatibility	4-1
4.0 – Electromagnetic Compatibility (EMC)	4-2
4.1 – Introduction	4-2
4.2 – Applicable Standard Within the EU	4-2
4.3 – Mandatory Requirements Within the EU	4-2
4.4 – Guidance for Installation Personnel and System Designers	4-2
4.5 – EMC Basic Criteria	4-3
4.6 – Purchasing Implications of Meeting an EMC Standard	4-3
4.7 – Basic EMC Considerations	4-4
Chapter 5: Keypad Menu Items and Parameters	5-1
5.0 – How to Use This Chapter	5-2
5.1 – Configuring the SR44 Soft Starter	5-3
5.2 – Keypad Menu Structure	5-8
5.3 – Parameter Basic Information	5-15
5.4 – Menu Settings and Parameter Descriptions	5-23
5.5 – Definitions for Chapter 5	5-79
Chapter 6: Serial Communications	6-1
6.1 – Overview	6-2
6.2 – Quick Start	6-2
6.3 – Specifications	6-3
6.4 – Parameter Memory Addresses	6-4
6.5 – Serial Communication to SR44	6-13
6.7 – Example PLC Communications Programs	6-19
Chapter 7: Optional Hardware	7-1
7.1 – SR44-RS485 Communication Card	7-2
7.2 – SR44-KPD Remote Keypad	7-4
Appendix A: Setup Examples	A-1
A.1 – Setup Examples	A-2
A.2 – Advanced Setup Examples	A-19
Appendix B: Applications Data	B-1
SR44 Applications Data	B-2

Appendix C: Technical Hints	C-1
Technical Hints	C-2
Appendix D: Using AutomationDirect PLCs with SR44 Soft Starters	D-1
Compatibility Overview	D-2
CLICK PLC I/O Compatible with SR44 Soft Starters	D-2
DL05/DL06 PLC I/O Compatible with SR44 Soft Starters	D-3
DL105 PLC I/O Compatible with SR44 Soft Starters	D-4
DL205 PLC I/O Compatible with SR44 Soft Starters	D-4
DL305 PLC I/O Compatible with SR44 Soft Starters	D-5
DL405 PLC I/O Compatible with SR44 Soft Starters	D-6
P3000 PLC I/O Compatible with SR44 Soft Starters	D-6
Terminator I/O Compatible with SR44 Soft Starters	D-7

**BLANK
PAGE**