

TABLE OF CONTENTS



Chapter 1: Getting Started

Manual Overview	1-2
Overview of this Publication	1-2
Who Should Read This Manual.....	1-2
Technical Support	1-2
Supplemental Manuals	1-2
Special Symbols.....	1-2
SOLO Temperature Controller Introduction	1-3
General Description.....	1-3
Unpacking.....	1-3
Serial Number Label Information:.....	1-4
Model Number Explanation	1-4
SOLO Temperature Controller Specifications.....	1-5

Chapter 2: Installation and Wiring

Ambient Conditions	2-2
Installation Considerations.....	2-2
Mounting Instructions.....	2-3
Controller and Panel Cutout Dimensions	2-4
Safety Information.....	2-6
Terminal Identification	2-8

SL4824 Series Inputs	2-8
SL4824 Series Wiring.....	2-9
SL4848 Series Inputs	2-10
SL4848 Series Wiring.....	2-11
SL4896 Series Inputs	2-12
SL4896 Series Wiring.....	2-13
SL9696 Series Inputs	2-14
SL9696 Series Wiring.....	2-15

Chapter 3: Keypad Operation and Setup Parameters

Display, LED and Keypad.....	3-2
Keypad Operation	3-3
Setup Parameter Listing	3-4
Regulation Mode Parameters.....	3-7
Operation Mode Parameters.....	3-17
Initial Setting Parameters.....	3-19
Reset to Factory Default.....	3-24

Chapter 4: Controller Inputs and Outputs

Control Input Types.....	4-2
Event Inputs	4-3
Control Output Types.....	4-4
Alarm Outputs	4-8

Chapter 5: Control Modes

PID Control	5-2
On / Off Control	5-4
Ramp / Soak Control	5-5

Manual Control.....	5-5
Error Display Information.....	5-6

Chapter 6: Configuration Software

PC Connection	6-2
Software Installation	6-3
Starting SL-SOFT.....	6-6
SL-SOFT Online Help	6-6

Chapter 7: Modbus Communication

Modbus Protocol	7-2
Registers.....	7-2
Connection with the DirectLOGIC PLC.....	7-8

Appendix: Modbus Address Map for Ramp / Soak Control

Last Step Number	A-2
Additional Cycles	A-2
Next Pattern Number	A-2
Ramp / Soak SV	A-3
Ramp / Soak Time	A-4