INDEX

Α

Additional Cycles, 3-6, 3-19, 3-22, A-2 Alarm 1, 3-6, 3-15, 3-16, 3-20, 4-8 Alarm 1 High Limit, 3-5, 3-15 Alarm 1 Low Limit, 3-5, 3-16 Alarm 2, 3-6, 3-16, 3-20, 4-8 Alarm 2 High Limit, 3-5, 3-16 Alarm 2 Low Limit, 3-5, 3-16 Alarm 3, 3-6, 3-16, 3-20 Alarm 3 High Limit, 3-5, 3-16 Alarm 3 Low Limit, 3-5, 3-16 Ambient Conditions Altitude, 2–2 Ambient Temperature Range, 2-2 IP Rating, 2-2 Relative Humidity, 2-2 Shock Resistance, 2-2 Storage Temperature Range, 2-2 Vibration Resistance, 2-2 Analog High Adjustment, 3-4, 3-13, 3-14, 4-5, 4-6, 4-7 Analog Low Adjustment, 3-4, 4-5, 4-6, 4-7

В

Baud Rate, 3-6, 3-21, 7-2

Auto Tuning, 3-2, 3-4, 3-7, 3-10, 5-3

Bit Length, 3–6, 3–21, 7–2 Bit Registers, 7–2, 7–6, 7–7

Com port Settings, 6-4

C

Configuration Window, 6–4
Connection with the C-more and C-more Micro HMI panels, 7–9
Connection with the DirectLogic PLC, 7–7
Control Mode, 3–4, 3–5, 3–6, 3–18, 5–2, 5–3, 5–4, 5–5
Controller and Panel Cutout Dimensions SL4824 Series, 2–4
SL4896 Series, 2–5
SL9696 Series, 2–5
Cooling Hysteresis, 3–4, 3–11, 5–4
Current Input, 4–2

D

Data Registers, 7–2, 7–3, 7–4, 7–5 Dead Band, 3–4, 3–12, 5–4 Decimal Point Position, 3–5, 3–15 Derivative Time, 3–4, 3–9, 5–3 Down Button, 3–2, 3–3

E	Last Step Number, 3-6, 3-19, 3-21, A-2
Error Display Information, 5–5	LED status indicators
• •	°F, °C LED Indicators, 3–2
Event Inputs Event 1 Input, 4–3	ALM1, ALM2, ALM3 LED Indicators, 3–2
Event 2 Input, 4–3	AT LED Indicator, 3–2
Event 2 input, 4–3	OUT1, OUT2 LED Indicators, 3–2
G	Lock Mode, 3–5, 3–16
General Description, 1–3	М
	Manual Control, 5–5
Н	Modbus Address Map, A-2, A-3, A-4
Heating / Cooling, 3-4, 3-5, 3-6, 3-19, 3-20	Modbus Protocol, 3-6, 3-20, 7-2
Heating Hysteresis, 3-4, 3-10, 5-4	Model Number Explanation, 1-4
	Mounting Instructions
l	SL4824 Series, 2–3
Initial Power up, 3–3	SL4848, SL4896, SL9696 Series, 2-3
Initial Fower up, 3–5 Initial Setting Parameters, 3–6, 3–17	
Input Range High, 3–6, 3–18	N
Input Range Low, 3–6, 3–18	Network Address, 3-6, 3-20, 7-2
Input Type, 3–6, 3–17, 4–2	Next Pattern Number, 3–6, 3–19, 3–22, A–2
Input Types	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
Analog, 4–2	0
Current Input, 4–2	0.10%0.153
Voltage Input, 4–2	On / Off Control, 5–3
Platinum RTD, 4–2	On-Line Configuration, 3–6, 3–20
Thermocouple, 4–2	Operation Mode Parameters, 3–5, 3–15
Installation Considerations, 2–2	Output 1 Cooling Period, 3-4, 3-11, 4-5, 4-6, 4-7
Integral Offset, 3–4, 3–10, 5–3	Output 1 Heating Period, 3-4, 3-11, 4-5, 4-6, 4-7
Integral Time, 3–4, 3–9, 3–10, 5–3	Output 1 Level, 3–5, 3–13, 3–16, 4–4, 4–6, 4–7, 5–5
V	Output 2 Level, 3-5, 3-16, 4-4, 5-5
K	Output 2 Period, 3-4, 3-12, 4-5
Keypad Operation, 3–3	Output Types
Function Buttons, 3–3	Current, 4–5
Down Button, 3–2, 3–3	Linear Voltage, 4–6
Rotate Button, 3–2, 3–3	Relay, 4–4
SET Button, 3–2, 3–3	Voltage Pulse, 4–5
Up Button, 3–2, 3–3	D
1	Р
L	Parity, 3-6, 3-21, 7-2

PC Connection, 6–2
PD Control Offset, 3–4, 3–10
PID Control, 5–2, 5–3, 5–4
PID Parameter Group, 3–4, 3–7, 3–8, 3–9, 3–10, 5–2
Proportion Band, 3–4, 3–8, 3–12
Proportion Band Coefficient, 3–4, 3–12
Proportional Band, 5–3
Proportional Band Coefficient, 5–3
PV Display, 3–2
PV Monitor, 6–6
PV Offset, 3–4, 3–13

R

Quick Start Guide, 1-2, 1-3

Ramp / Soak Control, 5–4
Ramp / Soak Pattern, 3–6, 3–15, 3–18, 3–19, 3–21, 3–22, 5–4
Ramp / Soak SV, 3–6, 3–21, A–3
Ramp / Soak Time, 3–6, 3–21, A–4
Recorder Window, 6–7
Regulation Mode Parameters, 3–4, 3–7
Reset to Factory Default, 3–24
Rotate Button, 3–2, 3–3
RS-485, 6–4, 7–2, 7–7, 7–9
Run / Stop, 3–5, 3–15

S

Safety Information, 2–6, 2–7
Serial Number Label Information
SL4824 Series, 1–4
SL4848, SL4896, and SL9696 Series, 1–4
SET Button, 3–2, 3–3
Software Installation, 6–3
Special Symbols
Notepad, 1–2
Warning, 1–2

Starting Ramp / Soak Pattern, 3–5, 3–15 Stop Bit, 3–6, 3–21, 7–2 SV Display, 3–2, 3–7 System Alarm, 3–6, 3–20, 4–8, 4–10

Т

Target SV, 3–4, 3–7, 3–8, 3–9, 3–10
Technical Support, 1–2
Temperature Unit, 3–6
Terminal Identification, 2–8
SL4824 Series Inputs, 2–8
SL4824 Series Wiring, 2–9
SL4848 Series Inputs, 2–10
SL4848 Series Wiring, 2–11
SL4896 Series Inputs, 2–12
SL4896 Series Wiring, 2–13
SL9696 Series Inputs, 2–14
SL9696 Series Wiring, 2–15

U

Unpacking, 1–3 Up Button, 3–2, 3–3



Voltage Input, 4-2