


SV2-USER-M-WO

TABLE OF CONTENTS

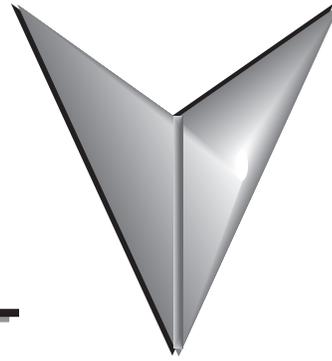

Chapter 1: Product Overview	1-1
Manual Overview	1-2
Overview of This Publication	1-2
Who Should Read This Manual	1-2
Supplemental Publications	1-2
Technical Support	1-2
Special Symbols	1-2
SureServo2™ AC Servo Systems Introduction	1-3
1.1 - Components of the Servo Set	1-3
1.2 - Model Overview	1-3
1.2.1 - Nameplate Information	1-3
1.2.2 - Model Explanation	1-4
1.3 - SureServo2 Servo Drive and Motor Combinations	1-5
1.4 - Description of the Drive Interface	1-6
Chapter 2: Installation	2-1
SureServo2™ Installation	2-2
Safety Precautions	2-2
2.1 - Ambient Storage Conditions	2-2
2.2 - Ambient Installation Conditions	2-2
2.3 - Mounting direction and space	2-3
2.3.1 - Heat dissipation requirements:	2-4
2.4 - Safety precautions for using motors	2-5
2.5 - Specifications for the Circuit Breaker and Fuse	2-6
2.6 - Ferrite Ring	2-7
2.7 - Installation Requirements for EMC	2-9
2.7.1 - EMI Filters	2-10
2.8 - Selecting the regenerative resistor for dynamic braking	2-11

2.9 - The Use of Braking	2-19
Chapter 3: Wiring	3-1
SureServo2™ Wiring	3-2
3.1 - System Connection	3-2
3.1.1 - Connecting to Peripheral Devices.....	3-2
3.1.2 - Connectors and Terminal Blocks	3-4
3.1.3 - Wiring for Power Supply	3-5
3.2 - Cables and Connectors for SureServo2	3-7
3.2.1 - UVW Connectors for the SureServo2 Drive.....	3-9
3.2.2 - Specification for the Encoder Connector	3-11
3.2.3 - Brake Power Cable and Connector.....	3-14
3.2.4 - Wire selection	3-15
3.3 - Wiring Diagram for the Servo System	3-18
3.4 - Wiring for CN1 (I/O signal)	3-19
3.4.1 - CN1 I/O connector	3-19
3.4.2 - Signal Explanation for Connector CN1	3-20
3.5 - Wiring Diagrams (CN1)	3-22
3.5.1 - Analog Input/Output Suggested Wiring	3-22
3.5.2 - Pulse/Sign Suggested Wiring.....	3-23
3.5.3 - Digital Output Suggested Wiring.....	3-26
3.5.4 - Digital Input Suggested Wiring	3-27
3.5.5 - Encoder Output Suggested Wiring.....	3-28
3.5.6 - Application: Using the CN1 Quick Connector for Wiring	3-29
3.6 - Wiring for the CN2 Encoder Connector.....	3-33
3.7 - Wiring for the CN3 connector (RS-485).....	3-36
3.8 - CN4 Serial Connector (Mini USB)	3-37
3.9 - CN5 connector	3-38
3.10 - CN10 STO Connector (Safe torque off).....	3-39
3.11 - STO function (Safe torque off)	3-40
3.11.1 - Introduction to STO.....	3-40
3.11.2 - The potential dangers of STO and precautions for using STO	3-40
3.11.3 - Wiring for STO	3-42
3.11.4 - How does the STO function work?	3-45
3.11.5 - STO Response Time.....	3-46
3.11.6 - Alarm Triggering	3-46

3.11.7 - STO Feedback Behavior	3-47
3.11.8 - Deactivation Status	3-48
3.11.9 - Input/Output Signal Specification	3-48
3.12 - Standard Wiring Example	3-50
3.12.1 - STO Safety Specifications	3-52
Chapter 4: Test Operation and Drive Display	4-1
4.1 - Display Description	4-2
4.2 - Parameter setting procedure	4-3
4.2.1 - Switching modes	4-3
4.2.2 - Monitoring Mode	4-3
4.2.3 - Parameter Mode	4-4
4.2.4 - Editing Mode	4-4
4.3 - Status Display	4-5
4.3.1 - Save the setting display	4-5
4.3.2 - Display the Decimal Point	4-5
4.3.3 - Alarm Messages	4-6
4.3.4 - Positive and Negative Sign Setting	4-6
4.3.5 - Monitoring Display	4-6
4.4 - General functions	4-9
4.4.1 - Operation of fault record display	4-9
4.4.2 - Force DO on	4-10
4.4.3 - Digital input diagnostic mode	4-11
4.4.4 - Digital output diagnostic mode	4-11
4.5 - Testing	4-12
4.5.1 - Testing without load	4-12
4.5.2 - Apply power to SureServo2 servo drive	4-13
4.5.3 - JOG trial run without load	4-16
4.5.4 - Trial run without load (Speed mode)	4-17
4.5.5 - Trial run without load (Position mode)	4-18
Chapter 5: Tuning	5-1
Introduction	5-2
5.1 - Tuning procedure and the applied mode	5-2
5.1.1 - Flow chart for the tuning procedure	5-2
5.1.2 - Tuning Modes	5-3
5.2 - Auto tuning	5-4

5.2.1 - Flow chart for auto tuning	5-4
5.2.2 - Auto tuning through the drive keypad.....	5-6
5.2.3 - Auto tuning with SureServo2 (software).....	5-7
5.2.4 - Alarms related to auto tuning	5-13
5.3 - Tuning mode.....	5-14
5.3.1 - Flow chart of Tuning mode	5-14
5.3.2 - Gain Adjustment mode 1	5-15
5.3.3 - Gain Adjustment mode 2	5-15
5.3.4 - Gain Adjustment mode 3	5-15
5.3.5 - Setting the frequency response bandwidth (stiffness)	5-16
5.3.6 - Gain response	5-17
5.4 - Tuning in Manual mode	5-18
5.5 - Mechanical resonance suppression	5-20
Chapter 6: Operation Mode	6-1
Introduction	6-3
6.1 - Selecting the operation mode	6-3
6.2 - Position mode	6-4
6.2.1 - Position command in PT mode.....	6-4
6.2.2 - Position command in PR mode.....	6-5
6.2.3 - Control structure of Position mode	6-6
6.2.4 - S-curve filter (Position).....	6-7
6.2.5 - Electronic gear ratio (E-Gear ratio).....	6-8
6.2.6 - Low-pass filter.....	6-9
6.2.7 - Timing diagram of PR mode (internal indexing).....	6-9
6.2.8 - Gain adjustment for the position loop	6-10
6.2.9 - Low-frequency vibration suppression in Position mode.....	6-12
6.3 - Speed mode	6-14
6.3.1 - Selecting the Speed command source	6-14
6.3.2 - Control structure of Speed mode.....	6-15
6.3.3 - Smooth Speed command.....	6-16
6.3.4 - Scaling of the analog command	6-18
6.3.5 - Timing diagram for Speed mode	6-18
6.3.6 - Gain adjustment of the speed loop	6-19
6.3.7 - Resonance Suppression unit.....	6-21
6.4 - Torque mode	6-24

6.4.1 - Selecting the Torque command source.	6-24
6.4.2 - Control structure of Torque mode	6-25
6.4.3 - Smooth Torque command	6-26
6.4.4 - Scaling of the analog command	6-26
6.4.5 - Timing diagram in Torque mode	6-27
6.5 - Dual mode.	6-28
6.5.1 - Speed / Position dual mode (PT-S, PR-S, PT-PR)	6-28
6.5.2 - Speed / Torque dual mode (S-T)	6-29
6.5.3 - Torque / Position dual mode (PT-T, PR-T)	6-29
6.6 - Others.	6-31
6.6.1 - Applying the speed limit.	6-31
6.6.2 - Applying the torque limit	6-31
6.6.3 - Analog monitoring.	6-32
6.7 - Full-Closed Loop Control System.	6-33
6.7.1 - Hardware configuration	6-34
6.7.2 - Control structure	6-35
6.7.3 - Steps for setting the full-closed loop function.	6-37
6.7.4 - Auxiliary encoder direction setting	6-38
6.7.5 - Auxiliary encoder resolution setting	6-40
6.7.6 - Troubleshooting the full-closed loop function	6-44
6.7.7 - E-Gear settings	6-47
6.7.8 - Protection range for feedback position error.	6-48
6.7.9 - Setting low-pass filter time constant	6-48
6.7.10 - Setting error clearing function	6-49
6.7.11 - Auto clearing feedback position error.	6-52
6.7.12 - Set DI [0x0B] to Switch Between Loop Modes	6-52
6.7.13 - Z pulse source of homing	6-53
6.7.14 - Encoder output settings	6-54
6.7.15 - Full-closed loop feedback source for the controller.	6-56
6.7.16 - Troubleshooting full-closed loop alarms	6-57
6.8 - Gantry Mode	6-58
6.8.1 - How does gantry mode work?	6-58
6.8.2 - Positioning and Homing of Gantry	6-59
6.8.3 - Motion Following	6-62
6.8.4 - Servo System Wiring	6-62
6.8.5 - Sequential Logic Control of Positioning and Homing	6-65

6.8.6 - Steps for Adjusting the Servo When Using Gantry Control	6-69
Chapter 7: Motion Control	7-1
Introduction	7-2
7.1 - PR mode description	7-2
7.1.1 - Shared PR parameters.....	7-4
7.1.2 - Monitoring variables of PR mode	7-6
7.1.3 - Motion Control commands	7-9
7.1.4 - Overview of the PR procedure	7-36
7.1.5 - Trigger methods for the PR command.....	7-42
7.1.6 - PR procedure execution flow.....	7-46
7.2 - Application of motion control	7-58
7.2.1 - Data array.....	7-58
7.2.2 - High-speed position capturing function (Capture).....	7-63
7.2.3 - High-speed position comparing function (Compare)	7-69
7.3 - E-Cam.....	7-75
7.3.1 - Source signal for the master axis	7-76
7.3.2 - Clutch engagement and disengagement	7-80
7.3.3 - E-Cam gears and curve scaling	7-86
7.3.4 - E-Cam curve	7-89
7.3.5 - E-Cam curve and PR command overlapping.....	7-97
7.3.6 - Troubleshooting for E-Cam	7-99
7.3.7 - Rotary Shear	7-101
7.3.8 - Flying Shear.....	7-122
7.3.9 - Macro	7-134
7.3.10 - Auxiliary function.....	7-144
Chapter 8: Parameters	8-1
INTRODUCTION	8-2
8.1 - Parameter definitions.....	8-2
8.2 - Parameter Summaries	8-3
8.2.1 - P0.xxx Monitoring Parameters.....	8-3
8.2.2 - P1.xxx Basic Parameters.....	8-6
8.2.3 - P2.xxx Extension Parameters.....	8-11
8.2.4 - P3.xxx Communication Parameters.....	8-15
8.2.5 - P4.xxx Diagnosis Parameters.....	8-17
8.2.6 - P5.xxx Motion Control Parameters.....	8-19

8.2.7 - P6.xxx PR Parameters	8-25
8.2.8 - P7.xxx Additional PR Parameters	8-29
8.3 - Common Parameter Groups	8-34
8.3.1 - Monitor and general output parameters.....	8-34
8.3.2 - Filter and resonance suppression parameters	8-35
8.3.3 - Gain and switching parameters	8-37
8.3.4 - Position control parameters	8-38
8.3.5 - Position control parameters - External pulse control command (PT mode)...	8-38
8.3.6 - Position control parameters - Internal register control command (PR mode)	8-39
8.3.7 - Speed control parameters	8-40
8.3.8 - Torque control parameters	8-40
8.3.9 - Planning of digital input / output pin and output parameters.....	8-41
8.3.10 - Communication parameters	8-42
8.3.11 - Diagnosis parameters	8-43
8.4 - Detailed Parameter descriptions	8-44
8.4.1 - P0.xxx Monitoring parameters.....	8-44
8.4.2 - P1.xxx Basic parameters.....	8-60
8.4.3 - P2.xxx Extension parameters.....	8-103
8.4.4 - P3.xxx Communication parameters.....	8-139
8.4.5 - P4.xxx Diagnosis parameters.....	8-149
8.4.6 - P5.xxx Motion control parameters	8-154
8.4.7 - P6.xxx PR parameters	8-199
8.4.8 - P7.xxx PR parameters	8-223
8.4.9 - Digital Input (DI) Function Assignments	8-243
8.4.10 - Digital output (DO) Function Assignments.....	8-252
8.4.11 - Monitoring variables descriptions	8-259
Chapter 9: Communications	9-1
Introduction	9-3
9.1 - RS-485 Communication Interface (Hardware)	9-3
9.2 - RS-485 Communication Parameter Settings.....	9-4
9.3 - MODBUS Communication Protocol.....	9-5
9.4 - Setting and Accessing Communication Parameters	9-6
9.5 - Modbus TCP Communication Card Specifications and Installation.....	9-7
9.5.1 - Functional Specifications.....	9-7
9.5.2 - Modbus TCP Card Dimensions	9-8

9.5.3 - Modbus TCP Card Parts.....	9-8
9.5.4 - RJ45 Pin Assignment.....	9-9
9.5.5 - Installation.....	9-10
9.5.6 - Network Configuration.....	9-11
9.5.7 - MODBUS Communication Standard.....	9-11
9.6 - EtherNet/IP Communication Card.....	9-12
9.6.1 - Functional Specifications.....	9-12
9.6.2 - Glossary.....	9-14
9.6.3 - EtherNet/IP Card Dimensions.....	9-15
9.6.4 - EtherNet/IP Card Parts.....	9-15
9.6.5 - RJ45 Pin Assignment.....	9-16
9.6.6 - EtherNet/IP Card Installation.....	9-17
9.6.7 - Network Configuration.....	9-18
9.6.8 - Explicit and Implicit (I/O Connection) Messaging.....	9-18
9.7 - Communication Card Troubleshooting.....	9-23
9.7.1 - LED Indicators.....	9-23
9.7.2 - SureServo2 Warning/Error Codes.....	9-24
9.7.3 - EtherNet/IP CIP Connection Status Code.....	9-24
9.8 - EtherNet/IP Services and Objects.....	9-25
9.8.1 - Supported Objects.....	9-25
9.8.2 - Supported Data Types.....	9-25
9.8.3 - Identity Object (Class Code: 0x01).....	9-25
9.8.4 - Message Router Object (Class Code: 0x02).....	9-26
9.8.5 - Assembly Object (Class Code: 0x04).....	9-26
9.8.6 - Connection Manager Object (Class code: 0x06).....	9-27
9.8.7 - TCP/IP Interface Object (Class code: 0xF5).....	9-27
9.8.8 - EtherNet Link Object (Class code: 0xF6).....	9-28
9.8.9 - SV2 Data Object (Class code: 0x300).....	9-29
9.9 - Ethernet Card Firmware Update.....	9-30
Chapter 10: Absolute System.....	10-1
Introduction.....	10-2
10.1 - Battery Box (Absolute Type) and Wiring.....	10-3
10.1.1 - Specifications.....	10-3
10.1.2 - Battery Box Dimensions.....	10-5
10.1.3 - Connection Cable for the Absolute Encoder.....	10-6

10.1.4 - Battery Box Cable.....	10-8
10.2 - Installation	10-9
10.2.1 - Installing the battery box in the servo system.....	10-9
10.2.2 - Installing and replacing a battery.....	10-10
10.3 - System Initialization and Operating Procedures	10-11
10.3.1 - System Initialization	10-11
10.3.2 - Pulse Number (P2.070 bit1=1).....	10-12
10.3.3 - PUU Number (P2.070 bit1=0).....	10-13
10.3.4 - Establishing the Absolute Origin Coordinates with DI/DO	10-14
10.3.5 - Establishing the Absolute Origin Coordinates with Parameters	10-14
10.3.6 - Establishing the Absolute Origin Coordinates with the PR Homing Function	10-14
10.3.7 - Reading the Absolute Position with Communication	10-15
10.3.8 - Reading the absolute position with DI/DO.....	10-16
10.4 - List of Absolute Parameters, DI/DO, and Alarms	10-18
Chapter 11: Troubleshooting	11-1
Introduction	11-2
11.1 - How to Revive a Dead (Bricked) Drive.....	11-3
11.2 - Alarm List	11-4
11.3 - Causes and Corrective Actions.....	11-11
11.3.1 - General type	11-11
11.3.2 - STO type.....	11-40
11.3.3 - Communication Type:.....	11-41
11.3.4 - Motion control type:	11-45
Appendix A: SureServo2 Specifications	A-1
Introduction	A-2
A.1 - Model Explanation	A-2
A.2 - SureServo2 Series Drive Specifications	A-2
A.2.1 - Safety Specifications.....	A-6
A.3 - SureServo2 Drive Dimensions	A-7
A.4 - SureServo2 Motor Specifications.....	A-13
A.4.1 - SureServo2 230V Motor Specifications	A-13
A.4.2 - SureServo2 460V Motor Specifications	A-17
A.4.3 - SureServo2 Motor Environmental Specifications.....	A-21
A.4.4 - SureServo2 Motor Temperature Derating.....	A-22

A.5 - SureServo2 Motor Dimensions	A-23
A.6 - Torque Features (T-N curves)	A-49
A.7 - Overload Features	A-55
A.7.1 - Load and Operating Time	A-55
Appendix B: SureServo2 Accessories	B-1
Introduction	B-3
B.1 - Power Connector	B-3
B.2 - Power Cables	B-4
B.2.1 - Up to 750W Low Inertia Motors (no brake)	B-4
B.2.2 - Up to 750W Low Inertia Motors (with brake)	B-5
B.2.3 - For SV2L-210N, SV2L-410N, SV2M-410N, SV2L-415N, SV2L-420N	B-5
B.2.4 - For SV2L-210B, SV2L-410B, SV2M-410B, SV2L-415B, SV2L-420B	B-6
B.2.5 - 230V 1 and 1.5 kW Medium Inertia Motors (no brake)	B-6
B.2.6 - 230V 1 and 1.5 kW Medium Inertia Motors (with brake)	B-7
B.2.7 - For SV2M-220N, SV2M-230N, and SV2H-430N Motors	B-7
B.2.8 - For SV2M-220B, SV2M-230B, and SV2H-430B Motors	B-8
B.2.9 - For SV2H-245N, SV2H-445N, SV2H-455N, and SV2H-475N Motors	B-8
B.2.10 - For SV2H-245B, SV2H-445B, SV2H-455B, and SV2H-475B Motors	B-9
B.2.11 - 230V 5.5 to 11 kW High Inertia Motors (with and without brake)	B-9
B.2.12 - 11 to 15 kW High Inertia Motors (460V, with and without brake)	B-10
B.2.13 - 230V 15kW High Inertia Motors (with and without brake)	B-10
B.2.14 - 230V 5.5 to 15 kW High Inertia Motors and 460V 11 and 15kW High Inertia Motors (with brake)	B-11
B.3 - Encoder Connector	B-11
B.4 - Encoder Cables	B-12
B.4.1 - Up to 750W Motors	B-12
B.4.2 - 1 to 15 kW Motors	B-12
B.5 - Secondary Encoder Cables	B-13
B.6 - External Battery	B-14
B.6.1 - Battery Box	B-14
B.6.2 - Battery Box Cable	B-14
B.7 - I/O Connector	B-15
B.8 - Additional Terminal Options	B-15
B.8.1 - Terminal Block Module	B-15
B.8.2 - Direct Mount Feedthrough Module	B-16

B.9 - Ferrite Ring	B-17
B.10 - EMI Filters	B-17
B.11 - RS-485 Splitter	B-18
B.12 - RS-485 Terminating Resistor	B-18
B.13 - USB Programming Cable.....	B-19
B.14 - Replacement Parts	B-20
B.14.1 - Connector Kit	B-20
B.14.2 - STO (Safe Torque Off) Connector for CN10	B-20
B.14.3 - Safety Specifications.....	B-20

BLANK
PAGE