



Updated USB-485M Driver Installation Instructions

This instruction sheet contains changes/updates to the original
USB-485M instructions: [USB-485M_Instructions.PDF](#)

Product:	USB-485M	Date: October 2, 2017
Document Number	USB-485M_Install_Instructions	

Update to Installation Instructions

The original USB-485M installation instructions were documented using Windows 7 on a 32-bit PC. Windows 8 and Windows 10 provide a much simpler USB-485M driver installation procedure:

- 1) Insert the mini-CD into the PC's CD drive.
- 2) For Windows7, Windows8, or Windows10 PCs, double-click the folder named "USB-485M_Drivers_Win_7_8_8.1_10".

(if using an earlier version of Windows, double-click the folder "USB-485M_Drivers_Win_XP_Server 2003_Vista_7_8_8.1")
- 3) For 64-bit machines, double-click the file CP210xVCPInstaller_x64.exe.
For 32-bit machines, double-click the file CP210xVCPInstaller_x86.exe.
- 4) Follow the prompts to install the appropriate USB-485M driver. The Installer will reference the chip-set manufacturer: Silicon Laboratories, Inc.

The latest USB-485M drivers can be found at www.automationdirect.com/pn/USB-485M