



# **WAGO Industrial Switches**



852-1816
Lean Managed Switch
16 Ports 1000BASE-T

© 2020 WAGO Kontakttechnik GmbH & Co. KG All rights reserved.

### WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27 D-32423 Minden

Phone: +49 (0) 571/8 87 – 0 Fax: +49 (0) 571/8 87 – 1 69

E-Mail: info@wago.com

Web: <u>www.wago.com</u>

### **Technical Support**

Phone: +49 (0) 571/8 87 – 4 45 55 Fax: +49 (0) 571/8 87 – 84 45 55

E-Mail: <u>support@wago.com</u>

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: <u>documentation@wago.com</u>

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.



# **Table of Contents**

1 I	Notes about this Documentation	7
1.1	Validity of this Documentation	7
1.2	Copyright	
1.3	Symbols	
1.4	Number Notation	
1.5	Font Conventions	
2 I	mportant Notes	11
2.1	Legal Bases	
2.1.1	Subject to Changes	
2.1.2	Personnel Qualification	
2.1.3	Proper Use of the Industrial Switches	
2.1.4	Technical Condition of Specified Devices	
2.1.5	Standards and Regulations for Operating the Industrial Switches	
2.2	Safety Advice (Precautions)	
2.3	Special Use Conditions for ETHERNET Devices	
3 (	General	
3.1	Scope of Supply	
3.2	Industrial ETHERNET Technology	
3.3	Switching Technology	
3.4	Autonegotiation	
3.5	Autocrossing	
3.6	Store-and-forward switching mode	
3.7	Transmission Methods	
4 [	Device Description	
4.1	View	
4.1.1	Front View	
4.1.2	Top View	
4.2	Connectors	
4.2.1	Grounding screw	
4.2.2	Power Supply (PWR/RPS)	
4.2.3	Network Connections	
4.2.3.1		
4.2.3.2		
4.3	Display Elements	28
4.3.1	Device LEDs	
4.3.2	Port LEDs	29
4.4	Operating elements	30
4.4.1	DIP Switches	30
4.4.2	Reset Button	31
4.5	Label	32
4.5.1	Hardware and Software Version	32
4.6	Technical Data	33
4.6.1	Device Data	33
4.6.2	System Data	33
4.6.3	Power Supply	33



4.6.4	Communication	34
4.6.5	Environmental Conditions	
4.7	Approvals	
5 Mc	ounting	
5.1	Installation Site	
5.1	Installation on a Carrier Rail	
5.2	Removal from Carrier Rail	
6 Co	onnect Devices	
6.1	Power Supply	
6.2	External Alarm Contact Port	
6.3	10/100/1000BASE-T Ports	39
7 Cc	nfiguration	40
7.1	Overview of Configuration Options	40
7.1.1	Web Based Management	40
7.1.2	Telnet or SSH Connection	40
7.1.3	Access via Console Port (CLI)	41
8 Dia	agnostics	42
8.1	Web Based Management for Diagnostic Function	
8.1.1	CPU Usage	
8.1.2	Memory Usage	
8.1.3	Transmitting Port Usage	
8.1.4	Receiving Port Usage	
8.1.5	Transmitting Port Broadcast Rate	
8.1.6	Receiving Port Broadcast Rate	
8.1.7	Port Link Down Statistics	
8.2	Mouse pointer	
8.3	Collapse, User Login, Topology Map	
9 Cc	onfiguration in the Web Based Management	
0.1	Information	59
9.1.1	Device Status	
9.1.2 9.1.3	Legal Information  Port Counter	
9.1.3	Utilization Information	
9.1.4	Configuration	
9.2.1	Device Discovery	
9.2.1.1	LLDP	
9.2.1.2	Manual Registration	
9.2.2	Interface	
9.2.2.1	Loop Detection	
9.2.2.1.1	·	
9.2.2.2	Mirror	
9.2.2.2.1		
9.2.2.3	Port Setup	
9.2.2.4	Port Priority	
9.2.3	SNMP	
9.2.3.1	Event Settings	
9.2.3.2	Port Event Settings	



9.2.3.3	SNMP Setup	87
9.2.3.4	SNMP Trap	89
9.2.3.5	SNMPv3 Group	
9.2.3.6	SNMPv3 User	
9.2.3.7	SNMPv3 View	95
9.2.4	System Management	97
9.2.4.1	General Setup	
9.2.4.2	SNTP	100
9.2.4.3	User Account	104
9.2.5	Storm Control	107
9.3 Se	ecurity	110
9.3.1	802.1X	110
9.3.1.1	IEEE 802.1X Communication Standard	110
9.3.1.2	Global Setup	114
9.3.1.3	Port Setup	117
9.3.2	ACL	120
9.3.3	Port Security	123
9.3.4	Service Control	126
9.3.5	VLAN	128
9.3.5.1	Port Isolation	128
9.3.5.2	VLAN Setup	131
9.4 R	edundancy	134
9.4.1	ERPS	134
9.4.2	STP/RSTP	140
9.4.2.1	STP/RSTP Setup	145
9.4.2.2	STP/RSTP Port Setup	146
9.5 Di	iagnostic	149
9.5.1	Alarm	149
9.5.1.1	Information	149
9.5.1.2	DIP Status	150
9.5.1.3	Traffic Flooding	151
9.5.1.4	Port Utilization	154
9.5.2	Dashboard Configuration	157
9.5.2.1	Quick Diagnosis Dashboard	157
9.5.2.1.1	Port Registration Learn	
9.5.2.1.2	Port Link Down Statistics	
9.5.2.1.3	Critical/Alert Threshold	159
9.5.3	Modbus	
9.5.3.1	Data Format and Function Code	161
9.5.3.2	MODBUS Register	161
9.5.4	SNMP	162
9.5.5	System Log	
9.5.5.1	Syslog Server Setting	163
9.6 M	aintenance	166
9.6.1	Reboot	166
9.6.2	Upgrade Firmware	167
9.6.3	Upload Configuration	
9.6.4	Download Configuration	169
9.6.5	Reset Configuration	170



10 Appe	endix	171
10.1 R	J-45 Cable	171
10.2 C	onfiguring in the Command Line Interface (CLI)	172
10.2.1	System Status	172
10.2.1.1	System Information	172
10.2.2	Default Settings	173
10.2.2.1	System	173
10.2.2.1.1	Jumbo Frame	174
10.2.2.1.2	SNTP	
10.2.2.1.3	Management Host	176
10.2.2.2	MAC Management	177
10.2.2.3	Port Mirroring	
10.2.2.4	Port Settings	
10.2.3	Advanced Settings	
10.2.3.1	Storm Control	
10.2.3.1.1	VLAN	
10.2.3.1.2	Port Isolation	
10.2.3.1.2.	<u> </u>	
10.2.3.2	LLDP	
10.2.3.2.1	Loop Detection	
10.2.3.2.2	STP	
10.2.3.3	Security	
10.2.3.4	Access Control List	
10.2.3.4.1	Monitor	
10.2.3.4.2	Alarm	
10.2.3.4.3	Monitor Information	
10.2.3.5	SFP Information	
10.2.3.6	Management	
10.2.3.7	SNMP	
10.2.3.8	Maintenance	
10.2.4	System Log	
10.2.4.1	User Account	
	odbus/TCP Tables	
10.3.1	Data Format and Function Code	
	odbus Register	
List of Fig	ures	198
List of Tal	nles	201



## 1 Notes about this Documentation



## **Note**

### Always retain this documentation!

This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user. In addition, ensure that any supplement to this documentation is included, if necessary.

## 1.1 Validity of this Documentation

This documentation is only applicable to WAGO ETHERNET accessory products "Lean Managed Switch" (852-1816).

## 1.2 Copyright

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will involve the right to assert damage claims.



## 1.3 Symbols

# DANGER

### Personal Injury!

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.



## **▲** DANGER

### **Personal Injury Caused by Electric Current!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

# **⚠ WARNING**

### Personal Injury!

Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.

# **△ CAUTION**

### Personal Injury!

Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

## NOTICE

### **Damage to Property!**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.



## NOTICE

### Damage to Property Caused by Electrostatic Discharge (ESD)!

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.



## Note

### **Important Note!**

Indicates a potential malfunction which, if not avoided, however, will not result in damage to property.





# Information

### **Additional Information:**

Refers to additional information which is not an integral part of this documentation (e.g., the Internet).



# 1.4 Number Notation

Table 1: Number Notation

Number Code	Example	Note
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100'	In quotation marks, nibble separated
	'0110.0100'	with dots (.)

# 1.5 Font Conventions

Table 2: Font Conventions

Font Type	Indicates	
italic	Names of paths and data files are marked in italic-type. e.g.: C:\Program Files\WAGO Software	
Menu	Menu items are marked in bold letters. e.g.: Save	
>	A greater-than sign between two names means the selection of a menu item from a menu. e.g.: File > New	
Input	Designation of input or optional fields are marked in bold letters, e.g.: Start of measurement range	
"Value"	Input or selective values are marked in inverted commas. e.g.: Enter the value "4 mA" under <b>Start of measurement range</b> .	
[Button]	Pushbuttons in dialog boxes are marked with bold letters in square brackets. e.g.: [Input]	
[Key]	Keys are marked with bold letters in square brackets. e.g.: <b>[F5]</b>	

## 2 Important Notes

This section includes an overall summary of the most important safety requirements and notes that are mentioned in each individual section. To protect your health and prevent damage to devices as well, it is imperative to read and carefully follow the safety guidelines.

## 2.1 Legal Bases

### 2.1.1 Subject to Changes

WAGO Kontakttechnik GmbH & Co. KG reserves the right to provide for any alterations or modifications. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from the granting of patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

### 2.1.2 Personnel Qualification

All sequences implemented on Series 852 devices may only be carried out by electrical specialists with sufficient knowledge in automation. The specialists must be familiar with the current norms and guidelines for the devices and automated environments.

All changes to the controller should always be carried out by qualified personnel with sufficient sufficient skills in PLC programming.

## 2.1.3 Proper Use of the Industrial Switches

The device is designed for the IP30 protection class. It is protected against the insertion of solid items and solid impurities up to 2.5 mm in diameter, but not against water penetration. Unless otherwise specified, the device must not be operated in wet and dusty environments.



### 2.1.4 Technical Condition of Specified Devices

The devices to be supplied ex works are equipped with hardware and software configurations, which meet the individual application requirements. These modules contain no parts that can be serviced or repaired by the user. The following actions will result in the exclusion of liability on the part of WAGO Kontakttechnik GmbH & Co. KG:

- Repairs,
- Changes to the hardware or software that are not described in the operating instructions,
- Improper use of the components.

Further details are given in the contractual agreements. Please send your request for modified and new hardware or software configurations directly to WAGO Kontakttechnik GmbH & Co. KG.

# 2.1.5 Standards and Regulations for Operating the Industrial Switches

Please observe the standards and regulations that are relevant to installation:

- The data and power lines must be connected and installed in compliance with the standards to avoid failures on your installation and eliminate any danger to personnel.
- For installation, startup, maintenance and repair, please observe the accident prevention regulations of your machine (e.g., DGUV Regulation "Electrical Installations and Equipment").
- Emergency stop functions and equipment must not be deactivated or otherwise made ineffective. See relevant standards (e.g., EN 418).
- Your installation must be equipped in accordance to the EMC guidelines so electromagnetic interferences can be eliminated.
- Please observe the safety measures against electrostatic discharge according to EN 61340-5-1/-3. When handling the modules, ensure that environmental factors (persons, workplace and packing) are well grounded.
- The relevant valid and applicable standards and guidelines regarding the installation of switch cabinets must be observed.



## 2.2 Safety Advice (Precautions)

For installing and operating purposes of the relevant device to your system the following safety precautions shall be observed:



## **▲** DANGER

### Do not work on devices while energized!

All power sources to the device shall be switched off prior to performing any installation, repair or maintenance work.

## DANGER

# Only install in appropriate housings, cabinets or electrical operation rooms!

WAGO's 852 Series ETHERNET Switches are considered exposed operating components. Therefore, only install these switches in lockable housings, cabinets or electrical operation rooms. Access must be limited to authorized, qualified staff having the appropriate key or tool.

## DANGER

### Ensure a standard connection!

To minimize any hazardous situations resulting in personal injury or to avoid failures in your system, the data and power supply lines shall be installed according to standards, with careful attention given to ensuring the correct terminal assignment. Always adhere to the EMC directives applicable to your application.

## NOTICE

### Do not use in telecommunication circuits!

Only use devices equipped with ETHERNET or RJ-45 connectors in LANs. Never connect these devices with telecommunication networks.

## NOTICE

### Replace defective or damaged devices!

Replace defective or damaged device/module (e.g., in the event of deformed contacts).



# **NOTICE**

# Protect the components against materials having seeping and insulating properties!

The components are not resistant to materials having seeping and insulating properties such as: aerosols, silicones and triglycerides (found in some hand creams). If you cannot exclude that such materials will appear in the component environment, then install the components in an enclosure being resistant to the above-mentioned materials. Clean tools and materials are imperative for handling devices/modules.

## NOTICE

### Clean only with permitted materials!

Clean housing and soiled contacts with propanol.

## NOTICE

### Do not use any contact spray!

Do not use any contact spray. The spray may impair contact area functionality in connection with contamination.

## NOTICE

### Do not reverse the polarity of connection lines!

Avoid reverse polarity of data and power supply lines, as this may damage the devices involved.



# NOTICE

### Avoid electrostatic discharge!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge when touched. Please observe the safety precautions against electrostatic discharge per DIN EN 61340-5-1/-3. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly grounded.

## **A CAUTION**

### Laser radiation warning!

Do not stare into openings of the connections when no cable is connected, so as not to expose the radiation.

It can emit invisible radiation.

It concerns here a laser class 1 according EN 60825-1.



# **→**

# Note

### Radio interference in residential areas

This is a Class A device. This device can cause radio interference in residential areas; in this case, the operator can be required to take appropriate measures to prevent such interference.



## 2.3 Special Use Conditions for ETHERNET Devices

If not otherwise specified, ETHERNET devices are intended for use on local networks. Please note the following when using ETHERNET devices in your system:

- Do not connect control components and control networks directly to an open network such as the Internet or an office network. WAGO recommends putting control components and control networks behind a firewall.
- Limit physical and electronic access to all automation components to authorized personnel only.
- Change the default passwords before first use! This will reduce the risk of unauthorized access to your system.
- Regularly change the passwords used! This will reduce the risk of unauthorized access to your system.
- If remote access to control components and control networks is required, use a Virtual Private Network (VPN).
- Regularly perform threat analyses. You can check whether the measures taken meet your security requirements.
- Use "defense-in-depth" mechanisms in your system's security configuration to restrict the access to and control of individual products and networks.



## 3 General

## 3.1 Scope of Supply

- 1 Industrial Lean Managed Switch with CAGE CLAMP<sup>®</sup> connection (Item. No. 2231-103/026-000)
- Protective covers for unused ports
- Operating and Assembly instructions

## 3.2 Industrial ETHERNET Technology

WAGO's rugged Lean Managed Switches are designed for industrial use in compliance with the following standards:

- IEEE 802.3 10BASE-T
- IEEE 802.3u 100BASE-TX/FX
- IEEE 802.3ab 1000BASE-T Ethernet
- IEEE 802.3x Flow Control
- IEEE 802.1d Spanning Tree Protocol (STP)
- IEEE 802.1w Rapid Spanning Tree Protocol (RSTP)
- IEEE 802.1Q VLAN Tagging
- IEEE 802.1p Prioritization
- IEEE 802.1x Port Authentication
- IEEE 802.1ab Link Layer Discovery Protocol (LLDP)
- IEEE 802.1AB LLDP-MED
- IEEE 802.3az Energy Efficient Ethernet (EEE)
- ITU-T G8032v1/v2 Ethernet Ring Protection Switching (ERPS)

The switches have a power supply with a supply voltage range of 12 ... 60 V.

Features such as autonegotiation and auto MDI/MDIX (crossover) on all 10/100/1000 BASE-T ports are also implemented.



## 3.3 Switching Technology

Industrial ETHERNET primarily uses switching technology. This technology allows any network subscriber to send at any time because the subscriber always has an open peer-to-peer connection to the next switch. The connection is bidirectional, i.e., the subscriber can send and receive at the same time (full duplex).

The targeted use of switching technology can increase real-time capability because the peer-to-peer connection prevents collisions in network communication.

## 3.4 Autonegotiation

Autonegotiation allows the switch to detect the transmission rate and operating mode for each port and the connected subscriber or subscribers, and to set them automatically. The highest possible mode (transmission speed and operating mode) is set.

Autonegotiation is available to ETHERNET subscribers connected to the switch via copper cable.

This make the switch a plug-and-play device.

## 3.5 Autocrossing

Autocrossing (MDI/MDI-X, "Medium Dependent Interface") automatically reconfigures the receive and transmit signals for twisted-pair interfaces as needed. This allow users to use wired and crossover cables in the same manner 1:1.

## 3.6 Store-and-forward switching mode

In "Store and Forward" mode, the ETHERNET switch caches the entire data telegram, checks it for errors (CRC checksum) and if there are no errors, puts it in a queue. Subsequently, the data telegram (MAC table) is selectively forwarded to the port that has access to the addressed node.

The time delay required by the data telegram to pass the store-and-forward switch depends on the telegram length.

Advantage of "Store and Forward":

The data telegrams are checked for correctness and validity. This prevents faulty or damaged data telegrams from being distributed via the network.



### 3.7 Transmission Methods

2 modes are available for data transmission in ETHERNET networks:

- Half duplex
  - An ETHERNET device can only send or receive data at one time.
  - Collision detection (CSMA/CD) is enabled.
  - The length of the network is limited by the propagation delays of the devices and transmission media.
- Full duplex
  - An ETHERNET device can send and receive data at the same time.
  - Collision detection (CSMA/CD) is disabled.
  - The length of the network only depends on the performance limits of the send and receive components used.



## 4 Device Description

The 852-1816 is a configurable industrial ETHERNET switch with sixteen 10/100/1000BASE-T ports.

Enclosed in a rugged housing, this switch offers both a redundant power supply and relay-based function monitoring. This device also streamlines network management: Commissioning and diagnostics are intuitive and can be performed without extensive IT knowledge.

The topology map clearly displays the switch and connected devices. Key diagnostic information is displayed on the diagnostics dashboard.

The following functions increase the robustness, availability and security of the network:

### Security:

- Network segmentation per IEEE802.1Q (max. 5 VLANs),
- authentication of network participants per IEEE802.1X,
- firewall functions using access-control list (max. 32 entries)
- service control,
- port security

### Availability:

- Rapid Spanning Tree Protocol (RSTP) for meshed and ring networks,
- ETHERNET Ring Protection Switching (ERPS) for up to two rings per switch,
- loop detection and
- storm control on each port

### Configuration/Diagnostics/Maintenance:

- Port mirroring,
- Modbus<sup>®</sup> registers,
- SNMP v3.
- SNMP trap events,
- alarm threshold,
- port statistics,
- backup and restore,
- system log,
- syslog server,
- command line interface with SSH/Telnet,
- topology map and
- dashboard



## 4.1 View

## 4.1.1 Front View

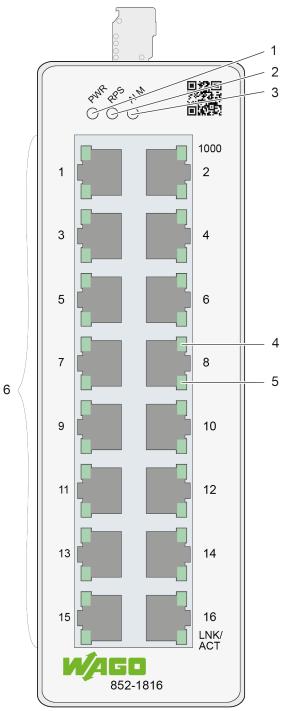


Figure 1: Front View of the Lean Managed Switch



Table 3: Legend for the Figure "Front View of the Lean Managed Switch"

Pos.	Descrip- tion	Meaning	For Details, see Section
1	PWR	Status LED, supply voltage	"Device Description" > "Display Elements"
2	RPS	Status LED, redundant supply voltage	"Device Description" > "Display Elements"
3	ALM	Status LED, alarm	"Device Description" > "Display Elements"
4	-	Status LED TX port 1000 Mbit/s (1 LED for each port)	"Device Description" > "Display Elements"
5	-	Status LED TX port LNK/ACT (1 LED for each port)	"Device Description" > "Display Elements"
6	-	Port RJ-45 (10/100M/1000BASE-T) (16)	"Device Description" >  "Connections"



## 4.1.2 Top View

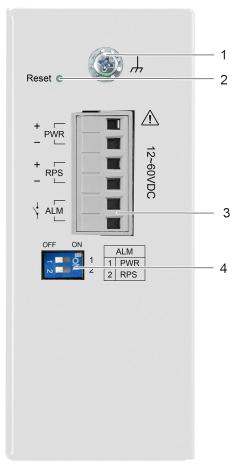


Figure 2: Top View of the Lean Managed Switch

Table 4: Legend for the Figure "Top View of the Lean Managed Switch"

No.	Descrip- tion	Meaning	For Details see Section
1	-	Grounding screw	-
2	Reset	Reset button	"Device Description" >  "Operating Elements"
3	-	Connector (male) for power consumption (PWR/RPS/ALM) and potential-free alarm contact	"Device Description" >  "Connections"
4	-	DIP Switches	"Device Description" > "Operating Elements"



#### 4.2 **Connectors**

#### 4.2.1 **Grounding screw**

The switch must be grounded.

Connect the grounding screw to the ground potential.

Do not operate the switch without an appropriately installed protective earth conductor.



Figure 3: Grounding screw

### 4.2.2 Power Supply (PWR/RPS)

The female connector (Item No. 2231-106/026-000) can easily be connected to the 6-pole male connector located on the top of the switch.

The male connector shows the following pin assignment:

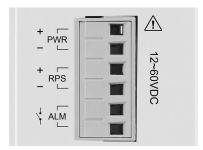


Figure 4: Power Supply (PWR/RPS)

Table 5: Legend for Figure "Power Supply (PWR/RPS)"

Connection	Description	Description	
+	PWR	Primary DC input	
-	PWR	Primary DC input	
+	RPS	Secondary DC input	
-	RPS	Secondary DC input	
	ALM	Contact for external alarm	
	ALM	Contact for external alarm	



# **NOTICE**

Warning: Damage to property caused by electrostatic discharge (ESD)!

DC Powered Switch: Power is supplied through an external DC power source. Since the switch does not include a power switch, plugging its power adapter into a power outlet will immediately power it on.



### 4.2.3 Network Connections

The Lean Managed Switch uses ports with copper connectors and supports ETHERNET and/or Fast ETHERNET.

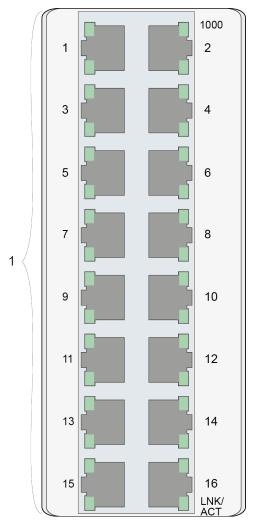


Figure 5: Network Connections

Table 6: Legend for Figure "Network Connections"

No.	Desig- nation	Meaning	For Details, see Section:
1	-		"Device Description" > "10/100/1000BASE-T Ports"

### 4.2.3.1 RJ45 Connection

The connection to ETHERNET-based fieldbuses is made via the RJ-45 connector. The pin assignment for ETHERNET RJ-45 plugs is specified in the EIA/TIA 568 standard. The conductor colors also correspond to this standard. The pin assignment and conductor color differ depending on the number of assigned conductors (4- or 8-core).



### 4.2.3.2 10/100/1000BASE-T-Ports

The 10/100/1000BASE-T ports support networks speeds of 10 Mbit/s, 100 Mbit/s and 1000 Mbit/s and can be operated in half- and full-duplex transmission modes. These ports also provide automatic crossover detection (Auto-MDI/MDI-X), with plug-and-play capabilities. Simply plug the network cables into the ports; they then adapt to the end node devices. We recommend the following cable for the RJ-45 ports:

• Cat. 5e or better with a max. cable length 100 m



# 4.3 Display Elements

The Lean Managed Switch is equipped with device LEDs and port LEDs. You can see the status quickly with the device LEDs, while the port LEDs provide information about connection actions.

### 4.3.1 Device LEDs



Figure 6: Device LEDs

Table 7: Legend for "Device LEDs" Figure

LED	Name	Status	Description
PWR	Primary Power	Green	Use the primary power supply.
	LED	Off	Primary power off or failure.
RPS	PS Redundant Power System		Use the redundant power supply.
LED		Off	Redundant power off or failure.
ALM	Alarm LED	Red	Failure of a port connection; miscellaneous alarm.
		Off	No alarm to report.

## 4.3.2 Port LEDs

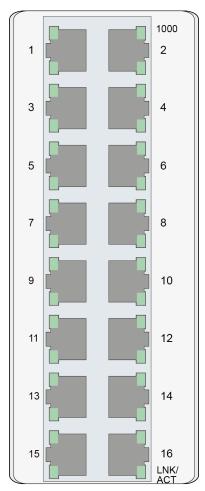


Figure 7: Port LEDs

Table 8: Legend for "Port LEDs" Figure

LED	Name	Status	Description
1000 1000BASE T- Ports LED		Green	1000 Mbit/s connection in operation.
	(1 LED for each port)	Off	Port disconnected or link failed.
LNK/ACT	10/100BASE T- Ports LED	Green	10/100/1000 Mbit/s connection in operation.
	(1 LED for each	Flashes	Data traffic via connection.
	port)	Off	Port disconnected or link failed.



## 4.4 Operating elements

### 4.4.1 DIP Switches

There is a DIP switch for alarm configuration on the top of the Lean Managed Switch. When the alarm reporting function is active, the alarm contact is switched when an alarm event occurs.

The meaning of the DIP switch settings are described below:



Figure 8: DIP Switches

Table 9: Legend for Figure "DIP Switches"

No.	Name	Status	Description
1	PWR	ON	The alarm reporting function for the primary power supply is activated.
		OFF	The alarm reporting function for the primary power supply is deactivated.
2	RPS	ON	The alarm reporting function for the secondary power supply is activated.
		OFF	The alarm reporting function for the secondary power supply is deactivated.

The user can manually switch the alarm function for the primary or redundant power supply on and off through the DIP switches.

The DIP switch must be "ON" to activate the port alarm function. The default setting is "OFF".

The following is the recommended procedure for configuring and setting DIP switches during initial installation:

- 1 Turn all DIP switches to "OFF".
- 2 Install the Lean Managed Switch in your network.
- 3 Select the port(s) to be monitored or the alarm to be activated.
- 4 Set the DIP switch of the corresponding port to "ON".
- 5 Turn the Lean Managed Switch ON.



## 4.4.2 Reset Button



Figure 9: Reset Button

Table 10: Legend for Figure "Reset Button"

Name	Status	Description
Reset	Press the Reset button for 2 seconds and release.	The system is restarted.
Delivery	Press the Reset button for	The system is reset to the switches
state	10 seconds and release.	factory default settings.



# Note

## Important Note!

Use a suitable object, e.g., ballpoint pen or straightened paper clip, to press the Reset button.



### 4.5 Label

### 4.5.1 Hardware and Software Version

There is a label with the "MAC Address" and "Serial NO" on the back of the Lean Managed Switch.



Figure 10: Label

Table 11: Legend for Figure "Label"

No.	"Serial NO" Description	
01	Firmware version (left number sequence)	
01	Hardware version (right number sequence)	

## 4.6 Technical Data

### 4.6.1 Device Data

Table 12: Technical Data - Device Data

Width	50 mm
Height	120 mm (from the top edge of the
	carrier rail)
Depth	160 mm
Weight	840 g
Degree of protection	IP30

# 4.6.2 System Data

Table 13: Technical Data - System Data

Table 16: 1661111641 Bata Cyclom Bata	
MAC table	Up to 8000 addresses
VLAN	Port based and tag based
	(max. 5 VLANs)
Jumbo Frame Size	10 kB
Maximum lengths	10/100/
	1000BASE-TX: 100 m

# 4.6.3 Power Supply

Table 14: Technical Data - Power Supply

1		
	Supply voltage	12 60 VDC



## 4.6.4 Communication

Table 15: Technical Data - Communication

Ports (copper; RJ-45)	16 x 10/100/1000BASE-T
Standards	IEEE 802.3 10BASE-T
	IEEE 802.3u 100BASE-TX/FX
	IEEE 802.3ab 1000BASE-T Ethernet
	IEEE 802.3x Flow Control
	IEEE 802.1d Spanning Tree Protocol
	(STP)
	IEEE 802.1w Rapid Spanning Tree
	Protocol (RSTP)
	IEEE 802.1Q VLAN Tagging
	IEEE 802.1p Prioritization
	IEEE 802.1x Port Authentication
	IEEE 802.1ab Link Layer Discovery
	Protocol (LLDP)
	IEEE 802.1AB LLDP-MED
	IEEE 802.3az Energy Efficient Ethernet
	(EEE)
	ITU-T G8032v1/v2 Ethernet Ring
	Protection Switching (ERPS)

## 4.6.5 Environmental Conditions


Table 16: Technical Data – Environmental Conditions

Table 10. Teerifical Data — Environmental Condition	110
Surrounding air temperature (operation)	-40 +60 °C
Surrounding air temperature (storage)	-40 °C +85 °C
UL 61010 Use	Indoor
Pollution degree	2
Relative humidity (operation)	10 95 % (without condensation)
Relative humidity (storage)	5 95 % (without condensation)
Vibration resistance	Acc. IEC 60068-2-6
Shock resistance	Acc. IEC 60068-2-27
EMC-1 immunity to interference	EN 55024
	IEC 61000-4-2
	IEC 61000-4-3
	IEC 61000-4-4
	IEC 61000-4-5
	IEC 61000-4-6
	IEC 61000-4-8
	EN 61000-6-2
EMC-1 Emission of interference	FCC Part 15 Subpart B Class A
	EN 55011: Class A
	EN 55032: Class A
	EN 61000-6-4

# 4.7 Approvals

The following approvals have been granted for the WAGO ETHERNET accessory product "Lean Managed Switch" (852-1816):

**( €** Conformity Marking

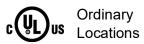

UL61010-2-201 (E175199)



### 36

### **Mounting** 5

#### 5.1 **Installation Site**

The location selected to install the Lean Managed Switch may greatly affect its performance. When selecting a site, we recommend considering the following rules:

Install the Lean Managed Switch at an appropriate place. See section "Device Description" > ... > "Technical Data" for the acceptable temperature and humidity operating ranges.

Make sure that the heat output from the Lean Managed Switch and ventilation around it is adequate. Do not place any heavy objects on the Lean Managed Switch.

#### 5.2 Installation on a Carrier Rail

The carrier rail must optimally support the EMC measures integrated into the system and the shielding of the internal data bus connections.

Place the Lean Managed Switch onto the DIN rail from the top and snap it into position.

#### 5.3 Removal from Carrier Rail

To remove the Lean Managed Switch from the carrier rail, insert a suitable tool into the metal tab under the switch and deflect the metal tab downward.

You can then release the switch down from the carrier rail and remove it upwards.



### 6 Connect Devices

### 6.1 Power Supply

The switch uses direct current power supply for 12 ... 60 V.

The primary and secondary network link is established via a 6-pin plug-in connection located on the top of the Lean Managed Switch.

The female connector (Item No. 2231-106/026-000) is composed of six connecting terminals and can be inserted and removed easily by hand to connect to the 6-pin plug connector located on the top of the switch.

The power supply for the switch automatically adjusts to the local power source and can also be switched On if no or not all patch cables are connected.

- 1. Connect a suitable grounding conductor to the grounding lug on the top of the switch.
- 2. Plug the female connector into the male connector of the switch if it has not already been plugged in. Check the tight fit of the multipoint connector by gently shaking it.
- 3. PWR +/-:

To connect or disconnect the conductors, actuate the spring directly in the female connector using a screwdriver or an operating tool and insert or remove the conductor.

- 4. Check whether the power LED "PWR" on the top of the device lights up when power is supplied to the device. If not, check to ensure that the power cable is plugged in correctly and fits securely.
- 5. RPS +/-:

To connect or disconnect the conductors, actuate the spring in the female connector directly using a screwdriver or an operating tool and insert or remove the conductor.

6. Check whether the power LED "RPS" on the top of the device lights up when power is supplied to the device. If not, check to ensure that the power cable is plugged in correctly and fits securely.



#### 6.2 External Alarm Contact Port

The Lean Managed Switch has an alarm contact connection on the top panel. For detailed instructions on how to connect the alarm contact power wires to the two ALM contacts of the 6-pin female connector, please refer to section "Power Supply (PWR/RPS)" (it is the same procedure).

You can connect the alarm circuit to any warning device already installed in the user's control room or factory floor. When a fault occurs, the Lean Managed Switch sends a signal through the alarm contact to activate the external alarm. The alarm contact has two ports that form a fault circuit for connecting to alarm systems.

An alarm is signaled in the following cases:

#### 1 PWR/RPS:

- a Power failure (power cord is disconnected, power supply malfunction, etc.)
- b Input power falls outside specification (12 ... 60 V)



#### 6.3 10/100/1000BASE-T Ports

The 10/100/1000BASE-T ports (RJ-45 ETHERNET ports) of the industrial switch support both autosensing and autonegotiation.

- 1 Connect one end of the twisted pair cable of the type Category 3/4/5/5e to an available RJ-45 port on the industrial switch and the other end to the port of the selected network node.
- 2 Check the respective port LED on the industrial switch that the connection is established.
  - (see section "Display Elements" > ... > "Port LEDs").



### 7 Configuration

### 7.1 Overview of Configuration Options

The Lean Managed Switch provides three options for advanced management features:

#### 7.1.1 Web Based Management

A menu-driven user interface can be called up from the WBM ("**W**eb **B**ased **M**anagement") via the protocols "http" or "https".



### Note

#### Standard setting

By default, the Lean Managed Switch is set to the "http" protocol.



### Note

#### **Using Protocol "https"**

If you use the protocol "https", you must activated this service (see Section "Service Control".).



### Note

#### **Additional Information**

Please refer to the section "Configuration in the Web Based Management" for a detailed description.

#### 7.1.2 Telnet or SSH Connection

- 1. Connect the computer to one of the ETHERNET ports.
- 2. Open a Telnet/SSH session to the switch's IP address. If this is your first login, use the default values.

Table 17: Default Settings for the Telnet Port

Setting	Default Value
IP Address	192.168.1.254
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
Management VLAN	1
Default Username	admin
Default Password	wago

3. Make sure your computer IP address is in the same subnet, unless you are accessing the switch through one or more routers.



# **→**

### Note

#### **Using Protocol "Telnet"**

If you use the protocol "telnet", you must activated this service (see Section "Configuration in the Web Based Management" > ... > "Service Control").

#### 7.1.3 Access via Console Port (CLI)

The following describes how to view the device configuration using the command line interface.

- 1. Connect the computer over SSH or Telnet to the Command Line Interface (CLI) of the switch.
- 2. Press [ENTER] to open the login screen.

L2SWITCH login:

3. Enter [admin] to go to CLI mode.

L2SWITCH login: admin L2SWITCH>

4. Enter **[enable]** to switch to privileged mode. Use the following default values for the username and password.

L2SWITCH>enable user:admin password: wago

5. Enter **[show running config]** to see the current device configuration.

L2SWITCH#show running-config



### Note

#### **Additional Information**

Please refer to the Section "Appendix" > ... > "Configuring in the Command Line Interface (CLI)" for a detailed description.



### 8 Diagnostics

Diagnostic will help user and network administrators for quick reference, diagnosing and identifying problems within a system and network. It is a type of network management that helps in finding network connectivity, performance and other related problems in a dashboard.



### Note

#### Changing the colors of the tiles when the threshold value changes

For easy diagnosis, you can set a change in the colors (red, yellow, green) of the tiles when the threshold values are exceeded or not reached (see Section "Dashboard Configuration".

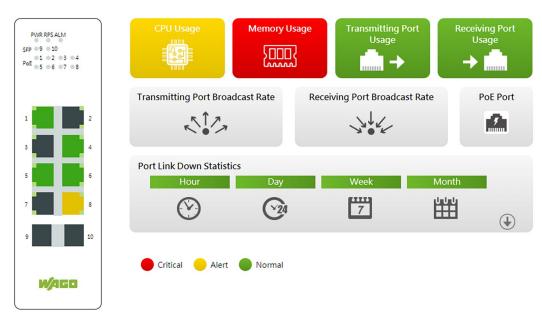


Figure 11: Dashboard - Example

### 8.1 Web Based Management for Diagnostic Function

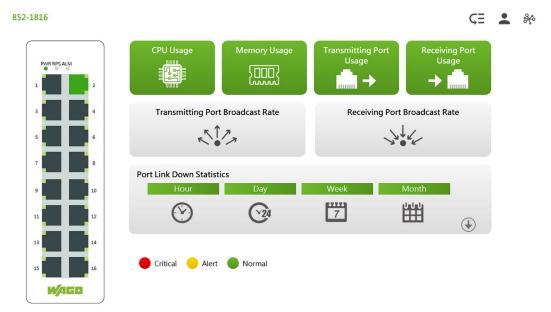


Figure 12: Dashboard

### 8.1.1 CPU Usage

User can get the switch CPU usage information in % by just one click shown below.

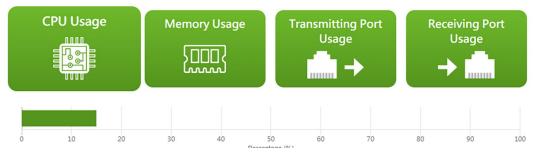


Figure 13: CPU Usage



#### 8.1.2 Memory Usage

User can get the switch memory usage information in % by just one click shown below.

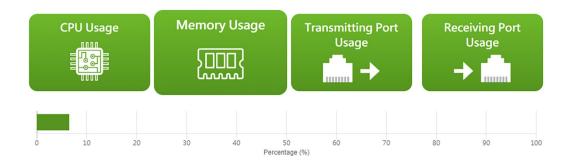


Figure 14: Memory Usage

### 8.1.3 Transmitting Port Usage

User can get the switch port Tx utilization information in % by just one click shown below.

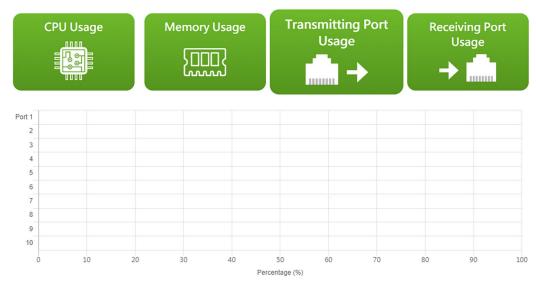


Figure 15: Transmitting Port Usage (Example)

#### 8.1.4 Receiving Port Usage

User can get the switch port Rx utilization information in % by just one click shown below.

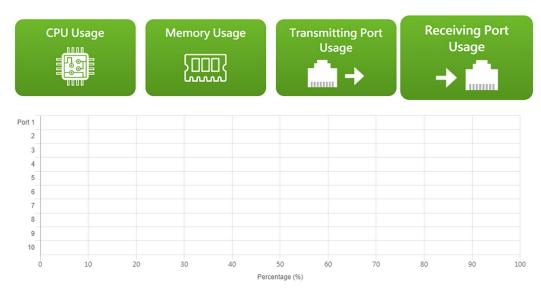


Figure 16: Receiving Port Usage (Example)

### 8.1.5 Transmitting Port Broadcast Rate

The user can get the Transmitting Port Broadcast Rate for every port.

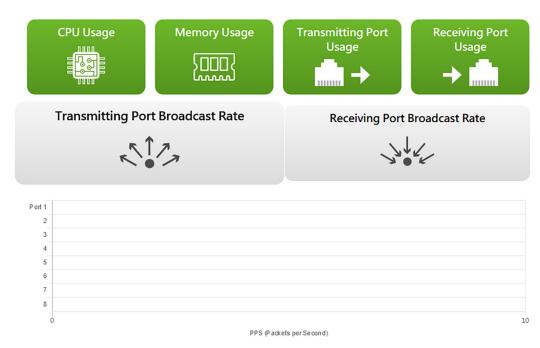


Figure 17: Transmitting Port Broadcast Rate (Example)

#### **Receiving Port Broadcast Rate** 8.1.6

The user can get the Receiving Port Broadcast Rate for every Port.

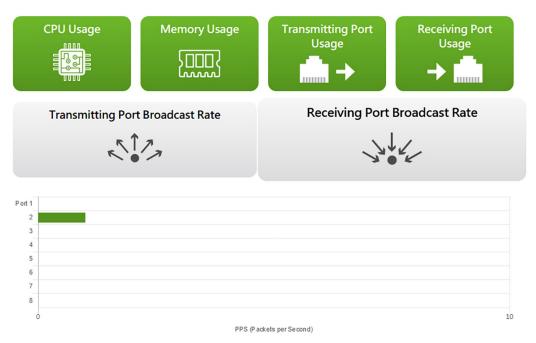


Figure 18: Receiving Port Broadcast Rate (Example)

#### 8.1.7 Port Link Down Statistics

User can get the summary of the port link down statistics per hour, day, week and month wise information in just one click shown below.

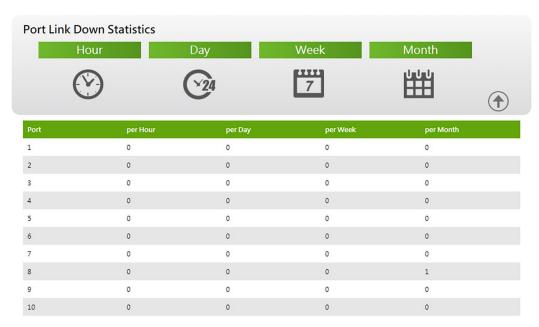


Figure 19: Port Link Down Statistics (Example)



### 8.2 Mouse pointer

User can get the detailed information of the Alarm, Alert, utilization by just pointing the curser on specified as shown below.

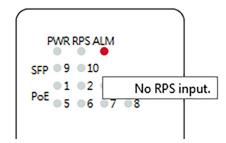


Figure 20: LED Information

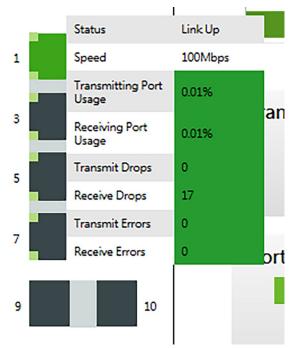


Figure 21: Port Information - Example

### 8.3 Collapse, User Login, Topology Map

Collapse option is used for the user to get back to home in the dash

board.

User Login option is to login to the device for further configuration and

maintenance.

Topology Map will show the user about the connectivity.







Figure 22: Collapse, User Login, Topology Map

Once user select login it will redirect to switch login window and below screen will appear.

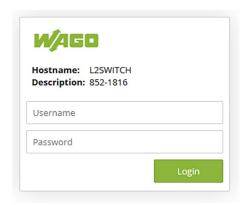


Figure 23: Log in

Table 18: Login Screen

Setting	Default Value
Default username	admin
Default password	wago



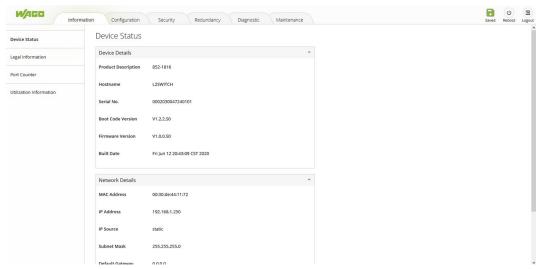


Figure 24: Tab "Information" - Menu "Device Status"



### Note

#### The Web Based Management (WBM)

For a detailed description of the configuration in Web Based Management (WBM), see Section "Configuration in the Web Based Management (WBM)".

Once user select Topology map option it will appear get to network connectivity connected to this device as shown below.

The switch offers lean network management:

Diagnostics are intuitive and can be performed without IT knowledge. The topology map clearly displays the switch and the connected nodes. Important diagnostic information is visualized.

If the connection is interrupted at a port, the connection line changes color to red.

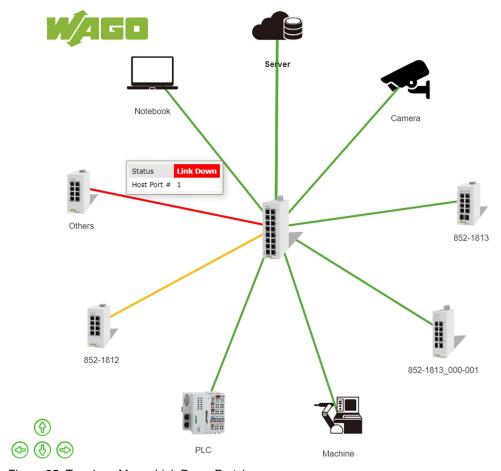


Figure 25: Topology Map – Link Down Port 1

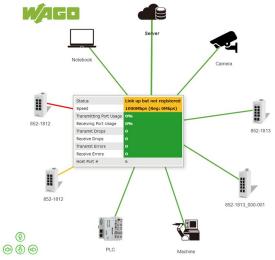


Figure 26: Topology Map – Link not registered



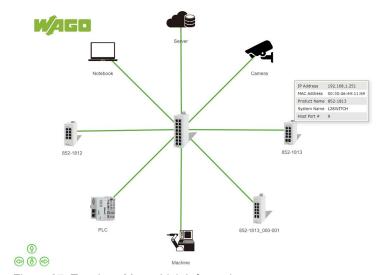


Figure 27: Topology Map – Link Information

### 9 Configuration in the Web Based Management

An internal file system and integrated Webserver can be used for configuration and administration of the system. Together, they are referred to as the Web-Based Management (WBM) system.

The HTML pages saved internally provide you with information about the configuration and status of the fieldbus node. In addition, you can also change the configuration of the device here.

You can also save HTML pages you created yourself via the implemented file system.



### Note

#### Always restart after making changes to the configuration!

The system must always be restarted for the changed configuration settings to take effect.

1. To open the WBM, launch a Web browser (e. g. Google Chrome or Mozilla Firefox).



### Note

#### Standard setting

By default, the Lean Managed Switch is set to the "http" protocol.



### Note

#### **Using Protocol "https"**

If you use "https", you must activated this service (see Section "Service Control".).

- 2. Enter the IP address of the switch.
- 3. Click [Enter] to confirm.
- 4. Enter your user name and password in the guery dialog:

User = "admin" Password = "wago"

- 5. The start page of WBM loads.
- 6. Make the desired settings.
- 7. Click [Submit] to confirm your changes, or click [Delete] to discard your changes.
- 8. To apply the settings, confirm your changes with the **[Save]** button.



You can access the corresponding WBM pages via the links in the navigation bar:

Table 19: Overview – Navigation Links and WBM Pages

#### Navigation Links and WBM Pages

#### [Information]

#### [Device Status]

- Device Details
- Network Details
- Operating Time

#### [Legal Information]

- WAGO Licenses
- Open Source Licenses
- WBM Licenses

#### [Port Counter]

Port Counter

#### [Utilization Information]

Utilization Information

#### [Configuration]

#### [Device Discovery]

- LLDP
  - LLDP Settings
  - LLDP Neighbor Information
- Manual Registration
  - Manual Registration Settings
  - Manual Registration Information

#### [Interface]

- Loop Detection
  - Configuration Settings
  - Configuration Status
- Mirror
  - Port Mirror Settings
- Port Setup
  - Port Setup
  - Port Status
- Port Priority
  - Port Priority Settings
  - Port Priority Status



#### [SNMP]

- Event Settings
  - Trap Event State Settings
- Port Event Settings
  - Port Link-Change Trap Settings
  - Port Link-Change Trap Status
- SNMP Setup
  - SNMP Setup
  - Community Name List
- SNMP Trap
  - Trap Receiver Settings
  - Trap Receiver List
- SNMPv3 Group
  - SNMPv3 Group Settings
  - SNMPv3 Group Status
- SNMPv3 User
  - SNMPv3 User Settings
  - SNMPv3 User Status
- SNMPv3 View
  - SNMPv3 View Settings
  - SNMPv3 View Status

#### [System Management]

- General Setup
  - TCP/IP Configuration
  - Hostname
  - Management VLAN
- SNTP
  - Current Time and Date
  - Time and Date Settings
- User Account
  - Add New User
  - User Account List

#### [Storm Control]

- Storm Control Settings
- Storm Control Status



#### [Security]

#### [802.1X]

- Global Setup
  - Global Setup
  - Global Status
- Port Setup
  - Port Setup
  - Port Status

#### [ACL]

- Access Control List Settings
- Access Control List Status

#### [Port Security]

- Port Security Settings
- Port Security Status

#### [Service Control]

Service Settings

#### [VLAN]

- Port Isolation
  - Port Isolation Settings
  - Egress Port
- VLAN Setup
  - VLAN Setup

#### [Redundancy]

#### [ERPS]

- ERPS Setup
- Configuration Status

#### [STP/RSTP]

- STP/RSTP Setup
  - Spanning Tree Protocol Settings
- STP/RSTP Port Setup
  - Port Parameter Settings
  - Port Status



#### ▶ [Diagnostic]

#### [Alarm]

- Information
  - Alarm Information
- DIP Status
  - DIP Switch Status
- Traffic Flooding
  - Traffic Flooding Settings
  - Traffic Flooding Status
- Port Utilization
  - Port Utilization Settings
  - Port Utilization Status

#### [Dashboard Configuration

- Port Registration Learn
- Port Link Down Statistics
- Critical/Alert Thresholds

#### [Modbus]

- Modbus TCP Setting
- Modbus TCP Information

#### [SNMP]

- Event Settings
  - Trap Event State Settings
- Port Event Settings
  - Port Link-Change Trap Settings
  - Port Link-Change Trap Status
- SNMP Setup
  - SNMP Setup
  - Community Name List
- SNMP Trap
  - Trap Receiver Settings
  - Trap Receiver List
- SNMPv3 Group
  - SNMPv3 Group Settings
  - SNMPv3 Group Status
- SNMPv3 User
  - SNMPv3 User Settings
  - SNMPv3 User Status



- SNMPv3 View
  - SNMPv3 View Settings
  - SNMPv3 View Status

#### [System Log]

Syslog Server Settings

#### [Maintenace]

- Reboot
- Upgrade Firmware
- Upload Configuration
- Download Configuration
- Reset Configuration

The settings/configuration of the Lean Managed Switch can be made on these WBM pages.

There are tab pages on some WBM pages for the settings/configurations.

The default values are displayed in **bold**.

### 9.1 Information

### 9.1.1 Device Status

#### **Device Status**

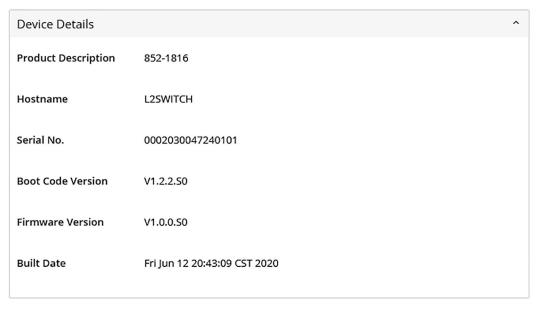


Figure 28: Tab "Information" – Menu "Device Status" – "Device Details"

Table 20: Tab "Information" - Menu "Device Status" - "Device Details"

Parameter	Description	
Product Description	This display field shows the model name of the switch.	
Host Name	This display field shows the host name of the switch.	
Serial No.	This display field shows the serial number.	
Boot Code Version	This display field shows the boot code version.	
Built Date	This display field shows the create date of the primary firmware currently installed.	





Figure 29: Tab "Information" – Menu "Device Status" – "Network Details"

Table 21: Tab "Information" – Menu "Device Status" – "Network Details"

Parameter	Description	
MAC Address	This display field shows the MAC (Media Access Control) address of the switch.	
IP Address	This display field shows the IP address of the switch.	
IP Source	This display field shows the Static IP or DHCP.	
Subnet Mask	This display field shows the subnet mask of the switch.	
Default Gateway	This display field shows the default gateway of the switch.	



Figure 30: Tab "Information" – Menu "Device Status" – "Operating Time"

Table 22: Tab "Information" – Menu "Device Status" – "Operating Time"

Parameter	Description	
Total	This display field shows the operating time (dd:hh:mm:ss).	

### 9.1.2 Legal Information

In this menu, you can find informations about:

- WAGO Licenses
- Open Source Licenses and
- WBM Licenses



### 9.1.3 Port Counter

### Port Counter

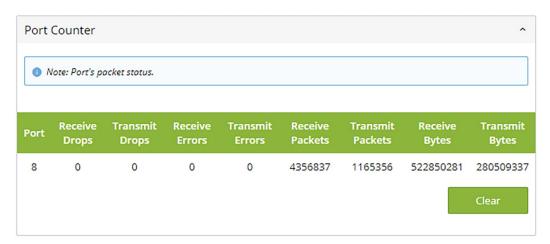


Figure 31: Tab "Information" - Menu "Port Counter"

Table 23: Tab "Information" - Menu "Port Counter"

Port Statistics		
Parameter	Default	Description
Port		This column shows the port numbers.
Receive Drops		This column displays the number of dropped data packets on the receiving line.
Transmit Drops		This column displays the number of dropped data packets on the transmission line.
Receive Errors		This column displays the errors on the receiving line.
Transmit Errors		This column displays the errors on the transmission line.
Receive Packets		This column displays the number of data packets received since power ON.
Transmit Packets		This column displays the number of data packets transmitted since power ON.
Receive Bytes		This column displays the number of bytes received on the port since power ON.
Transmit Byte		This column displays the number of bytes sent on the port since power ON.

### 9.1.4 Utilization Information

### Utilization Information

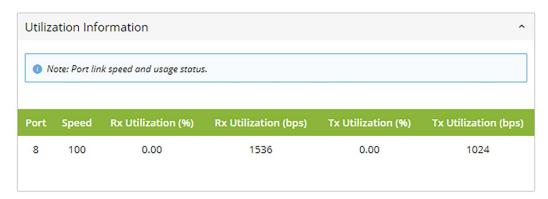


Figure 32: Tab "Information" - Menu "Utilization Information"

Table 24: Tab "Information" – Menu "Utilization Information"

Port Utilization Status		
Parameter	Default	Description
Port		This column shows the port numbers.
Speed		This column displays the transfer rate.
RX Port Utilization (%)		This column displays the RX bandwidth utilization as a percentage.
RX Port Utilization (bps)		This column displays the RX bandwidth utilization in bps.
TX Port Utilization (%)		This column displays the TX bandwidth utilization as a percentage.
RX Port Utilization (bps)		This column displays RX bandwidth utilization in bps.



### 9.2 Configuration

#### 9.2.1 Device Discovery

#### 9.2.1.1 LLDP

The LLDP ("Link Layer Discovery Protocol") described in this standard allows stations connected to a LAN according to IEEE 802® to send information to other stations connected to the same LAN. The information includes essential system functions, including the management address or addresses of an entity or entities that provide management of these functions, as well as identification of the station's access point to the IEEE802 LAN required by the management entity or entities.



### Note

#### For LLDP protocol devices.

If enabled, LLDP protocol devices information will appear on the topology map. The switch information will be shared with other devices connected within the same network

#### LLDP

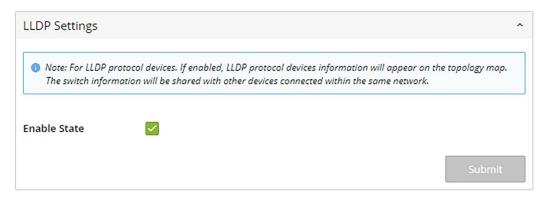


Figure 33: Tab "Configuration" - Menu "LLDP Settings"

Table 25: Tab "Configuration - Menu "LLDP Settings"

LLDP Settings			
Parameter	Default	Description	
State		☐ The LLDP function is globally not enabled for the switch.	
		☐ The LLDP function is globally enabled for the switch.	



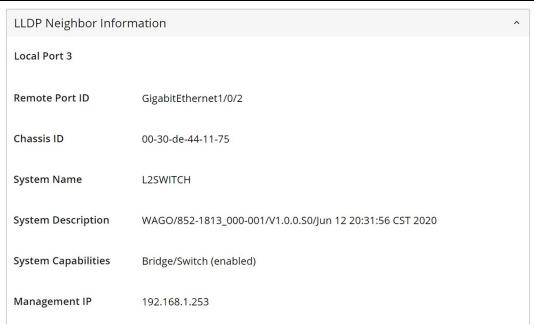


Figure 34: Tab "Configuration" – Menu "LLDP Neighbor Information"

Table 26: Tab "Configuration" – Menu "LLDP Neighbor Information"

LLDP Neighbor Information		
Parameter	Default	Description
Local Port X		This field displays the port numbers.
Remote Port ID		This field displays the ID of the connected port.
Chassis ID		This field displays the neighbor port's chassis ID.
System Name		This field displays the neighbor port's system name.
System Description		This field displays the neighbor port's system description.
System Capabilities		This field displays the system capabilities of the neighbor port.
Management IP		This field displays the neighbor port's management address.



#### 9.2.1.2 Manual Registration



## Note

#### Manual input of the device information

The users need to input the device information manually to appear on the topology map.

### Manual Registration

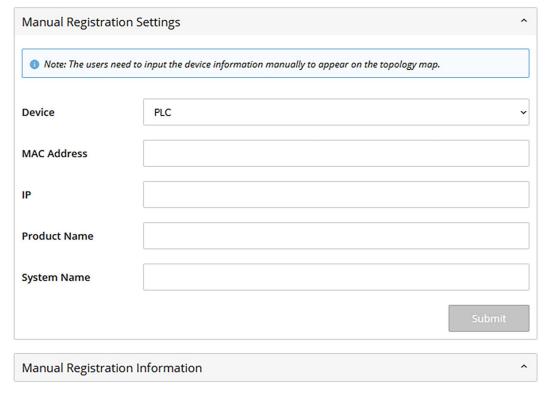


Figure 35: Tab "Configuration" – Menu "Manual Registration"

Table 27: Tab "Configuration" - Menu "Manual Registration"

Manual Registration Settings		
Parameter	Default	Description
Device	PLC Switch Camera Computer Display Machine Notebook Others Router Server Wireless	Select the suitable device name in the selection box.
MAC Address		In the input field, enter the MAC address of the device.
IP		In the input field, enter the IP address of the device.
Product Name		In the input field, enter the product name of the device.
System Name		In the input field, enter the system name of the device.



#### 9.2.2 Interface

#### 9.2.2.1 Loop Detection

"Loop Detection" handles problems with loops in the network periphery. These problems can occur if a port is connected to a switch that is in a loop state. A loop state occurs as a result of user error. It happens when two ports on a switch are connected with the same cable. When a switch in loop state sends out broadcast messages, the messages loop back to the switch and are re-broadcast again and again, causing a "Broadcast Traffic flooding."

The "Loop Detection" function sends probe packets periodically to detect whether the port is connected to a network in loop state. The switch shuts down a port if the switch detects probe packets looping back to the same port.

#### **9.2.2.1.1 Loop Recovery**

When "Loop Detection" is enabled, the switch sends a probe packet every two seconds and waits to receive the packet. If it receives the packet at the same port, the switch disables the port. After a defined time period ("Recovery Time"), the switch re-enables the port and executes "Loop Detection" again.

The switch generates a "Syslog" (system log), internal log messages and "SNMP Traps" if it disables a port after "Loop Detection."



### Note

#### Loop detection

Loop detection is a link-layer protocol designed for Ethernet networks. An interface with loop detection enabled identify and remove the loops in the same network.



### Loop Detection

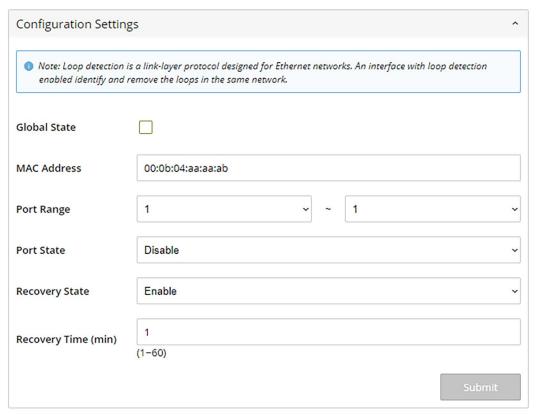


Figure 36: Tab "Configuration" – Menu "Loop Detection" – "Configuration Settings"



Table 28: Tab "Configuration" – Menu "Loop Detection" – "Configuration Settings"

Configuration Settings		
Parameter	Default	Description
Global State	V	☐ The Loop Detection function is not enabled for the switch.
		☐ The Loop Detection function is enabled for the switch.
MAC Address		In the input field, enter the destination MAC address to which the probe packets should be sent. If the port receives the same packets, it is shut down.
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Loop Detection" settings.
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Loop Detection" settings.
Port State	Disable	Select "Disable" in the selection box to disable the "Loop Detection" function for the switch.
	Enable	Select "Enable" in the selection box to enable the "Loop Detection" function for the switch.
Recovery State	Enable	Select "Enable" in the selection box to automatically re-enable the port after the designated "Recovery Time" has elapsed.
	Disable	Select "Disable" in the selection box to disable this function.
Recovery Time (min) (Range: 1~60)	1	In the input field, enter the value for the "Recovery Time" (in minutes) that the switch waits before reenabling the port.  Time: 1 60 min

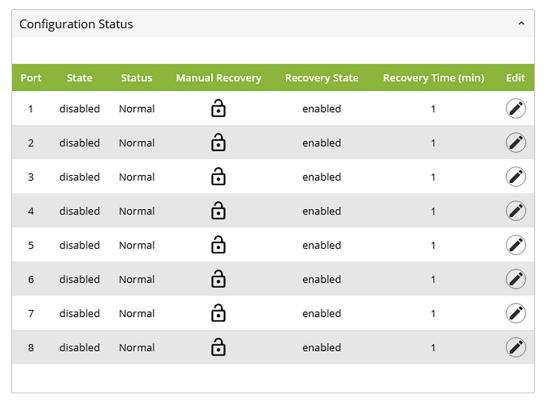


Figure 37: Tab "Configuration" – Menu "Loop Detection" – "Configuration Status" (Example)



Table 29: Tab "Configuration" – Menu "Loop Detection" – "Configuration Status" (Example)

Loop Detection Status		
Parameter	Default	Description
Port	1 8 (16)	This column shows the port numbers.
State	Enable Disable	This column indicates whether the "Loop Detection" function is enabled or disabled.
Status	None Normal	This column indicates whether a port is blocked.
Manual Recovery		This column indicates whether the manual recovery is complete.
Recovery State	Enable Disable	This column indicates whether the "Loop Recovery" function is enabled or disabled.
Recovery Time (min)	1 60	This column displays the "Recovery Time" for the "Loop Detection" function.
Edit		Preselection for editing.



#### 9.2.2.2 Mirror

Port mirroring is used on switches to send a copy of network packets sent/received on one switch port or a range of switch ports to a network monitoring connection on another switch port (Monitor Port).

Port mirroring is used in network systems that require monitoring of network traffic, such as an IDS ("Intrusion Detection System").

Port mirroring, together with an NTA ("Network Traffic Analyzer"), can help to monitor network traffic. Users can monitor the selected ports ("Source Ports") for egress and/or ingress packets.

#### Source Mode

"Ingress": The incoming data packets are copied and forwarded

to the monitor port.

• "Egress": The outgoing data packets are copied and forwarded

to the monitor port.



### Note

#### **Important Note!**

- 1. The monitor port cannot be a trunk member port.
- 2. The monitor port cannot be an ingress or egress port.
- If a port has been configured as a source port and the user configures the port as a destination port, the port will be removed from the source ports automatically.

#### 9.2.2.2.1 Port Settings

#### **Duplex Mode**

A duplex communication system is a system composed of two connected devices that can communicate with each other in both directions.

#### Half-Duplex

A half-duplex system provides for communication in both directions, but only one direction at a time (not simultaneously).

One device receives a signal and must wait for the other device to stop transmitting before replying.



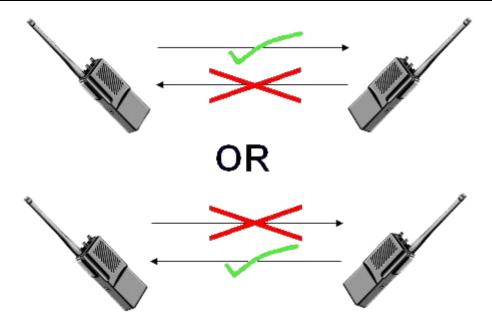


Figure 38: Half-Duplex Mode

#### **Full-Duplex**

A full-duplex system (also known as a double-duplex system) can communicate simultaneously in both directions.

Fixed-line telephone networks, for example, are full-duplex, since both callers can talk and listen at the same time.



Figure 39: Full-Duplex Mode



#### Auto MDI/MDIX

MDI ("**M**edium-**D**ependent Interface") is part of the transmitter/receiver unit (transceiver) of a network device.

Auto-MDIX ("**Aut**omatic **M**edium-**D**ependent **I**nterface **C**rossover") is a network technology integrated in the port that automatically detects the required network cable type ("Straight-through" or "Crossover" cable) and configures the connection accordingly.

"Crossover" cables are then unnecessary for connecting devices.

The interface corrects incorrect cabling automatically.

For Auto-MDIX to work properly, the speed must be set to "Auto" for the interface and in the duplex settings.

#### **Auto-Negotiation**

Auto-negotiation is a method in which two interconnected ETHERNET network ports (e.g., the network port of a PC and a port of a router, hub or switch that is connected to it) independently negotiate and configure the maximum transmission speed and the duplex process.

Auto-negotiation only applies to twisted-pair cables – not to WLAN, fiber optic or coaxial cable connections.

If the port does not support auto-negotiation or turns off this feature, the switch determines the connection speed by detecting the signal on the cable and using half duplex mode.

If auto-negotiation is enabled on the switch, a port uses its pre-configured settings for speed and duplex mode when establishing the connection.

This should ensure that the same settings have been made on the port, allowing the connection to be established.



#### Flow Control

"Flow Control" regulates the transmission of signals by adjusting them to the bandwidth on the input port.

Higher data traffic on the port decreases the bandwidth and can overflow the buffer memory, which can lead to packet and frame loss.

According to IEEE 802.3x, the switch uses "Flow Control" in full-duplex mode and "Backpressure Flow Control" in half-duplex mode.

With flow control, the switch is used in full-duplex mode to send a pause signal to the sending port, causing it to temporarily stop sending signals when the receiving port memory buffers fill.

For "Backpressure Flow Control", the switch sends a collision signal to the sending port in half-duplex mode (mimicking a state of packet collision), causing the sending port to temporarily stop sending signals and to resend the signals later.



## Note

**Support for "Force Mode"** 

1000 BASE-T does not support "Force Mode".





## Note

#### **Using the Port Mirroring**

The Port Mirroring is used for network monitoring by sending a copy of entering or existing network packets on a port of the switch to one or a range of switch ports.

#### Mirror

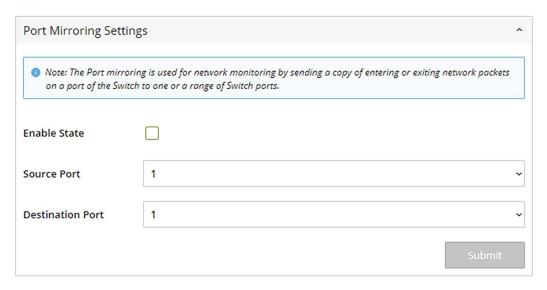


Figure 40: Tab "Configuration" – Menu "Mirror" – "Port Mirroring Settings"

Table 30: Tab "Configuration" – Menu "Mirror" – "Port Mirroring Settings"

Port Mirror Settings			
Parameters	Default	Description	
Enable State		☐ The mirror function is not enabled for the switch.	
		☐ The mirror function is enabled for the switch.	
Source Port	1 8 (16)	Select the source port for the mirror function in the selection field.	
Destination Port	1 8 (16)	Select the destination port for the mirror function in the selection field.	

### 9.2.2.3 Port Setup



## Note

### Select a range of ports

Range of ports can be selected to enable/disable the state with duplex (speed).

### Port Setup

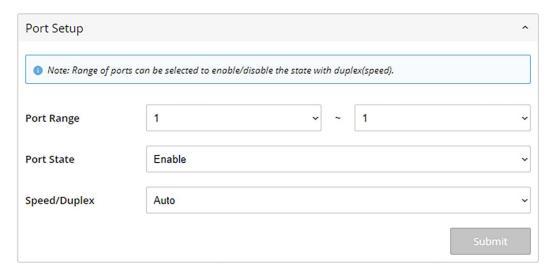


Figure 41: Tab "Configuration" - Menu "Port Setup" - "Port Setup"



Table 31: Tab "Configuration" – Menu "Port Setup" – "Port Setup"

Port Setup		
Parameters	Default	Description
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Mirror" settings.
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Mirror" settings.
Port State	Disable	Select "Disable" to disable the port.
	Enable	Select "Enable" to enable the port.
Speed/Duplex	Auto	Select the speed and duplex mode of the port.  Nway means Autonegotiation in the Ethernet.
	10 Mbit/s /	- Nway means Autonegotiation in the Ethernet.
	Full	
	10 Mbit/s /	
	Half	
	100 Mbit/s /	
	Full	
	100 Mbit/s /	
	Half	
	1000 Mbit/s /	
	Full	

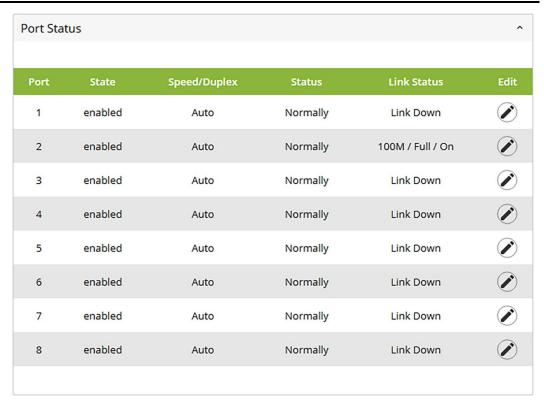


Figure 42: Tab "Configuration" – Menu "Port Setup" – "Port Status" (Example)

Table 32: Tab "Configuration" – Menu "Port Setup" – "Port Status" (Example)

Port Status		
Parameters	Default	Description
Port	1 8	This column displays the port numbers.
State		This column displays if the port is enabled or disabled.
Speed/Duplex		This column displays the configured speed (10 Mbit/s, 100 Mbit/s or 1000 Mbit/s) and duplex mode (full or half-duplex) for a port.
Status		This column displays the deviations.
Link Status		This column displays the link status of a port. If the port is up, the speed, duplex mode and "Flow Control" settings are displayed. "Link Up" displays that the port is either disabled or no device is connected.
Edit		Preselection for editing.



#### 9.2.2.4 Port Priority

Typically, networks operate on a best-effort delivery basis, which means that all traffic has equal priority and an equal chance of being delivered in a timely manner. When congestion occurs, all traffic has an equal chance of being dropped.

Using Port Priority feature, you can select specific network traffic, and prioritize it according to its relative importance. Implementing Port Priority in your network makes network performance more predictable and bandwidth utilization more effective.



## **Note**

#### Select the priority of ports

Range of ports can be selected to priority of low/medium/high.

### Port Priority

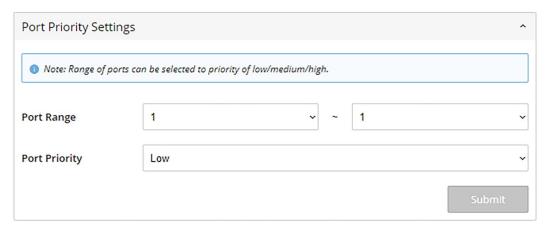


Figure 43: Tab "Configuration" - Menu "Port Priority" - "Port Priority Settings"

Table 33: Tab "Configuration" – Menu "Port Priority" – "Port Priority Settings"

Port Priority Settings		
Parameter	Default	Description
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Port Setup" settings.
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Port Setup" settings.
Port Priority	Low	In this selection box, select "Low" for applications with high data transfer.
	Medium	In this selection box, select "Medium" for normal applications.
	High	In this selection box, select "High" for time critical applications.



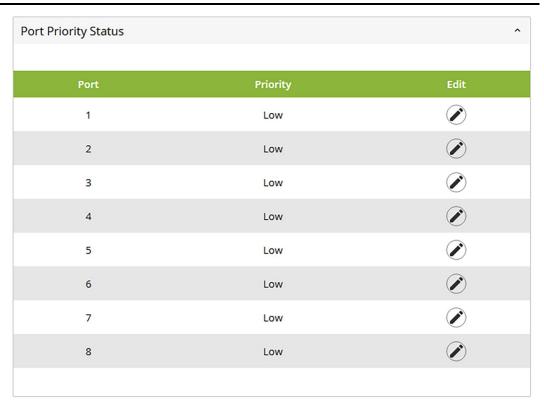


Figure 44: Tab "Configuration" – Menu "Port Priority" – "Port Priority Status" (Example)

Table 34: Tab "Configuration" – Menu "Port Priority" – "Port Priority Status" (Example)

Port Priority Status		
Parameters	Default	Description
Port	1 8 (16)	This column displays the port numbers.
Priority	Low Medium High	This column displays the priority of the port.
Edit		Preselection for editing.



#### 9.2.3 **SNMP**

SNMP ("Simple Network Management Protocol") is used in network management systems to monitor network-attached devices for conditions that warrant administrative attention. SNMP is a component of the Internet Protocol Suite as defined by the Internet Engineering Task Force (IETF). It consists of a set of standards for network management, including an application layer protocol, a database schema, and a set of data objects.

SNMP exposes management data in the form of variables on the managed systems, which describe the system configuration. These variables can then be queried (and sometimes set) by managing applications.

SNMP community act like passwords and are used to define the security parameters of SNMP clients in an SNMP v1 and SNMP v2c environments. The default SNMP community is "public" for both SNMP v1 and SNMP v2c..

Network ID of Trusted Host:

The IP address is a combination of the Network ID and the Host ID.

Network ID = (Host IP & Mask).

User need only input the network ID and leave the host ID to 0. If user has input the host ID, such as 192.168.1.102, the system will reset the host ID, such as 192.168.1.0.



### 9.2.3.1 Event Settings



## Note

#### Select the type of SNMP trap event

SNMP trap event type can be selected to trigger SNMP Manager.

### **Event Settings**

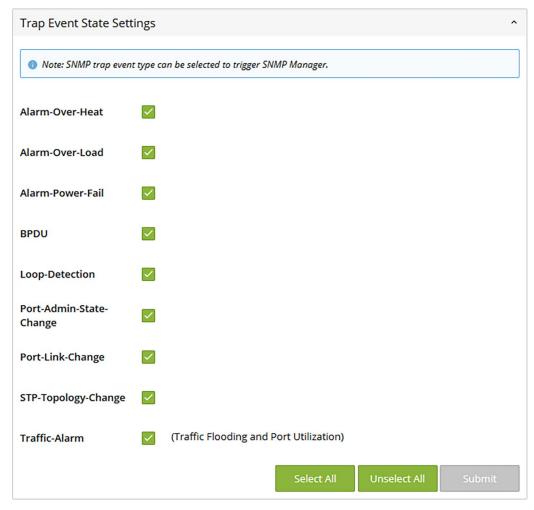


Figure 45: Tab "Configuration" – Menu "SNMP" – "Event Settings" – "Trap Event State Settings"



Table 35: Tab "Configuration" – Menu "SNMP" – "Event Settings" – "Trap Event State Settings"

Trap Event State Settings		
Parameter	Default	Description
Alarm-Over-Heat	Ø	Enables/disables the SNMP trap when the system temperature is too high.
Alarm-Over-Load		Enables/disables the SNMP trap when the system is over load.
Alarm-Power-Fail	<b>▼</b>	Enables/disables the SNMP trap when system capacity is - overvoltage - undervoltage - RPS overvoltage - RPS undervoltage
BPDU	团	Enables/disables the SNMP trap when the port is blocked by - BPDU Guard - BDPU Root - BPDU port state changed
Loop-Detection	Ø	Enables/disables the SNMP trap when the port is blocked by loop detection.
Port-Admin-State- Change	Ø	Enables/disables the SNMP trap when the port is enabled/disabled by the Administrator.
Port-Link-Change	Ø	Enables/disables the SNMP trap when the port switches between upward and downward.
STP-Topology-Change	Ø	Enables/disables the SNMP trap when the STP topology changes.
Traffic-Alarm (Traffic Flooding and Port Utilization)	Ø	Enables/disables the SNMP trap when the port is blocked by the traffic monitor.

### 9.2.3.2 Port Event Settings



## Note

#### Generate port link-change trap

To generate port link-change trap user enable/disable for individual or the range.

## Port Event Settings

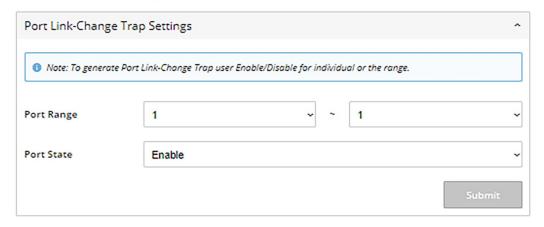


Figure 46: Tab "Configuration" – Menu "SNMP" – "Port Event Settings" – "Port Link-Change Trap Settings"

Table 36: Tab "Configuration" – Menu "SNMP" – "Port Event Settings" – "Port Link-Change Trap Settings"

Octings			
Port Link-Change Trap Settings			
Parameter	Default	Description	
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Port Event Settings" settings.	
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Port Event Settings" settings.	
Port State	Disable	Select "Disable" in the selection box to disable the "Port Event Settings" function for the switch.	
	Enable	Select "Enable" in the selection box to enable the "Port Event Settings" function for the switch.	



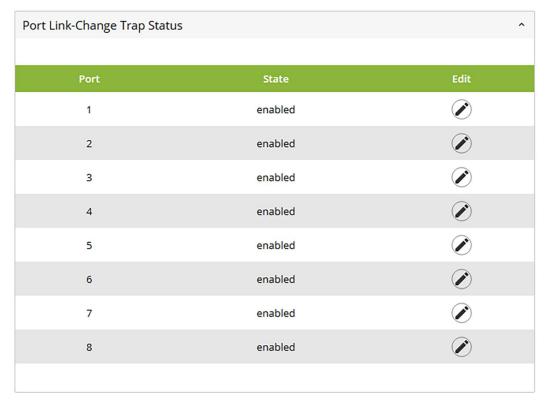


Figure 47: Tab "Configuration" – Menu "SNMP" – "Port Event Settings" – "Port Link-Change Trap Status" (Example)

Table 37: Tab "Configuration" – Menu "SNMP" – "Port Event Settings" – "Port Link-Change Trap Status" (Example)

Port Link-Change Trap Status		
Parameter	Default	Description
Port	1 8 (16)	This column displays the port range.
State	Enable Disable	This field displays the port status.
Edit		Preselection for editing.

### 9.2.3.3 SNMP Setup



## Note

#### **Simple Network Management Protocol (SNMP)**

Configure the Simple Network Management Protocol (SNMP) services.

### **SNMP Setup**

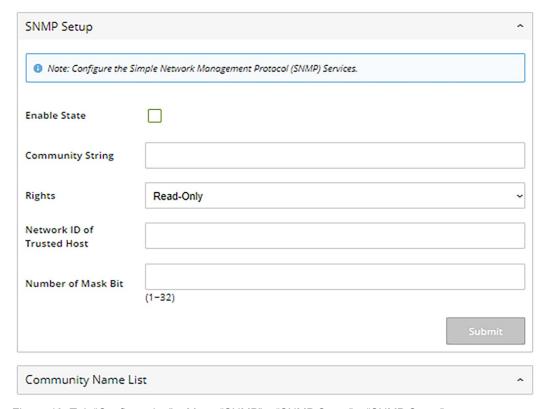


Figure 48: Tab "Configuration" – Menu "SNMP" – "SNMP Setup" – "SNMP Setup"



Table 38: Tab "Configuration" - Menu "SNMP" - "SNMP Setup" - "SNMP Setup"

SNMP Setup		
Parameter	Default	Description
Enable State		☐ The "SNMP Setup" function is not enabled for the switch.
		☐ The "SNMP Setup" function is enabled for the switch.
Community String		Enter a "Community string"; this will act as a password for requests from the management station. An SNMP community string is a text string that acts as a password. It is used to authenticate messages that are sent between the management station (the SNMP manager) and the device (the SNMP agent). The "Community String" is included in every packet that is transmitted between the SNMP manager and the SNMP agent.
Rights	Read-Only	Select "Read-Only" in the selection box to allow the SNMP manager using this string to collect information from the switch.
	Read/ Write	Select "Read/Write" in the selection box to allow the SNMP manager using this string to create or edit MIBs (configure settings on the switch).
Network ID of Trusted Host		Enter the IP address of the remote SNMP management station in decimal-point notation (e.g., 192.168.1.0).
Number of Mask Bit (1-32)		Select the length of the subnet mask bits in the selection field.
<b>Community Name List</b>		
Parameter	Default	Description
No.		This column displays the "Community" number. It is used for identification only. Click a number to modify the setting for a specific "Community."
Community String		This column displays the "SNMP Community String." This is a text element that acts as a password.
Rights	Read-Only, Read/ Write	This column displays the rights for the "SNMP Community String."
Network ID of the Trusted Host		This column displays the IP address of the remote SNMP management station after it has been modified by the subnet mask.
Number of Mask Bit		This column displays the subnet mask for the IP address of the remote SNMP management station.
Action		Click [Delete] to delete a specific "Community String."

### 9.2.3.4 SNMP Trap



# Note

## **Trap Receiver Settings**

Configure SNMP trap receiver IP, community, version to send the events to SNMP Manager.

### **SNMP Trap**

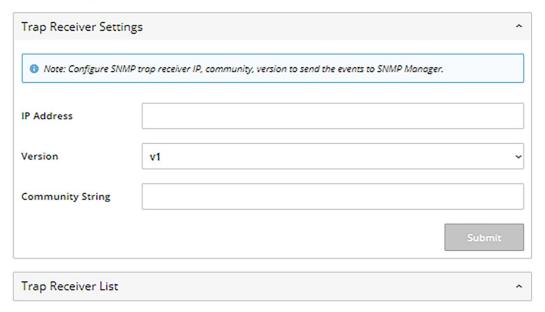


Figure 49: Tab "Configuration" - Menu "SNMP" - "SNMP Trap" - "Trap Receiver Settings"



Table 39: Tab "Configuration" – Menu "SNMP" – "SNMP Trap" – "Trap Receiver Settings"

Trap Receiver Setting	ıs .	
Parameter	Default	Description
IP Address		Enter the IP address of the remote trap station in decimal-point notation.
Version	v1	Select "v1" in the selection box if you want to use SNMP Version v1.
	v2c	Select "v2c" in the selection box if you want to use SNMP Version v2c.
Community String		Enter the IP address of the remote SNMP management station in decimal-point notation (e.g., 192.168.1.0).
Trap Receiver List	·	
Parameter	Default	Description
No.		This column displays the "Community" number. It is used for identification only.  Click a number to modify the setting for a specific "Community."
IP Address		This column displays the IP address of the remote trap station.
Version	v1 v2c	This column displays the SNMP version in use.
Community String		This column displays the "Community String" used by the remote trap station.
Action		Click the [Delete] button to delete a configured trap receiver station.

### 9.2.3.5 SNMPv3 Group



## Note

#### Possibilities of SNMPv3 groups

The SNMPv3 groups allow you to combine users into groups of different authorization and access privileges.

### SNMPv3 Group

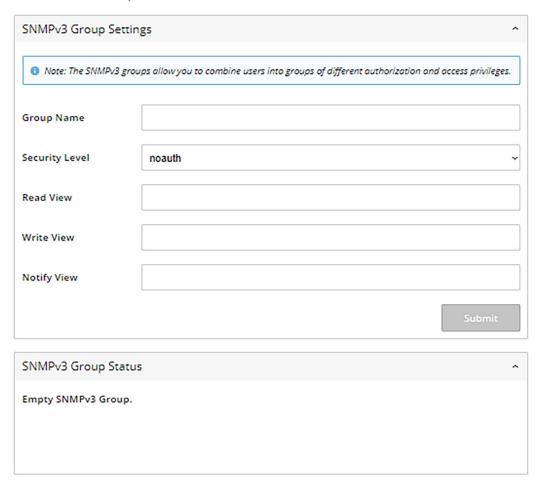


Figure 50: Tab "Configuration" - Menu "SNMP" - "SNMPv3 Group"



Table 40: Tab "Configuration" – Menu "SNMP" – "SNMPv3 Group"

SNMPv3 Group Sett	ings	
Parameter	Default	Description
Group Name		In the input field, enter the group name for the SNMPv3 group.
Security Level		This selection box is used to select the security level.
	noauth auth priv	Select the respective security level in the selection box.
Read View	None	In the input field, enter the name of the objects that should be available in the Read view.  If you do not enter an object, all objects will be readable.
Write View	None	In the input field, enter the name of the objects to which you want to grant write access.  If no write or notify view is defined, no write access is granted and no objects can send notifications to members of the group.
Notify View	None	In the input field, enter the name of the object that can receive user notifications.  By using a notify view, a group determines the list of notifications its users can receive.
SNMPv3 Group State	us	
Parameter	Default	Description
Group Name		This column displays the group name.
Security Model		This column displays the selected security level. Always displayed v3: User-based Security Model (USM)
Security Level		This column displays the selected security level.
Read View		This column displays the Read view.
Write View		This column displays the Write view.
Notify View		This column displays the Notify view.
Action		Click [Delete] to delete a specific entry.

#### 9.2.3.6 SNMPv3 User



## Note

### **SNMPv3** Agent support

SNMPv3 Agent provides support for three levels of users, which will be combined to group.

#### SNMPv3 User

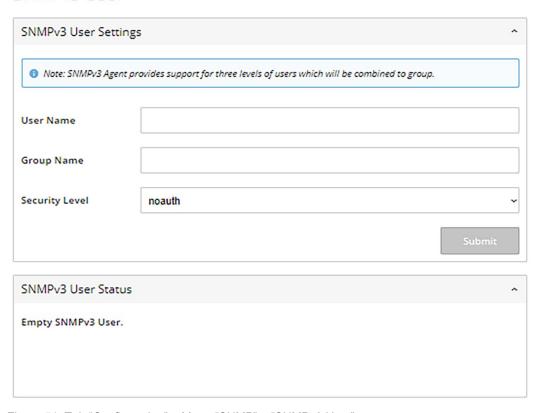


Figure 51: Tab "Configuration" – Menu "SNMP" – "SNMPv3 User"



Table 41: Tab "Configuration" – Menu "SNMP" – "SNMPv3 User"

SNMPv3 User Settings			
Parameter	Default	Description	
User Name		In the input field, enter a new user name, or modify an existing user name.	
Group Name		In the input field, enter the group name for the SNMPv3.	
Security Level		This selection box is used to select the security level.	
	noauth	If you selected "noauth" in the selection box, you then cannot change the "Auth Algorithm" or the "Priv Algorithm."	
	auth	If you selected "auth" in the selection box, you then can change the "Auth Algorithm" and the "Auth Password."	
	priv	If you selected "priv" in the selection box, you then can change the "Auth Algorithm," the "Priv Algorithm" and the "Priv Password."	
SNMPv3 User Status	3	·	
Parameter	Default	Description	
User Name		This column displays the user name.	
Group Name		This column displays the group name.	
Auth Protocol		This column displays the selected "Auth Algorithm."	
Priv Protocol		This column displays the selected "Priv Algorithm."	
Action		Click [Delete] to delete a specific entry.	

#### 9.2.3.7 SNMPv3 View



## Note

### Display SNMPv3 configuration

It will display the SNMPv3 configuration on the device.

#### SNMPv3 View

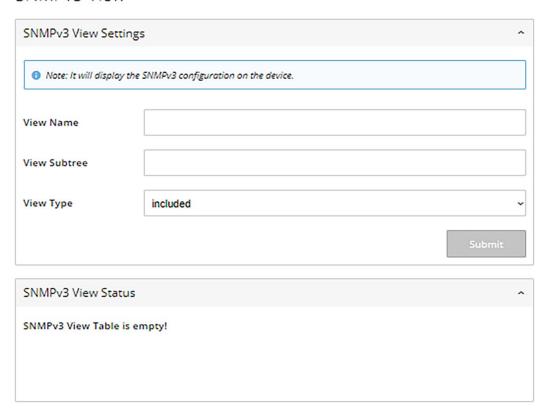


Figure 52: Tab "Configuration" - Menu "SNMP" - "SNMPv3 View"



Table 42: Tab "Configuration" – Menu "SNMP" – "SNMPv3 View"

SNMPv3 View Settings		
Parameter	Default	Description
View Name		In the input field, enter the name for the SNMPv3 view.
View Subtree		In the input field, enter the name for the subtree.
View Type	included	If you selected "included" in the selection box, the subtree is inserted
	excluded	If you selected "excluded" in the selection box, the subtree is not inserted.
SNMPv3 View Status		
Parameter	Default	Description
View Name		This column displays the name of the SNMPv3 view.
View Subtree		This column displays the name of the subtree.
View Type	Inserted Removed	This column displays the selected type.
Action		Click [Delete] to delete a specific entry.

## 9.2.4 System Management

### 9.2.4.1 General Setup

#### **Host Name**

The hostname is same as the SNMP system name. Its length is up to 64 characters.



## Note

### Configure the switch management

Configure the switch management, static/DHCP, IP address, VLAN etc.



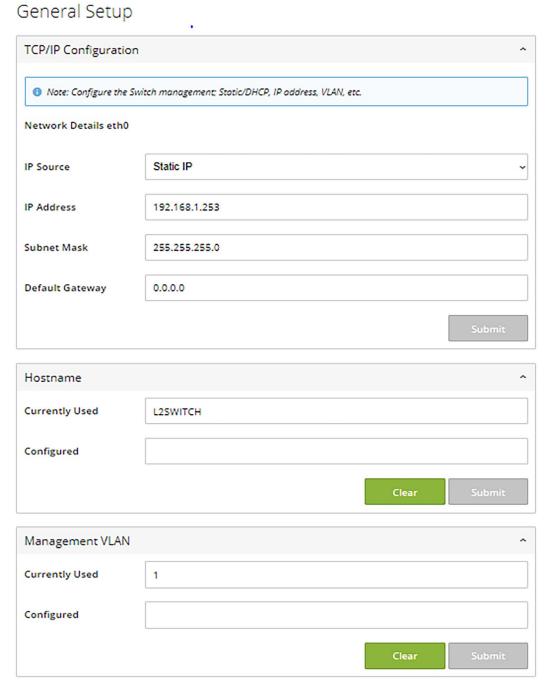


Figure 53: Tab "Configuration" – Menu "System Management" – "General Setup"

Table 43: Tab "Configuration" – Menu "System Management" – "General Setup"

TCP/IP Configuration		
Parameters	Default	Description
IP Source	Static IP DHCP	This selection box is used to select the option for the IP source.
IP Address	192.168.1.254	Enter the IP address of the switch in decimal-point notation.
Subnet Mask	255.255.255.0	Enter the IP subnet mask of the switch in decimal-point notation.
Default Gateway	0.0.0.0	Enter the IP address of the default outgoing gateway in decimal-point notation.
Hostname		
Parameters	Default	Description
Currently Used	L2SWITCH	This column displays the host name.
Configured		In the input field, enter the host name.
Management VLAN		
Parameters	Default	Description
Currently Used	1	This column displays the management VLAN.
Configured		In the input field, enter the management VLAN.



#### 9.2.4.2 SNTP

SNTP ("Simple Network Time Protocol") is a protocol for synchronizing clocks in computer systems. It is a less complex implementation of an NTP ("Network Time Protocol").

SNTP uses UTC – "Coordinated Universal Time" (French: "Temps Universel Coordonné"). No information on time zones or daylight savings time is transmitted. This information falls outside the protocol range and must be obtained separately.

The SNTP port is 123.



## Note

#### Note!

- 1. The SNTP server always replies the current UTC time.
- 2. If the switch receives the SNTP reply time, it adjusts the time to the time zone configuration and configures the time for the switch accordingly.
- 3. If the time server's IP address is not configured, the switch does not send an SNTP request packet.
- 4. If the switch does not receive an SNTP reply packet, it repeats the challenge indefinitely every ten seconds.
- 5. If the switch receives an SNTP reply, it repeats the time request from the NTP server every hour.
- 6. If the time zone and NTP server changes, the switch repeats the request process.
- 7. No default SNTP server.





## Note

### Synchronization of the clocks of computer systems

The Network Time Protocol (NTP) for synchronizing the clocks of computer systems over packet-switched, variable-latency data networks.

#### SNTP

**Daylight Saving Settings** 

**Enable State** 

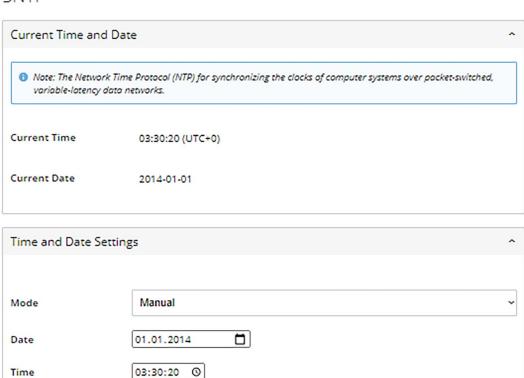


Figure 54: Tab "Configuration" - Menu "System Management" - "SNTP"

Disable



Table 44: Tab "Configuration" – Menu "System Management" – "SNTP"

Current Time and Da	ate	<u> </u>			
Parameters	Default	Descrip	Description		
Current Time		This field displays the current time if you open or			
		refresh the menu.			
Current Date		The field displays the current date if you open or			
		refresh t	he menu.		
Time and Date Setting					
Parameters	Default	Descrip			
Mode	Manual	Select this option if you want to manually set the time			
			e for the system.		
		_		the "Current Time" and	
		"Current			
		Date Enter the new date in the format day year format.		ate in the format day//month/	
			TT.MM.JJJJ		
		Time	Time Enter the new time in the format		
			hour/minute/second.		
			::		
	Network Time	•		•	
	Protocol	Protocol	· · · · · · · · · · · · · · · · · · ·		
	NTP Server	Public			
			server.		
			ntp0.fau.de -		
			Europe		
			ntps1-1.cs.tu-		
			berlin.de -		
			Europe		
		Manual			
		manually settings.		<del>-</del>	
	0.0.0.0		IP	Enter the IP address of the	
				NTP server in decimal-	
				point notation.	
			Domain Name	Enter the domain address	
				of the switch.	
	Time Zone	Enter the time difference between UTC ("Universal			
	.000	Time Coordinated", formally GMT "Greenwich Mean			
+0000 Time") and the time zone in hh.mr		e in hh.mm.			



Table 44: Tab "Configuration" - Menu "System Management" - "SNTP"

Daylight Saving Settings		
Parameters	Default	Description
Enable State	Disable	Select "Disable" if you do not want to use daylight savings time.
	Enable	Select "Enable" if you want to use daylight savings time.
Start Date <sup>1)</sup>		Enter the date and time for the start of daylight savings if you have enabled this option. The time is displayed in 24-hour format.
End Date <sup>2)</sup>		Enter the date and time for the end of daylight savings if you have enabled this option. The time is displayed in 24-hour format.

- Daylight savings starts on the second Sunday of March in most places in the USA. Daylight savings starts at 2 A.M local time in each time zone in the USA. Correspondingly, you would select "Second, Sunday, March" and "2:00". In the EU, daylight savings starts on the last Sunday in March. It starts at the same time (1:00 A.M GMT or UTC) in all EU time zones. Correspondingly, you would select "Last, Sunday, March") and in the last field, enter the time based on your time zone. In Germany, for instance, you would select "2:00" because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).
- In the USA, daylight savings ends on the last Sunday in October. It ends at 2:00 A.M. local time in each time zone in the USA. Correspondingly, you would select "First, Sunday, November" and "2:00". In the EU, daylight savings ends on the last Sunday in October. Daylight savings ends at the same time (1:00 AM GMT or UTC) in all EU times zones. Correspondingly, you would select "Last, Sunday, October") and in the last field, enter the time based on your time zone. In Germany, for instance, you would select "2:00" because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).



#### 9.2.4.3 User Account

The switch allows users to create up to six user accounts. The user name and password must be a combination of numbers or letters. The last admin account cannot be deleted. To use the CLI or Web-Based Management, a user has to be logged into a valid user account.

#### **User Permissions**

The switch supports two types of user accounts:

The default user accounts have the following credentials: User Name = "admin" User Password = "wago"

1. Admin account Read/Write permissions

2. Normal user account Read permission only

- Use of the privileged mode in the CLI is not possible.

 Configurations cannot be changed in the Web-Based Management.






## Note

#### **User Account Setting**

User Account Setting is to configure user authority to access the switch or to access networks for 802.1X.

#### User Account

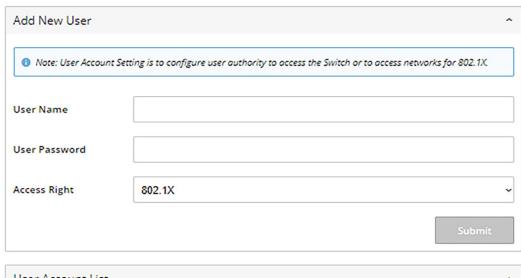

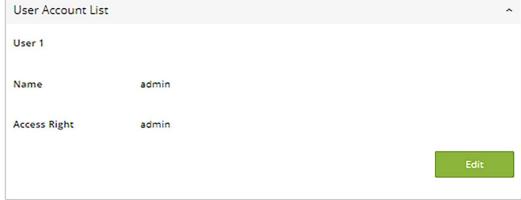


Figure 55: Tab "Configuration" - Menu "System Management" - "User Account"



Table 45: Tab "Configuration" - Menu "System Management" - "User Account"

User Account Settin	ıgs			
Parameter	Default	Description		
User Name		In the input field, enter a new user name, or modify		
		an existing user name.		
User Password		In the input field, enter a new password, or modify an		
		existing password.		
		You can enter up to 32 alphanumeric characters or		
		digits.		
User Authority		In this box, select the type of user account.		
	802.1X	Select "802.1X" in the selection box if you need this		
		users for authentication.		
	Normal (Read	Select "Normal (Read Only)" in the selection box if		
	Only)	you need only read permission for this user account.		
	Admin	Select "Admin" in the selection box if you need read		
		and write permission for this user account.		
User Account List				
Parameter	Default	Description		
No.		This column displays the index number of an entry.		
Name		This column displays the name of the user account.		
Access Right		This column displays the type of user account.		
Action		Click the [Delete] button to delete a user account.		
		Note		
		Deleting an administrator account		
		The last admin account cannot be delet		

#### 9.2.5 Storm Control

A broadcast storm occurs when the network is overwhelmed with constant broadcast or multicast traffic. Broadcast storms can eventually lead to a complete loss of network connectivity as the packets proliferate.

"Storm Control" protects the switch bandwidth from packet flooding, including broadcast packets, multicast packets and DLF ("Destination Lookup Failure"). The Rate is a threshold that limits the total number of specific packet types. For example, if the broadcast and multicast options are selected, the total number of packets transmitted per second for these two types is not exceeded.

"Broadcast Storm Control" limits the number of broadcast, multicast and unknown unicast (also referred to as "Destination Lookup Failure" or DLF) packets the switch receives per second on the ports. If the maximum number of packets per second is reached, all subsequent packets are discarded. Enable this function to reduce the number of these packets in the network.

The default rate is 300 Mbit/s for Broadcast and DLF. You can set to maximum rate of 5000 Mbit/s for multicast, broadcast or DLF.






## Note

#### **Function of the Storm Control feature**

The Storm Control feature prevents switch ports on a LAN from being disrupted by a broadcast, multicast or unknown unicast storm on one of the interfaces.

#### Storm Control

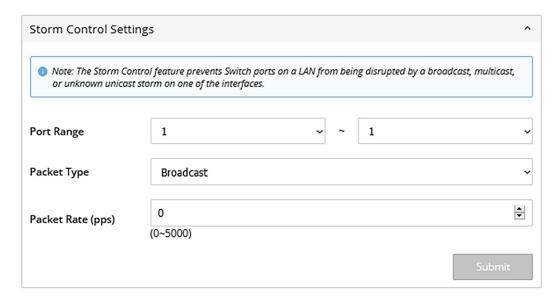

Storm Co	ntrol Status		^
Port	Multicast Rate (pps)	Broadcast Rate (pps)	DLF Rate (pps)
1	0	300	300
2	0	300	300
3	0	300	300
4	0	300	300
5	0	300	300
6	0	300	300
7	0	300	300
8	0	300	300

Figure 56: Tab "Configuration" – Menu "Storm Control" (Example)

Table 46: Tab "Configuration" – Menu "Storm Control" (Example)

Storm Control Settings	Storm Control Settings			
Parameter	Default	Description		
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Loop Detection" settings.		
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Loop Detection" settings.		
Packet Type	Broadcast	Choose "Broadcast" in the selection box to specify a limiting value for the number of broadcast packets received per second.		
	Multicast	Choose "Multicast" in the selection box to specify a limiting value for the number of multicast packets received per second.		
	DLF	Choose "DLF" in the selection box to specify a limiting value for the number of DLF packets received per second.		
Packet Rate (0-5000)	300 = Broadcast/DLF Rate 0 = Multicast	In the selection box, choose the number of packets (of the type specified in the "Type" field) that the switch can receive per second.		
Storm Control Status				
Parameter	Default	Description		
Port	1 8	This column shows the port numbers.		
Multicast Rate (pps)		This column displays the multicast traffic flooding control state on the port.		
Broadcast Rate (pps)		This column displays the broadcast traffic flooding control state on the port.		
DLF Rate (pps)		This column displays the DLF traffic flooding control state on the port.		



# 9.3 Security

# 9.3.1 802.1X

# 9.3.1.1 IEEE 802.1X Communication Standard

IEEE 802.1X is an IEEE standard for port-based Network Access Control ("port" meaning a single point of attachment to the LAN infrastructure). It is part of the IEEE 802.1 group of networking protocols. It provides an authentication mechanism for devices wishing to attach to a LAN, either establishing a point-to-point connection or preventing it if authentication fails. It is used for most wireless 802.11 access points and is based on EAP ("Extensible Authentication Protocol").

IEEE 802.1X provides port-based authentication, which involves communications between a so-called supplicant, authenticator and authentication server. The supplicant is often software on a client device, such as a laptop, the authenticator is a wired ETHERNET switch or wireless access point, and the authentication server is generally a RADIUS ("Remote Authentication Dial-In User Service") database.

The authenticator acts like a security guard for the protected network. The supplicant (e.g., client device) is not allowed access the protected side of the network through the authenticator until the supplicant's identity is authenticated. With 802.1X port-based authentication, the supplicant provides credentials, such as a user name/password or digital certificate, to the authenticator, and the authenticator forwards the credentials to the authentication server for verification. If the credentials are valid (in the authentication server database), the supplicant (client device) is allowed to access resources located on the protected side of the network.

Upon detection of a new client ("supplicant"), the port on the switch ("authenticator") is enabled and set to the "unauthorized" state. In this state, only 802.1X traffic is allowed; other traffic, such as DHCP and HTTP, is blocked on the network layer (Layer 3). The authenticator sends out the EAP identity request to the supplicant, the supplicant responds with the EAP response packet, which the authenticator forwards to the authenticating server. If the authenticating server accepts the request, the authenticator sets the port to the "authorized" mode, and normal traffic is allowed. If the supplicant logs off, it sends an EAP logoff message to the authenticator. The authenticator then sets the port to the "unauthorized" state, once again blocking all non-EAP traffic.



### **RADIUS Server**

The RADIUS server ("Remote Authentication Dial-In User Service") is a client/server-based security protocol for authentication and control of network access permissions.

The RADIUS server operates using the Challenge/Response process and supports central administration of user data, such as user ID, passwords, phone numbers, access rights and account data, and consists of an accounting and authentication protocol.

In combination with DHCP and PPP, configuration of dial-in systems can occur automatically with RADIUS.

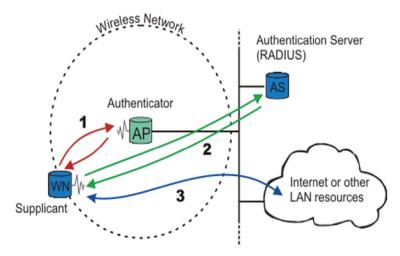


Figure 57: IEEE 802.1X

The following figure illustrates how a client connecting to an IEEE 802.1Xauthentication-enabled port goes through the validation process. The switch prompts the client for login information in the form of a user name and password.

Once the client provides the login credentials, the switch sends an authentication request to the RADIUS server. The RADIUS server checks whether this client is allowed access to the port.

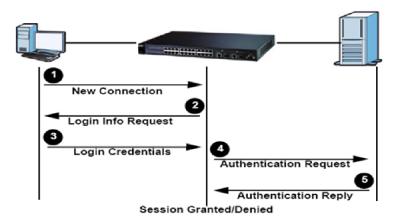


Figure 58: RADIUS Server



### **Local User Accounts**

By storing user profiles locally on the switch, the switch can authenticate users without interacting with the network authentication server. However, there is a limit to six users that can be authenticated in this way.

#### **Guest VLAN**

The Guest VLAN function in IEEE 802.1X port-based authentication on the switch provides limited services to clients, such as downloading the IEEE 802.1X client. These clients can update their system for IEEE 802.1X authentication.

If you enable a guest VLAN on an IEEE 802.1X port, the switch assigns clients to a guest VLAN when the switch does not receive a response to its EAP request/identity frame or when EAPOL ("EAP over LAN") packets are not sent by the client.

#### **Port Parameters**

#### **Admin Control Direction**

- If 802.1X port authentication for a user has failed,

incoming and outgoing packets on the port are

Incoming - If 802.1X port authentication for a user has failed, only

incoming packets on the port are dropped.

#### **Re-Authentication**

This function specifies whether a subscriber must periodically re-enter his or her user name and password to stay connected to the port.

### **Reauth Period**

The "Reauth Period" function is used to specify how often a client has to reenter his or her username and password to stay connected to the port. The permissible range for this field is 0 to 65535 seconds.

#### **Port Control Mode**

"Auto" Users can access the network after

authentication.

Users can access the network without "Force-authorized"

authentication.

"force-unauthorized" Users cannot access the network.



### **Quiet Period**

The "Quiet Period" function is used to specify the time a client has to wait before the next authentication attempt. This prevents the switch from becoming overloaded with continuous authentication attempts from the client. The permissible range for this field is 0 to 65535 seconds.

#### **Server Timeout**

The "Server Timeout" value is used for timing out the authentication server.

# **Supp Timeout**

The "Supp Timeout" value is the initialization value used for timing out a supplicant.

### **Max Req Time**

The "Max Reg Time" specifies how often the switch attempts to connect to the authentication server before determining that the server is down. The permissible range for this field is 1 to 10 attempts.



# 9.3.1.2 Global Setup



# Note

### **Activate 802.1X authentication**

Select enable to permit 802.1X authentications on the switch for security purposes. You must first enable 802.1X authentications on the switch before configuring it on each port.

802.1X

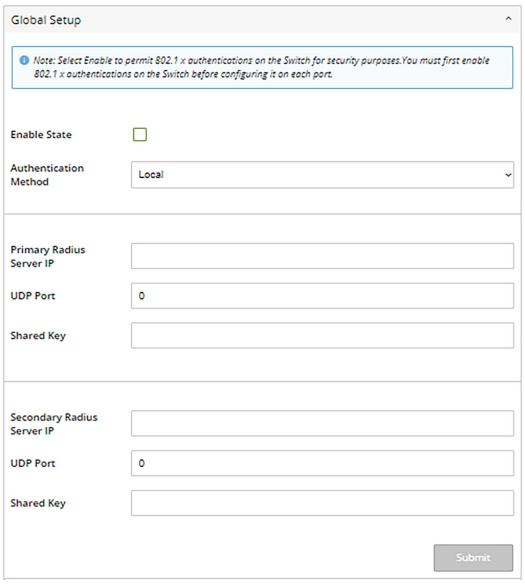


Figure 59: Tab "Security" - Menu "802.1X" - "Global Setup"

Table 47: Tab "Security" – Menu "802.1X" – "Global Setup"

Global Setup			
Parameter	Default	Description	
Enable State		☐ The function "802.1X" is not enabled.	
		☐ The function "802.1X" port is not enabled.	
		Note IEEE 802.1X Authentication You must first enable IEEE 802.1X authentication on the switch before you can configure this function for individual ports.	
Authentication Method	Local	Select "Local" in the selection box to use the "Guest" and "User" user groups from the user account database on the switch for authentication.  However, the number of nodes that can exist at the same time is limited.	
	Radius	Select "Radius" in the selection box to enable the security protocol that uses an external server for user authentication, in contrast to the internal user database, in devices with limited storage.  In general, "RADIUS" allows validation of an unlimited number of users from a central location.	
Primary Radius Server IP		If you selected "Radius" for the authentication method, the primary Radius server is used for all authentication requests.  In the input field, enter the IP address of the external Radius server in decimal-point notation.	
UDP Port	0	In the input field, enter the UDP port.	
Shared Key		In the input field, enter a password (up to 32 alphanumeric characters) to use as the common key for the connection between the external Radius server and the switch. This key must not be sent over the network. The key must be identical on the external RadiusADIUS server and the switch.	
Secondary RADIUS Server IP		This is the back-up server that is only used if the primary Radius server fails.	
UDP Port	0	In the input field, enter the IP address of the external RADIUS server in decimal-point notation.	
Shared Key		In the input field, enter a password (up to 32 alphanumeric characters) to use as the common key for the connection between the external Radius server and the switch.  This key must not be sent over the network.  The key must be identical on the external RadiusADIUS server and the switch.  Secondary RADIUS Server IP This is the back-up server	



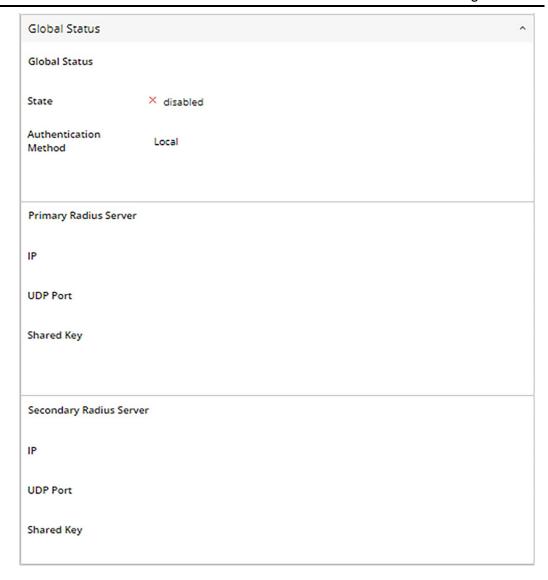


Figure 60: Tab "Security" - Menu "802.1X" - "Global Status"

Table 48: Tab "Security" – Menu "802.1X" – "Global Status"

Global Status		
Parameter	Default	Description
State	Disable	This field indicates whether IEEE 802.1X
	Enable	authentication is enabled or disabled.
Authentication Method	Local	This field displays the authentication method.
	Radius	
Primary RADIUS Server	IP	This field displays the IP address, UDP port and
	UDP Port	common key for the primary Radius server.
	Shared Key	The fields are empty if no configuration is performed.
Secondary RADIUS	IP	This field displays the IP address, UDP port and
Server	UDP Port	common key for the secondary Radius server.
	Shared Key	The fields are empty if no configuration is performed.

#### 9.3.1.3 **Port Setup**



# Note

# **802.1X Authentication**

802.1X provides port-based authentication, which involves communications between a supplicant authenticator and authentication server. Default value for Max-req Times 2, Quiet-period 20 s, Supp-timeout 30 s and server-timeout 16 s.

# 802.1X

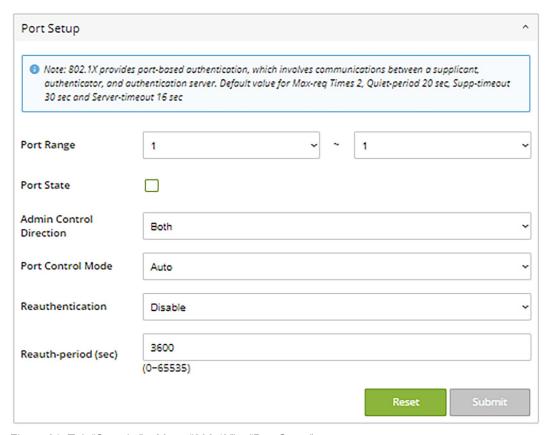


Figure 61: Tab "Security" - Menu "802.1X" - "Port Setup"



Table 49: Tab "Security" - Menu "802.1X" - "Port Setup"

Port Settup				
Parameter	Default	Description		
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "802.1X" Setting.		
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "802.1X" Setting.		
Port State		☐ The function "802.1X" is not enabled.		
		☐ The function "802.1X" port is not enabled.		
		Note IEEE 802.1X Authentication You must first enable IEEE 802.1X authentication on the switch before you can configure this function for individual ports.		
Admin Control Direction	Both	In the selection box, select "Both" to drop incoming and outgoing packets on the port when a user has not passed IEEE 802.1X port authentication.		
	In	In the selection box, select "In" to drop only incoming packets on the port when a user has not passed IEEE 802.1X port authentication.		
Reauthentication	Disable	Select "Disable" in the selection box if a subscriber does not have to regularly reenter the user name and password to remain connected to the port.		
	Enable	Select "Enable" in the selection box if a subscriber has to regularly reenter the user name and password to remain connected to the port.		
Port Control Mode	Auto	Select "Auto" in the selection box to enable authentication for the port.		
	Force Authorized	Select "Force Authorized" in the selection box to enable permanent authentication for the port.		
	Force Unauthorized	Select "Force Unauthorized" in the selection box to enable permanent denial of authentication for the port. No packets can pass through this port.		
Reauth-period (sec) (0-65535)	3600	In the input field, enter a value for interval at which a subscriber has to reenter the user name and password to remain connected to the port.		

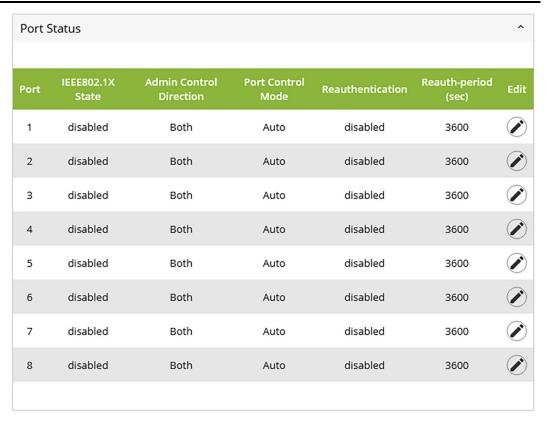


Figure 62: Tab "Security" – Menu "802.1X" – "Port Status" (Example)

Table 50: Tab "Security" – Menu "802.1X" – "Port Status" (Example)

Port Status		
Parameter	Default	Description
Port	1 8 (16)	This column shows the port numbers.
IEEE 802.1X State	Disable	This column indicates whether IEEE 802.1X
	Enable	authentication for a port is enabled or disabled.
Admin Control Direction	Both	This column displays the "Control Direction."
	In	
Port Control Mode	Automatic,	This column displays the port control mode.
	Force	
	Authorized,	
	Force	
	Unauthorized	
Reauthentication	Disable	This column indicates whether the subscriber has to
	Enable	reenter the user name and password regularly to
		remain connected to the port.
Reauth Period	0 65535	This column displays the interval at which a
(sec)		subscriber must reenter the user name and password
		to remain connected to the port.
Edit		Preselection for editing.



# 9.3.2 ACL

The ACL ("Access Control List") is a list of permissions attached to an object. The list specifies who or what is allowed to access an object and what operations are allowed to be performed on the object.

The ACL function allows users to configure a few rules to reject packets from the specific ingress ports or all ports. These rules check the source and destination MAC addresses of packets. If packets match these 32 rules, the system executes the "deny" action, meaning it rejects these packets.

The "Action Resolution Engine" collects the information (action and metering results) from the hit entries: If more than one rule matches, the actions and measurements/counters are taken from the policy associated with the matched rule with highest priority.



# Note

# Permissions of the Access Control List (ACL)

L2 Access Control List (ACL) is a list of permissions attached an object with an maximum of 32 ACL settings allowed. State > Drop specifies who or what is denied access to the object.

# ACL

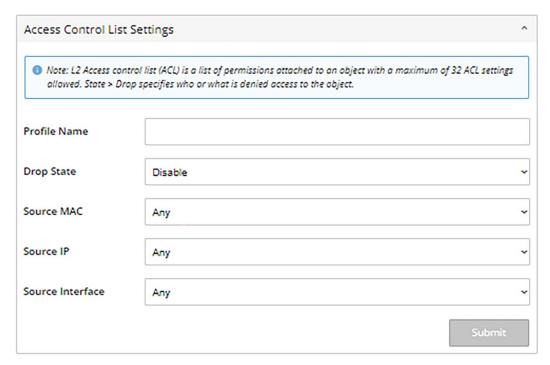


Figure 63: Tab "Security" - Menu "ACL" - "Access Control List Settings"



Table 51: Tab "Security" – Menu "ACL" – "Access Control List Settings"

Access Control List Settings			
Parameter	Default	Description	
Profile Name		In the input field, enter the name of the profile.	
Drop State Disable		Select "Disable" in the selection if you will not the data packets are dropped.	
_	Enable	Select "enable" in the selection if you will the data packets are dropped.	
Source MAC	Any	Select "Any" in the selection box to make every MAC address valid.	
	Other	Select "Other" in the selection box to enter the MAC address for the source in the access control list.	
Source IP	Any	Select "Any" in the selection box to make every IP address valid.	
		Select "Other" in the selection box to enter the IP address for the source in the access control list.	
Source Interface	Any	Select "Any" in the selection box if every physical port is valid.	
	Other	1 8 In the input field, enter the physical port for which this entry is valid in the access control list.	



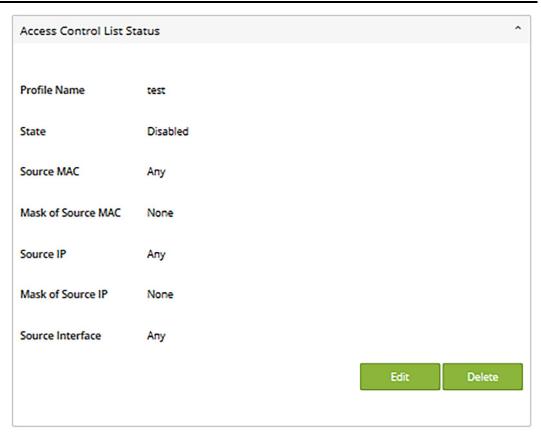


Figure 64: Tab "Security" – Menu "ACL" – "Access Control List Status"

Table 52: Tab "Security" – Menu "ACL" – "Access Control List Status"

Access Control List Status		
Parameters	Default	Description
Profile Name		This field displays the selected name of the profile.
Drop State	Disable Enable	This field displays the Drop State.
Source MAC Address	Any Other	This field displays the source MAC address.
Source IP	Any Other	This field displays the source IP.
Source Interface	Any Other	This field displays the source interface.

#### 9.3.3 **Port Security**

The switch receives the MAC address of a device that is connected to a specific port direction and allows data forwarding. The functions of the switch allow control over which and how many devices may be connected to a switch port.

The "Port Security" functions can specify the maximum number of MAC addresses per interface. If this number is exceeded, incoming packets with new MAC addresses are dropped. A MAC address table can be used to check this. The static MAC addresses are included for this limit.



# Note

# State Change of a Port on the Switch

If the state of a port on the switch is changed from disabled to enabled, all MAC addresses captured by this port are dropped.




# Note

# **Configuration of the Port Security**

Port security configuration will allow the user to configure MAC limitations to permit the interface.



# Port Security

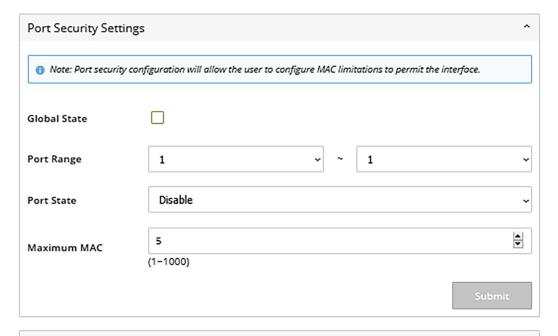

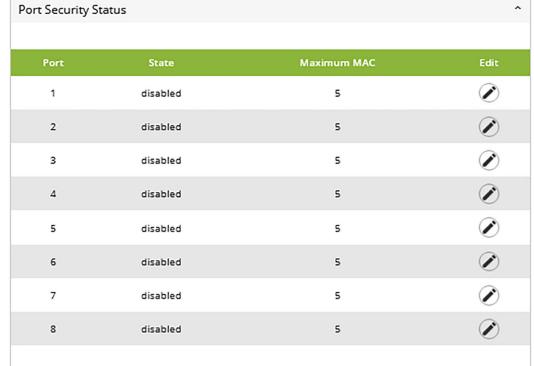


Figure 65: Tab "Security" – Menu "Port Security" (Example)

Table 53: Tab "Security" – Menu "Port Security" (Example)

delication of the december of				
Port Security Settings	Port Security Settings			
Parameter	Default	Description		
Global State		☐ The function "Port Security" is not enabled.		
		☐ The function "Port Security" port is not enabled.		
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Port Security" setting.		
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Port Security" setting.		
Port State	Disable	Select "Disable" in the selection box to disable port security for a port or port range.		
	Enable	Select "Enable" in the selection box to enable port security for a port or port range.		
Maximum MAC (1–1000)	5	In the input field, enter the maximum number of MAC addresses per interface.		
Port Security Status				
Parameter	Default	Description		
Port	1 8 (16)	This column shows the port numbers.		
State	Enable Disable	This field indicates whether port security is enabled or disabled.		
Maximum MAC Address	0 1000	This column displays the maximum number of MAC addresses.		
Edit		Preselection for editing.		



# 9.3.4 Service Control

The Service Control allow the user to configure security services accessing the device like HTTP, HTTPS, SNMP v1/v2c, SNMP v3, SSH.



# Note

### **Function of the Service Control**

Service Control to enable/disable security services accessing the device.

# Service Control

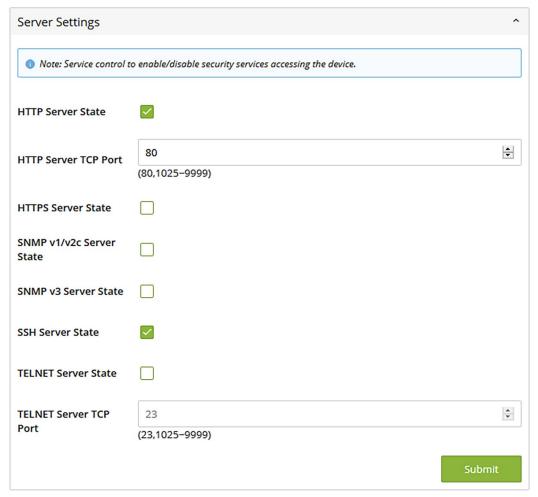


Figure 66: Tab "Security" - Menu "Service Control"

Table 54: Tab "Security" - Menu "Service Control"

Server Settings			
Parameter	Default	Description	
HTTP Server State		Enables/disables the HTTP server.	
HTTP Server TCP Port (80, 1025–9999)	<b>80</b> 1025 9999	In the input field, enter the "HTTP Server TCP Port".	
HTTPS Server State		Enables/disables the HTTPS server.	
SNMP v1/v2c Server State		Enables/disables the SNMP v1/v2c server.	
SNMP v3 Server State		Enables/disables the SNMP v3 server.	
SSH Server State	Ø	Enables/disables the SSH server.	
Telnet Server State		Enables/disables the Telnet server.	
Telnet Server TCP Port (23, 1025~9999)	<b>23</b> 1025 9999	In the input field, enter the "Telnet Server TCP Port".	
Server Status			
Parameter	Default	Description	
HTTP Server State	Enable Disable	This field displays the status of the HTTP server.	
HTTP Server TCP Port	80 1025 9999	This field displays the status of the HTTP server TCP port.	
HTTP Server State	Enable Disable	This field displays the status of the HTTPS server.	
SNMP v1/v2c Server State	Enable Disable	This field displays the status of the SNMP v1/v2c server.	
SNMP v3 Server State	Enable Disable	This field displays the status of the SNMP v3 server.	
SSH Server State	Enable Disable	This field displays the status of the SSH server.	
Telnet Server Status	Enable Disable	This field displays the status of the Telnet server.	
Telnet Server TCP Port	23 1025 9999	This field displays the status of the Telnet server TCP port.	



# 9.3.5 VLAN

### 9.3.5.1 Port Isolation

Port isolation is a port-based virtual LAN feature. It partitions the switching ports into virtual private domains designated on a per port basis. Data switching outside of the switch's private domain is not allowed. The VLAN tag information of the packets is ignored.

This feature is a per-port setting to configure the egress port(s) for the specific port to forward its received packets. If the CPU port (port 0) is not an egress port for a specific port, the host connected to the specific port cannot manage the switch.

If you wish to allow two subscriber ports to talk to each other, you must define the egress port for both ports. CPU refers to the switch's management port. By default, it forms a VLAN with all ETHERNET ports. If it does not form a VLAN with a specific port, then the switch cannot be managed from that port.



# Note

### Configure the ports

Range of ports can be configured. It partitions the switching ports into virtual private domains designated on a per-port basis, if the user wants to communicate port 1 to port 2 only, then configure of port isolation can help to talk both the port only.



# Port Isolation

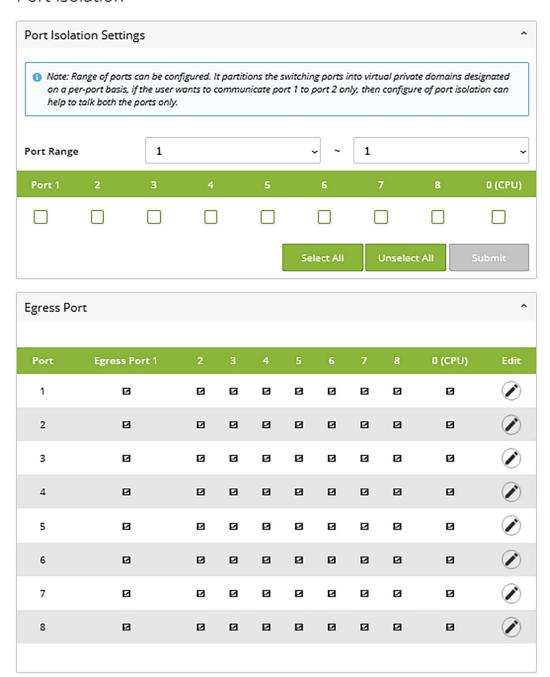


Figure 67: Tab "Security" – Menu "VLAN" – "Port Isolation" (Example)

Table 55: Tab "Security" – Menu "VLAN" – "Port Isolation" (Example)

Port Isolatio	n Settings				
Parameter		Default	Des	scription	
Port Range <b>1</b> 8 (16) 0 (CPU)		whic	Select a port or port range in the selection box for which you want to configure the "Port Isolation" setting.		
		<b>1</b> 8 (16) 0 (CPU)		ect a port or port range in the selection box for ch you want to configure the "Port Isolation" ing.	
Egress Port		An egress port is an outgoing port through which data packet leaves.  Selecting a port as an egress port means it will communicate with the port currently being configuration.		packet leaves.	
Select All				No egress port is selected.	
			$\checkmark$	All egress ports are selected.	
	Disable All			No egress port is disabled.	
			$\checkmark$	All egress ports are disabled.	
	□ 0			The egress port is not enabled.	
	(CPU) □ 8		$\checkmark$	The egress port is enabled.	
Port Isolatio	n Status				
Parameter		Default	Description		
Port		V	V	"V" indicates that the port's packets can be sent to this port.	
Egress Port			-	"-" indicates the port's packets cannot be sent to this port.	
Edit		Presele		selection for editing.	

#### 9.3.5.2 VLAN Setup

A VLAN ("Virtual LAN") is a group of hosts with a common set of requirements that communicate as if they were attached to a broadcast domain, regardless of their physical location. A VLAN has the same attributes as a physical LAN, but it allows for end stations to be grouped together even if they are not located on the same network switch. Networks can be reconfigured through software instead of spatially separated devices.

VID ("VLAN-ID") is the identification of a VLAN that is generally used by the IEEE 802.1Q standard. It has 12 bits and allows the identification of 4096 (212) VLANs. Of the 4096 possible VIDs, VID 0 is used to identify "Priority Frames", and value 4095 (FFF) is reserved, so the maximum possible number of VLAN configurations is 4094. But the Lean Managed Switch has 5 VLANs available.

A "Tagged VLAN" uses an explicit tag (VLAN ID) in the MAC header to identify the VLAN membership of a frame across "Bridges" - they are not confined to the switch on which they were created. VLANs can be created statically (manually by users) or dynamically via the GVRP ("GARP VLAN Registration Protocol"). The VLAN ID associates a frame with a specific VLAN and provides the information that switches need in order to process the frame across the network. A tagged frame is four bytes longer than an untagged frame and contains two bytes of TPID ("Tag Protocol Identifier", residing within the type/length field of the "ETHERNET Frame") and two bytes of TCI ("Tag Control Information", which starts after the source address field of the "ETHERNET Frame").

The CFI ("Canonical Format Indicator") is a single-bit flag, always set to zero for ETHERNET switches. If a frame received at an ETHERNET port has a CFI of 1, the frame should not be output to an untagged port. The remaining 12 bits define the VLAN ID, giving a possible maximum number of 4096 VLANs. Note that the user priority and VLAN ID are independent of each other. A frame with VID (VLAN Identifier) of null (0) is called a priority frame, meaning that only the priority level is significant, and the default VID of the ingress port is used as the VID of the frame. Of the 4096 possible VIDs, a VID of 0 is used to identify "Priority Frames", and value 4095 (FFF) is reserved, so the maximum possible number of VLAN configurations is 4094.

TPID	User Priority	CFI	VLAN ID
2 bytes	3 bits	1 bit	12 bits

#### **Forwarded Tagged and Untagged Frames**

Each port on the switch is capable of forwarding tagged and untagged frames. When a frame is forwarded from an 802.1Q VLAN-aware switch to an 802.1Q VLAN-unaware switch, the switch first decides where to forward the frame and then strips off the VLAN tag. When a frame is forwarded from an 802.1Q VLANunaware switch to an 802.1Q VLAN-aware switch, the switch first decides where to forward the frame and then inserts a VLAN tag reflecting the ingress port's default VID. The default PVID is "VLAN 1" for all ports, but this can be changed.



A broadcast frame (or a multicast frame for a multicast group that is known by the system) is duplicated only on ports that are members of the VID (except the ingress port itself), thus confining the broadcast to a specific domain.



# Note

## **Create VLANs**

Range of VLANs can be created, up to five VLANs. Recommend to set the trunk port to tag and join all port'vlan.

# **VLAN**

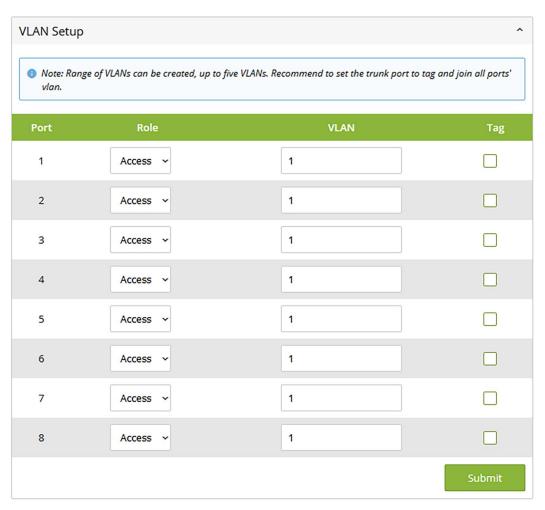


Figure 68: Tab "Security" – Menu "VLAN" – "VLAN Setup" (Example)

Table 56: Tab "Security" – Menu "VLAN" – "VLAN Setup" (Example)

VLAN Setup		
Parameter	Default	Description
Port	Access	Select "Access" in the selection box to access the port.
	Trunk	Select "Trunk" in the selection box to trunk the port.
VLAN		In the input field, select a VLAN ID from 1 zo 4094.



# Note

# Always one Port in the Management VLAN

There should always be one port in the Management VLAN. Otherwise the switch can not be configured.



#### Redundancy 9.4

#### 9.4.1 **ERPS**

The ERPS ("ETHERNET Ring Protection Switching") function implements a protection switching mechanism for ETHERNET layer ring topologies according to ITU-T standard G.8032. The ERP ("ETHERNET Ring Protection") protects ETHERNET traffic in a ring topology and ensures that no loops can arise within the ring in the ETHERNET layer. Looping is prevented by blocking traffic on either a predetermined link or a failed link.

The ETHERNET ring protection functionality includes the following:

- Loop avoidance
- Use of learning, forwarding and filter database (FDB) mechanisms

Loop avoidance in an Ethernet ring is achieved by guaranteeing that, at any time, traffic may flow on all but one of the ring links. This particular ring link serves as a reserve connection and is called an RPL ("Ring Protection Link"). In normal operation, it is blocked and not used for service traffic. A specific ETHERNET ring node, the "RPL Owner" node, is responsible for blocking traffic at one end of the RPL. Under an ETHERNET ring failure condition, the "RPL Owner" node is responsible for unblocking its end of the RPL, unless the RPL has failed, allowing the RPL to be used for traffic. The ETHERNET ring node adjacent to the RPL, the "RPL Neighbor" node, may also participate in blocking or unblocking its end of the RPL.

The ETHERNET rings can support a multi-ring/ladder network that consists of ETHERNET rings linked through one or more interconnection points. The protection switching mechanisms and protocol defined in this recommendation can be used for a multi-ring/ladder network under the following conditions:

- R-APS channels are not shared across ETHERNET ring connections;
- On each ring port, all traffic channels and all R-APS channels are controlled (e.g., for blocking or flushing) by the ETHERNET ring protection control process (ERP control process) of only one ETHERNET ring;
- Each main ring or subring has its own RPL.

In an ETHERNET ring without congestion, with all ETHERNET ring nodes in the idle state (i.e., no detected failure, no active automatic or external command and receiving only R-APS (NR, RB) messages) and with less than 1,200 km of ring fiber circumference and fewer than 16 ETHERNET ring nodes, the switch completion time (transfer time as defined in [ITU-T G.8032]) for a failure on a ring link should be less than 800 ms.

The ring protection architecture relies on the existence of an APS protocol to coordinate ring protection actions in an ETHERNET ring.

The switch supports up to two rings.



### **Guard Timer**

All ring subscribers use a "Guard Timer." It prevents a closed loop from forming and prevents ring subscribers from using outdated R-APS messages. The "Guard Timer" is enabled if a ring subscriber received information on a local switching request, such as after SF ("Switch Fail"), MS ("Manual Switch") or FS ("Forced Switch") commands. When the timer expires, the ring subscriber begins executing the actions it received from the R-APS. This timer cannot be stopped manually.

# **WTR Timer**

The "WTR Timer" ("Wait To Restore Timer") is used by the "RPL Owner." The WTR timer applies to the revertive mode to prevent frequent triggering of the protection switching due to port flapping or intermittent signal failure defects. When the timer expires, the "RPL Owner" sends an R-APS (NR, RB) message through the ring.

#### **WTB Timer**

The "WTB Timer" ("Wait To Block Timer") is enabled on the "RPL Owner." The "RPL Owner" uses "WTB Timers" before initiating an RPL block and then reverting to the idle state after operator-initiated commands, such as for FS or MS conditions, are entered. Because multiple FS commands are allowed to coexist in a ring, the "WTB Timer" ensures that clearing a single FS command does not trigger the re-blocking of the RPL. The "WTB Timer" should run five seconds longer than the "Guard Timer" – enough time to allow a reporting ring subscriber to receive two R-APS messages and to allow the ring to identify the latent state. When clearing a MS command, the "WTB Timer" prevents the formation of a closed loop, because the "RPL Owner" node does not respond to an outdated remote MS request during the recovery process.

#### **Hold-off Timer**

Each ring subscriber uses a "Hold-off Timer" to delay reporting a port failure. When the timer expires, the ring subscriber checks the port status. If the problem persists, a failure is reported. If the issue does not persist, nothing is reported.

#### **ERPS Revertive and Non-Revertive Switching**

ERPS uses revertive and non-revertive operation. In revertive operation, after the conditions causing a switch have cleared, the traffic channel is restored to the working transport entity, i.e., blocked on the RPL. After an error condition is cleared, the traffic channel is switched back only after expiration of a "WTR Timer" to prevent protecting states from toggling due to intermittent errors. Without revertive operation, the traffic channel continues to use RPL after a switch condition is cleared if the RPL has not failed.



#### **Control VLAN**

The "Control VLAN" is a domain in which only ERPS control packets are transmitted. Because no other packets are transmitted in the VLAN, there are no delays for the ERPS. Therefore, when configuring a control VLAN for a ring, make sure it is a new VLAN. The ERPS creates this control VLAN and its member ports automatically. The member port should have a left right port only.

In ERPS, control packets and data packets are separated in different VLANs. The control packets are transmitted in a control VLAN.

#### Instance

For ERPS Version 2, an instance is a profile that specifies a control VLAN and one or more data VLANS for the ERPS. The control and data packets in ERPS are separated in different VLANs. The control packets are transmitted in the control VLAN and the data packets in one or more data VLANs. In this way, a user can easily assign an instance to an ERPS ring.

If a port is blocked by the ERPS in ERPS Version 1, all packets are blocked.

If a port is blocked by an ERPS ring in ERPS Version 2, only the packets belonging to the VLANs in this instance are blocked.



# Note

### **Control VLAN and Instance**

In CLI or Web configurations, there are settings for the control VLAN and the instance. If the control VLAN is configured for a ring and an instance is to be configured for the ring, the control VLAN must be the same for the instance as that of the ring. Otherwise, an error is displayed. If you still want to use this instance, you can first change the control VLAN so that it is the same as that of the instance. You can the configure the instance.





# Note

### Function of the Ethernet Ring Protection Switching (ERPS)

Ethernet Ring Protection Switching (ERPS) feature implements protection switching mechanisms for Ethernet layer ring topologies. Only two sets of ring settings are allowed with a default WTR Timer of 300 s and Guard Timer of 500 ms. Global State enables and disables ERPS feature (max. 2 rings per switch, max. 16 switches per ring, switching time < 800 ms).

# **ERPS Setup**

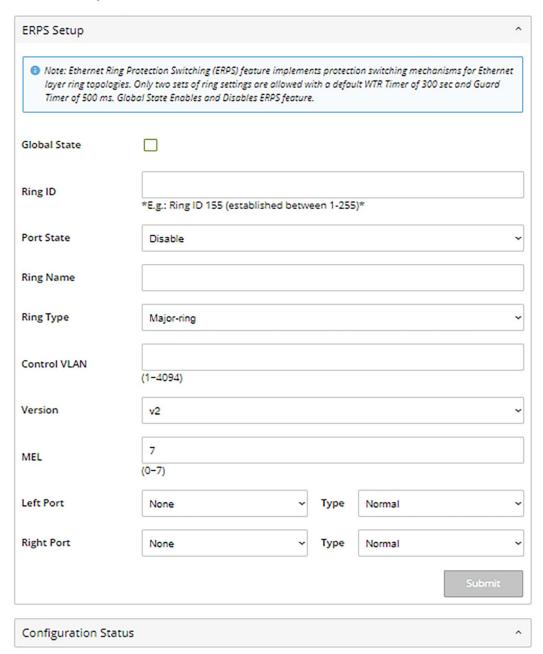


Figure 69: Tab "Redundancy" - Menu "ERPS"



Table 57: Tab "Redundancy" - Menu "ERPS"

ERPS Setup	ERPS Setup					
Parameter	Default	Description				
Global State	<b>V</b>	☐ The "ERPS" function is not enabled for the switch.				
		☐ The "ERPS" function is enabled for the switch.				
Ring ID		In the input field, enter the ring ID.				
(*E.g.: Ring ID 155		Valid range: 1 255				
(established between		But in the Lean Managed Switches we support 2				
1-255))		rings.				
Port State	Disable	Select "Disable" in the selection box to disable the				
		state of the ring.				
	Enable	Select "Enable" in the selection box to enable the				
		state of the ring.				
Ring Name		In the input field, enter the name of the ring (max. 32				
		characters).				
		(e.g., Major Ring ID255)				
Ring Type	Major-ring	Select "Major Ring" in the selection box if the switch				
		should operate in the major ring.				
	Sub-ring	Select "Subring" in the selection box if the switch				
		should operate in the subring.				
Control VLAN	1 4094	In the input field, enter the VLAN ID that should serve				
(1-4094)		as the domain for the ERPS control packets.				
		Valid range: 1 4094				
Version	v2	Select "v2" in the selection box if you want to use				
		Version 2 of the "ERPS" function.				
	v1	Select "v1" in the selection box if you want to use				
		Version 1 of the "ERPS" function.				
MEL	7	In the input field, enter the value for the "Control MEL" (Maintenance Entity Group Level) for the ring.				
(0~7)						
		The MEL specifies the priority.				
		0 = Lowest priority				
		7 = Highest priority				
Left Port		The selection box is used to configure the left port				
		and its type for the ring.				
	None	Select "None" in the selection box if you do not want				
	4 0 (40)	to select a port.				
	1 8 (16)	Select the corresponding port in the selection box.				
	Normal	Select "Normal" in the selection box if the port is not				
		assigned any specific function in the ERPS ring.				
	Neighbor	Select "Neighbor" in the selection box if the				
	_	neighboring port has the "Neighbor" function.				
	Owner	Select "Owner" in the selection box if the port should				
D: 1 ( D )		take on the "Owner" function in the ERPS ring.				
Right Port		This selection box is used to configure the right port				
	None	and its type for the ring.				
	None	Select "None" in the selection box if you do not want				
	4 0 (40)	to select a port.				
	1 8 (16)	Select the corresponding port in the selection box.				
	Normal	Select "Normal" in the selection box if the port is not				
		assigned any specific function in the ERPS ring.				
	Neighbor	Select "Neighbor" in the selection box if the				
		neighboring port has the "Neighbor" function.				
	Owner	Select "Owner" in the selection box if the port should				
		take on the "Owner" function in the ERPS ring.				



Table 57: Tab "Redundancy" – Menu "ERPS"

ERPS Ring Status				
Parameter	Default	Description		
Ring ID	1 255	This field displays the ring ID.		
Port State	Disable Enable	This field displays the ring status.		
Ring Name		This field displays the ring name.		
Ring Type	Major Ring Subring	This field displays the ring type.		
Control VLAN	1 4084	This field displays the VLAN of the controller.		
Version	v2 v1	This field displays the version of the "ERPS" function.		
MEL	0 7	This field displays the value for the "Control MEL."		
Left Port	None 1 8 (16)	This field displays the port number of the left port.		
Right Port	None 1 8 (16)	This field displays the port number of the right port.		
Left Port Type	Normal Neighbor Owner	This field displays the type of the left port.		
Right Port Type	Normal Neighbor Owner	This field displays the type of the right port.		
Left Port Status	Forwarding Blocking	This field displays the current status of the left port.		
Right Port Status	Forwarding Blocking	This field displays the current status of the right port.		
Ring Status	Protection Idle	This field displays the ring status.		
Delete		Click [Delete] to delete this setting.		



# 9.4.2 STP/RSTP

The (R)STP ("(Rapid) Spanning Tree Protocol") can detect and stop network loops, as well as provide "Backup Links" between switches, bridges or routers. It allows a switch to interact with other (R)STP-compliant switches in the network to ensure that only one path exists between any two stations on the network.

The switch supports both STP and RSTP as defined in the following standards:

- IEEE 802.1D Spanning Tree Protocol
- IEEE 802.1w Rapid Spanning Tree Protocol

The switch uses IEEE 802.1w RSTP, which allows faster convergence of the "Spanning Tree" than STP (the switch is also backwards-compatible with STP-only aware bridges). In RSTP, topology change information is directly propagated throughout the network from the device that generates the topology change. In STP, there are longer delays because the device that causes a topology change first notifies the "Root Bridge" and then the network. Both RSTP and STP remove unwanted learned addresses from the filtering database.

- In STP, the port states are Blocking, Listening, Learning and Forwarding.
- In RSTP, the port states are Discarding, Learning and Forwarding.

#### **STP Switch Port States**

#### "Blocking"

If a port causes a "Switching Loop" (looping connection between two ports), user data can no longer be sent or received. However, the port can go into the "Forwarding" state if the other active connections fail and the "Spanning Tree" algorithm determines that the port may transition to that state. BPDU data is still received and sent in the "Blocking" state.

### "Listening"

The switch processes BPDUs and waits for possible new information that would cause it to return to the "Blocking" state.

# · "Learning"

Even if the port does not yet forward any frames (packets), it can learn source addresses from frames received and add them to the filter database ("Switching Database").

### "Forwarding"

The port is in normal operating mode and receives and sends data. STP still monitors incoming BPDUs that would indicate that the port should return to the "Blocking" state to prevent a loop.

### · "Disabled"

It is not strictly part of the STP because a network administrator can manually disable a port.



## **RSTP Bridge Port Roles**

#### "Root"

The "Root Port" is a forwarding port that can best transmit data from the "Non-Root Bridge" to the "Root Bridge."

# "Designated"

This is a forwarding port for every LAN segment.

#### "Alternate"

This port represents an alternate path to the "Root Bridge." However, the path is different than for the "Root Port."

### "Backup"

This port is used as a backup/redundant path to a segment to which another "Bridge Port" is already connected.

#### "Disabled"

This is not actually part of STP because a network administrator can manually disable a port.



# Note

#### STP/RSTP

In this document, "STP" refers to both STP and RSTP.

# **STP Terminology**

# **Root Bridge**

The "Root Bridge" is the "base" (root) of the spanning tree.

#### **Path Cost**

The path costs are the costs for transmitting a frame through the port in the LAN. This value should be adjusted to the transmission speed.

The valid range is 1 to 200000000. A path with higher costs is more likely to be blocked by STP if a network look is detected.

- "Path Cost Short" is the original size with a 16-bit value.
  - Only speeds up to 10 Gbit can be considered.
- "Path Cost Long" stands for a 32-bit value.

Speeds up to 10 Tbit are supported.

Table 58: STP Path Costs

Transmission Speed	Recommended Value	Recommended Range	Permissible Range
4 Mbit/s	250	100 1000	1 65535
10 Mbit/s	100	50 600	1 65535
16 Mbit/s	62	40 400	1 65535
100 Mbit/s	19	10 60	1 65535
1 Gbit/s	4	3 10	1 65535
10 Gbit/s	2	1 5	1 65535



- Each "Bridge" communicates with the "Root Bridge" via the "Root Port." The "Root Port" is the port on the switch with the lowest path costs to the "Root Bridge" (the "Root Path Cost"). If there is no "Root Port," then the switch becomes the "Root Bridge" for the "Spanning Tree" network.
- A "Designated Bridge" is selected for each LAN segment. This bridge has the lowest cost to the "Root Bridge" among the bridges connected to the LAN.

### Forward Time (Forward Delay)

The "Forward Time" is the maximum time (in seconds) that the switch waits before it changes states. This delay is required because every switch must first receive information on topology changes before it forwards frames. In addition, each port needs time to receive information on conflicts that would make it return to the blocking state. Otherwise, temporary data loops might result. The valid range is 4 to 30 seconds.

# Max Age

The "Max Age" is the maximum time (in seconds) that the switch can wait without receiving a BPDU ("Bridge Protocol Data Unit," configuration message) before attempting to reconfigure. All switch ports (except for "Designated Ports") receive BPDUs at regular intervals. Each port that ages out STP information (from the last BPDU) becomes the "Designated Port" for the attached LAN. If it is a "Root Port," a new "Root Port" is selected from among the switch ports attached to the network.

#### **Hello Time**

The "Hello Time" is the time interval in seconds between configuration messages (BDPU "Bridge Protocol Data Unit") sent from the root switch.

#### STP

After a bridge determines the lowest cost "Spanning Tree" with STP, it enables the "Root Port" and "Designated Ports" for connected LANs and disables all other ports that participate in STP. Network packets are therefore only forwarded between enabled ports, eliminating any possible network loops.

STP-aware switches exchange BPDUs periodically. If the topology changes in a LAN coupled via bridge, a new tree is spanned. Once a stable network topology has been established, all bridges listen for "Hello BPDUs" transmitted from the "Root Bridge." If a bridge does not get a "Hello BPDU" after a predefined interval ("Max Age"), the bridge assumes that the link to the "Root Bridge" is down. This bridge then initiates negotiations with other bridges to reconfigure the network to re-establish a valid network topology.



### **Edge Port**

"Edge Ports" are attached to a LAN that has no other bridges attached. These ports can transition directly to the "Forwarding" state. RSTP still continues to monitor the port for BPDUs in case a bridge is connected. RSTP can also be configured to automatically detect "Edge Ports." As soon as the bridge detects a BPDU coming to an "Edge Port," the port loses its status as an "Edge Port."

# **Forward Delay**

The "Forward Delay" is the maximum time (in seconds) that the root device waits before changing states (e.g., from "Listening" to "Learning" to "Forwarding"). The valid range is from 4 to 30 seconds.

#### **Transmission Limit**

The "Transmission Limit" is used to configure the minimum interval between the transmissions of consecutive RSTP BPDUs. This function can only be enabled in RSTP mode. The valid range is from 1 to 10 seconds.

# **Bridge Priority**

"Bridge Priority" is used in selecting the root switch, root port and "Designated Port." The switch with the highest priority becomes the STA root switch. If all switches have the same priority, however, the switch with the lowest MAC address becomes the root switch.

#### **Port Priority**

The port priority is configured in the switch. A low numeric value indicates a high priority. A port with lower priority is more likely to be blocked by STP if a network loop is detected. The valid range is from 0 to 240.

#### **BPDU Guard**

This setting is configured separately for each port. If the port is enabled in "BDU Guard" and receives a BPDU, the port is switched to the "Disabled" state to prevent a faulty environment. The user must enable the port manually.



### **BPDU Filter**

This function is used to set up a filter for sending or receiving BPDUs on a switch port. If the port receives BPDUs, the BPDUs are dropped. If both the "BPDU Filter" and the "BPDU Guard" are enabled, the "BPDU Filter" has the higher priority.



# Note

### **BPDU Filter and BPDU Guard**

If both the "BPDU Filter" and the "BPDU Guard" are enabled, the "BPDU Filter" has the higher priority.

#### **Root Guard**

The "Root Guard" function forces an interface to become a "Designated Port" to prevent neighboring switches from becoming a root switch. This function provides a way to specify the selection of a "Root Bridge" in a network. It prevents a "Designated Port" from becoming the "Root Port." If a port with the "Root Guard" function receives a superior BPDU, the port moves to a root-inconsistent state (effectively equivalent to the "Listening" state) to maintain the status of the current "Root Bridge." The port can be moved to the "Forwarding" state if it receives no superior BPDU for the time period of "Hello Times."



#### 9.4.2.1 STP/RSTP Setup



# Note

### **Functions of the STP/RSTP**

STP/RSTP detects and breaks network loops provides backup links between switches, bridges or routers.

Default values: Forward Delay 15 s, Mag Age 20 s and Hello Time 2 s.

# STP/RSTP Setup

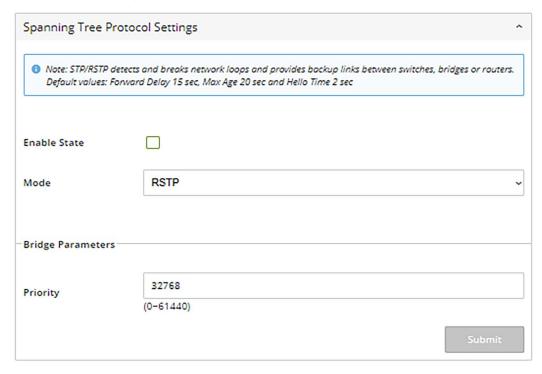


Figure 70: Tab "Redundancy" - Menu "STP/RSTP Setup"

Table 59: Tab "Redundancy" - Menu "STP/RSTP Setup"

Spanning Tree Protocol Settings				
Parameter	Default	Description		
Enable State		☐ The "STP/RSTP" function is not enabled for the switch.		
		☐ The "STP/RSTP" function is enabled for the switch.		
Mode	RSTP	Select "RSTP" in the selection box if you want to use the faster "Rapid Spanning Tree Protocol."		
	STP	Select "STP" in the selection box if you want to use the "Spanning Tree Protocol."		
Bridge Parameters				
Parameter	Default	Description		
Priority (Range: 0~61440)	32768	In the input field, enter a value for the priority. The lower the numerical value you assign, the higher the priority of this bridge is. Valid range: 0 61440		



# 9.4.2.2 STP/RSTP Port Setup




# Note

### **Functions of Port Setup**

Port Setup allows configuring Port Range, Edge Port, BDU Filter and Guard and Root Guard with a default value of 250 for Path Costs and 128 for Priority.

### STP/RSTP Port Setup

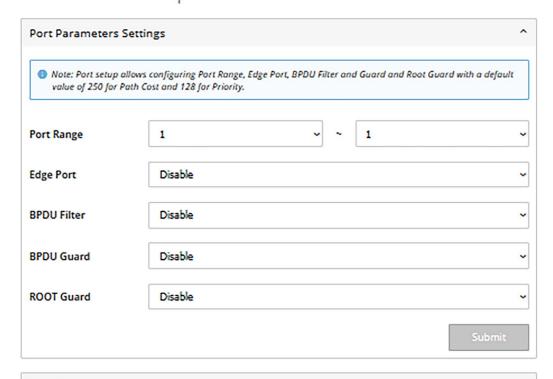

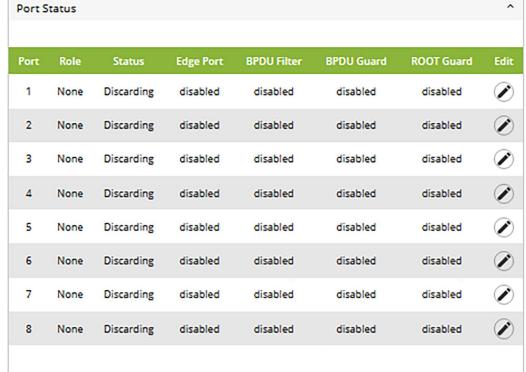


Figure 71: Tab "Redundancy" - Menu "STP/RSTP Port Setup" (Example)

Table 60: Tab "Redundancy" – Menu "STP/RSTP Port Setup" (Example)

Port Parameter Settings			
Parameter	Default	Description	
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "STP/RSTP" settings.	
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "STP/RSTP" settings.	
Edge Port	Disable	Select "Disable" in the selection box to disable the "Edge Port" port type for the specific port.	
	Enable	Select "Enable" in the selection box to enable the "Edge Port" port type for the specific port.	
BPDU Filter	Disable	Select "Disable" in the selection box to disable the BPDU filter function for the specific port.	
	Enable	Select "Enable" in the selection box to enable the BPDU filter function for the specific port.	
BPDU Guard	Disable	Select "Disable" in the selection box to disable the "BPDU Guard" function for the specific port.	
	Enable	Select "Enable" in the selection box to enable the "BPDU Guard" function for the specific port.	
ROOT Guard	Disable	Select "Disable" in the selection box to disable the "ROOT Guard" function for the specific port.	
	Enable	Select "Enable" in the selection box to enable the "ROOT Guard" function for the specific port.	
Port Status			
Parameter	Default	Description	
Port	1 8 (16)	This column shows the port numbers.	
Role	Alternated Designated Root Backup None	This column displays the role of the port.	
Status	Discarding Blocking Listening Learning Forwarding Disabled	This column displays the port status.	
Edge Port	Disable Enable	This column displays the status of the "Edge Port" function.	
BPDU Filter	Disable Enable	This column displays the status of the BPDU filter function.	
	Lilabio		
BPDU Guard	Disable Enable	This column displays the status of the "BPDU Guard" function.	
	Disable	This column displays the status of the "BPDU Guard" function.  This column displays the status of the "Root Guard" function.	



### 9.5 **Diagnostic**

#### 9.5.1 **Alarm**

#### 9.5.1.1 Information



# Note

### **Function of the Alarm function**

The Alarm feature displays if there is any abnormality that needs to be amended immediately.

### Information

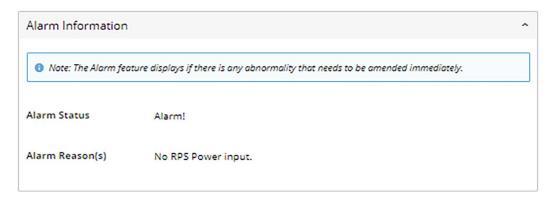


Figure 72: Tab "Diagnostic" – Menu "Information"

Table 61: Tab "Diagnostic" – Menu "Information"

Alarm Information			
Parameter	Default	Description	
Alarm Status		This display field shows if there are any alarm events.	
Alarm Reason		This display field shows details about the alarm events.	



#### 9.5.1.2 **DIP Status**



# Note

### Displays of the DIP Status

It will display the status of the DIP for QoS, Traffic flooding, Port 9,10- 100Fx enabled or disabled

### **DIP Status**

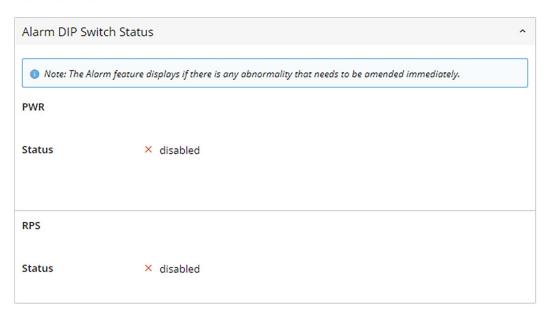


Figure 73: Tab "Diagnostic" - Menu "DIP Status"

Table 62: Tab "Diagnostic" – Menu "DIP Status"

DIP switch Status				
Parameter	Default	Description		
PWR	<b>Disable</b> Enable	This display field indicates whether "PWR" is enabled or disabled.		
RPS	<b>Disable</b> Enable	This display field indicates whether "RPS" is enabled or disabled.		

#### 9.5.1.3 **Traffic Flooding**

A traffic flooding means that your network is over whelmed with constant broadcast or multicast traffic. Broadcast traffic flooding can eventually lead to a complete loss of network connectivity as the packets proliferate.

Traffic flooding Control protects the Switch bandwidth from flooding packets, including broadcast packets, multicast packets, and destination lookup failure (DLF). The Rate is a threshold that limits the total number of the selected type of packets. For example, if the broadcast and multicast options are selected, the total amount of packets per second for those two types will not exceed the limit value.

Broadcast traffic flooding control limits the number of broadcast, multicast and unknown unicast (also referred to as Destination Lookup Failure or DLF) packets the Switch receives per second on the ports. When the maximum number of allowable broadcast, multicast and unknown unicast packets is reached per second, the subsequent packets are discarded. Enable this feature to reduce broadcast, multicast and unknown unicast packets in your network.

Traffic flooding Control unit: 3700 Mbit/s.

### **Default Settings**

**Broadcast Storm Control:** 100 Mbit/s **Multicast Storm Control** None **DLF Storm Control** 100 Mbit/s




# Note

### Set an alarm threshold

Set an alarm threshold for the packet type Broadcast, Multicast, Broadcast+Multicast.



# Traffic Flooding

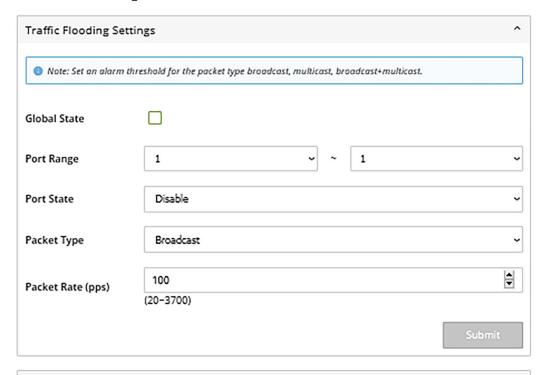

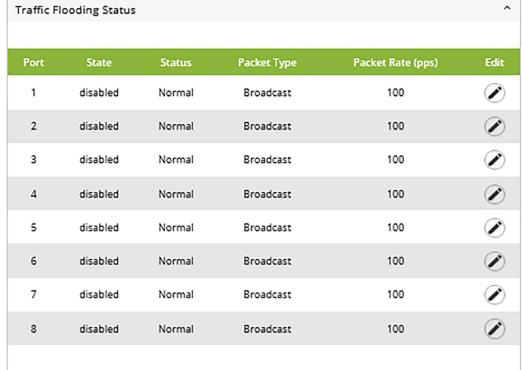


Figure 74: Tab "Diagnostic" – Menu "Traffic Flooding" (Example)

Table 63: Tab "Diagnostic" – Menu "Traffic Flooding" (Example)

<b>Traffic Flooding Set</b>	tings			
Parameter	Default	Description		
Global State		Global State is disable.		
		Global State is enable.		
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Traffic Flooding" settings.		
	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Traffic Flooding" settings.		
Port State	Disable	Select "Disable" in the selection box to disable the "Traffic Flooding" function for the switch.		
	Enable	Select "Enable" in the selection box to enable the "Traffic Flooding" function for the switch.		
Packet Type	Broadcast	Select "Broadcast" in the selection box if you want to monitor this as the packet type.		
	Multicast	Select "Multicast" in the selection box if you want to monitor this as the packet type.		
	Bcast+Mcast	Select "Bcast+Mcast" in the selection box if you want to monitor both as the packet types.		
Packet Rate (pps) (20-3700)		User can configure allowable packets per second and the configurable range is 20 to 3700 Mbit/s		
Traffic Flooding Sta	itus			
Parameter	Default	Description		
Port	1 8 (16)	This column shows the port numbers.		
State	Disable Enable	This column displays the status of the specific port.		
Status	Normal	This column displays the status of the operational state.		
Packet Type	Broadcast Multicast Bcast+Mcast	This column displays the type of data packet.		
Packet Rate		This column displays the selected packet rate.		
(pps)				



### 9.5.1.4 Port Utilization

This feature helps users to monitor the ports' traffic utilization, to display the link up ports' traffic utilization only.




# Note

# Set traffic usage

Set traffic usage (Limited to a certain percentage) Rx packet rate %.



### Port Utilization

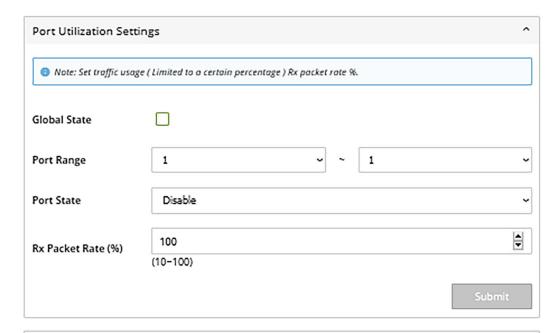

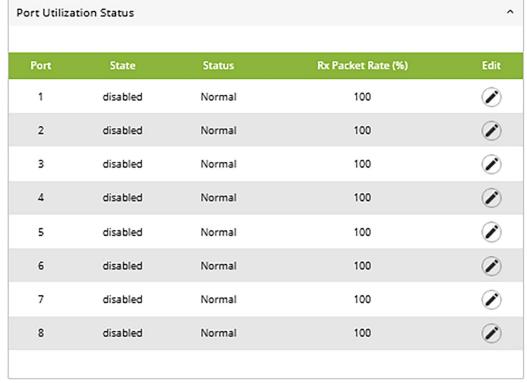


Figure 75: Tab "Diagnostic" – Menu "Port Utilization" (Example)

Table 64: Tab "Diagnostic" - Menu "Port Utilization" (Example)

Port Utilization Settin	ngs			
Parameter	Default	Description		
Global State		Global State is disable.		
		Global State is enable.		
Port Range	<b>1</b> 8 (16)	Select a port or port range in the selection box for which you want to configure the "Port Utilization" settings.		
1 8 (16) Select a port of which you war		Select a port or port range in the selection box for which you want to configure the "Port Utilization" settings.		
Port State	Disable	Select "Disable" in the selection box to disable the "Port Utilization" function for the switch.		
Enable		Select "Enable" in the selection box to enable the "Port Utilization" function for the switch.		
Rx Packet Rate (%) (10-100)	100	User can configure allowable packets per second and the configurable range is 10 to 100 %.		
Port Utilization Statu	S			
Parameter	Default	Description		
Port	1 8 (16)	This column shows the port numbers.		
State	Disable Enable	This column displays the status of the specific port.		
Status	Normal	This column displays the status of the operational state.		
Rx Packet Rate (%)		This column displays the selected packet rate.		
Edit		Preselection for editing.		

### 9.5.2 **Dashboard Configuration**

#### 9.5.2.1 **Quick Diagnosis Dashboard**

### 9.5.2.1.1 Port Registration Learn

Quick Diagnosis Dashboard



Figure 76: Tab "Diagnostic" – Menu "Dashboard Configuration" – "Port Registration Learn"

In this dashboard click the [Learn] button to save configuration of the port settings.

If the network is correctly connected, the current state of the connections in the switch can be saved as a reference. Future deviations from this will be displayed as errors.

In this dashboard click the **[Reset]** button to reset to default configuration (learned register ports are forget).



### 9.5.2.1.2 Port Link Down Statistics



Figure 77: Tab "Diagnostic" - Menu "Dashboard Configuration" - "Port Link Down Statistics"

In this dashboard user can select particular interface or all statistics, user can reset, download, and print.

Click the [Reset] button to reset the port link down statistics.

Click the **[Download]** button to download the port link down statistics log. In addition, by click the [Download] button, the Port Link Down Statistic can be downloaded individually per port or completely.

### 9.5.2.1.3 Critical/Alert Threshold

Here you can set the thresholds at which the tiles "CPU Usage", "Memory Usage", "Transmitting Port Usage" and "Receiving Port Usage" change colors in the dashboard (see Section "Diagnostics").



### Functions of the threshold values

The Alert Threshold controls at which value the tiles turns yellow and the Critical Threshold controls at which value the tiles turns red. These thresholds can be set individually for CPU, memory and port send (Tx) / receive (Rx) utilization.

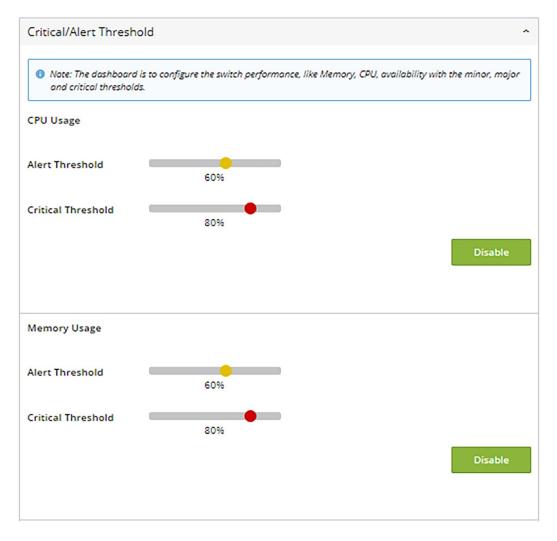


Figure 78: Tab "Diagnostic" - Menu "Dashboard Configuration" - "Critical/Alert Threshold 01"

In this dashboard click the [Disable/Enable] button to disable/enable the

- **CPU Usage Visualization**
- Memory Usage Visualization



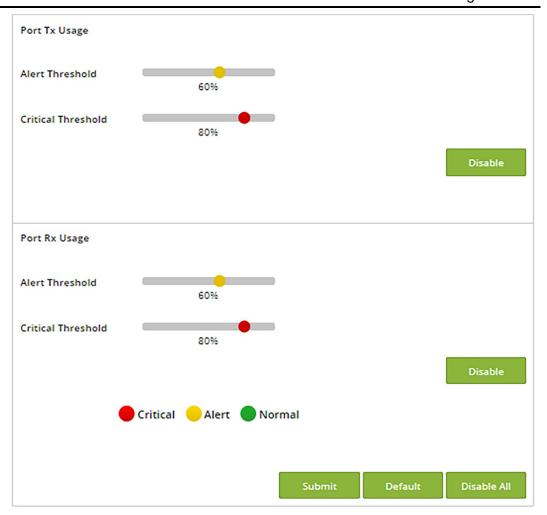


Figure 79: Tab "Diagnostic" – Menu "Dashboard Configuration" – "Critical/Alert Threshold 02"

In this dashboard click the [Disable/Enable] button to disable/enable the

- Port Tx Usage Visualization
- Port Rx Usage Visualization

#### 9.5.3 **Modbus**

#### 9.5.3.1 **Data Format and Function Code**

MODBUS TCP supports different types of data formats for reading. The four most important types are:

Table 65: Data Format and Function Code

Data Access Type		Function Code	Function Name	Note
Bit access	Physical Discrete Inputs	2	Read Discrete Inputs	Not supported.
	Internal Bits or Physical Coils	1	Read Coils	Not supported.
Word access (16-bit access)	Physical Input Registers	4	Read Input Registers	
	Physical Output	3	Read Holding Registers	Not supported.

#### 9.5.3.2 **MODBUS** Register

### Modbus

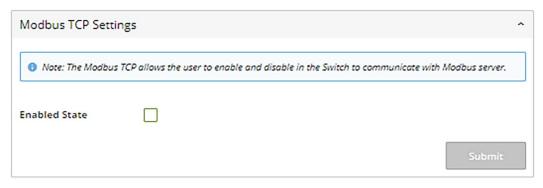


Figure 80: Tab "Diagnostic" - Menu "Modbus"

Table 66: Modbus

Modbus TCP Settings				
Parameter	Default	Description		
Enabled State		Function "Modbus" is disable.		
		Function "Modbus" is enable.		



### **Modbus/TCP Tables**

The table "Modbus/TCP Tables" can be found in section "Appendix" > "Modbus/TCP Tables".



### 9.5.4 **SNMP**



# Note

### Change to the "Configuration" menu

If you click the "SNMP" menu in the "Diagnostic" tab, you can access the "Configuration" tab in the "SNMP" menu.

Refer to the "Configuration" > "SNMP" section for a detailed description.

### 9.5.5 **System Log**

#### 9.5.5.1 **Syslog Server Setting**

The syslog function can be enabled or disabled. The default setting is disabled. The log message is recorded in the Switch file system. If the syslog server's IP address has been configured, the Switch will send a copy to the syslog server.

The log message file is limited in 4 kB size. If the file is full, the oldest one will be replaced.



# Note

### **Syslog function**

The syslog function records some of system information for debugging purpose. Each log message recorded with one of these levels, Alert/Critical/Error/Warning/Notice/Information.



### System Log

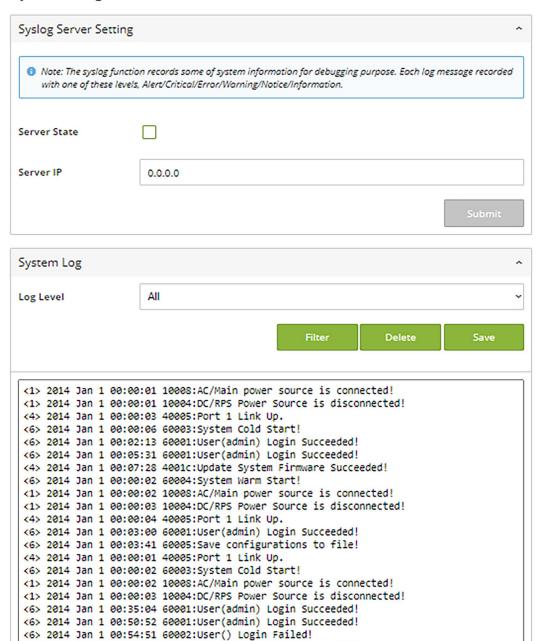


Figure 81: Tab "Diagnostic" - Menu "System Log"

<6> 2014 Jan 1 00:55:04 60001:User(admin) Login Succeeded!

Table 67: Tab "Diagnostic" – Menu "System Log"

Syslog Server Settings			
Parameter	Default	Description	
Global State		Global State is disable.	
		Global State is enable.	
Server IP	0.0.0.0	Enter the IP address in decimal-point notation (e.g., 192.168.1.1).	
System Log			
Parameter	Default	Description	
Log Level	All Select "All" in the selection box if you wa all log messages.		
	1:Alarm	Select "Alarm" in the selection box if you want to display the log messages.	
	2:Critical	Select "Critical" in the selection box if you want to display critical log messages.	
	3:Error	Select "Error" in the selection box if you want to display the errors.	
	4:Warning Select "Warning" in the selection box display the warnings.		
	5:Notice	Select "Notice" in the selection box if you want to display the notices.	
	6:Information	Select "Information" in the selection box if you want to display all information.	



#### 9.6 **Maintenance**

#### 9.6.1 Reboot



# Note

### **Function of Maintenance**

Maintenance option to reboot, configuration backup/restore, firmware upgrade, reset the switch to default.

### Maintenance

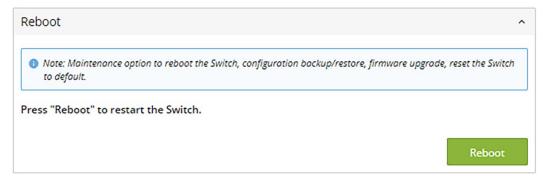


Figure 82: Tab "Maintenance" – Menu "Maintenance" – "Reboot"

The "Reboot" function allows you to restart the switch without physically turning the power off.

Follow the steps below to reboot the switch.

Click the [Reboot] button in the "Reboot" menu. The following windows open:



Figure 83: Tab "Maintenance" – "Reboot" Tab – Message

2. Click **[OK]** and wait for the switch to restart. The process can take up to two minutes. This process does not change the switch configuration.

### 9.6.2 **Upgrade Firmware**



Figure 84: Tab "Maintenance" – Menu "Maintenance" – "Upgrade Firmware"

Execute the following steps to update the switch's firmware.

- 1. Click the [Choose file] button. The file selection dialog opens. Select the respective firmware file.
- 2. Click the **[Upgrade]** button to load the new firmware.



# 9.6.3 Upload Configuration



Figure 85: Tab "Maintenance" - Menu "Maintenance" - "Upload Configuration"

Execute the following steps to upload the configuration file from your PC to the switch.

- 1. Select "Upload configuration file to your Switch."
- 2. Click the **[Choose file]** button.

  Select the configuration file by specifying the full path.
- 3. Click the **[Upload]** button to begin uploading the file.

### **Download Configuration** 9.6.4

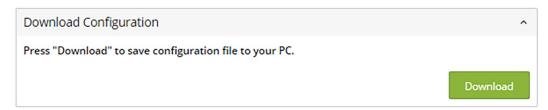


Figure 86: Tab "Maintenance" – Menu "Maintenance" – "Download Configuration"

Execute the following steps to save the configuration file to your PC.

- 1. Select "Press Download to save the configuration file to your PC."
- 2. Click the [Download] button to start the download.



## 9.6.5 Reset Configuration

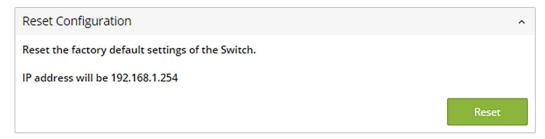


Figure 87: Tab "Maintenance" - Menu "Maintenance" - "Reset Configuration"

The "Reset" function allows you to restart the switch without physically turning the power off.

Follow the steps below to restart the switch.

1. Click the **[Reset]** button in the "Reset" menu. The following windows open:

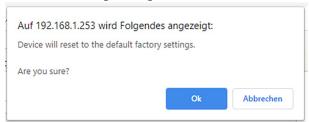


Figure 88: Tab "Maintenance" - "Reset" Tab - Message

2. Click **[OK]** and wait for the switch to restart. The process can take up to two minutes. This system configuration reset to default values.

### **Appendix** 10

### 10.1 **RJ-45 Cable**

Always use category 5e cables to connect your network devices. The pin assignment is given below:

Table 68: RJ-45 Cable

Contact	Description		Pair	Color
	4-wire	8-wire		(acc.
				EIA/TIA 568B)
1	TD	D1+	2	White/Orange
2	TD-	D1-	2	Orange
3	RX+	D2+	3	White/Green
4	Not assigned	D3+	1	Blue
5	Not assigned	D3-	1	White/Blue
6	RX-	D2-	3	Green
7	Not assigned	D4+	4	White/Brown
8	Not assigned	D4-	4	Brown



# Note

### **Functions on the RJ45 connector**

The Lean Managed Switch offers the functions autocrossing und autonegotiation to the RJ-45 connection.



# 10.2 Configuring in the Command Line Interface (CLI)

This chapter lists a selection of available Command Line Interface commands.

# 10.2.1 System Status

### 10.2.1.1 System Information

Table 69: CLI "System Information" Configuration

Node	Command	Description	
enable	show hostname	This command displays the system's network name.	
configure	reboot	This command reboots the system.	
eth0	ip address A.B.C.D/M	This command configures the static IP and subnet mask for the system.	
interface	show	This command displays the current port configuration.	
acl	show	This command displays the current access control list.	
vlan	show	This command displays the current VLAN configuration.	
enable	show interface eth0	This command displays the current Eth0 configurations.	
enable	show model	This command displays the system information.	
enable	show running-config	This command displays the current operating configurations.	
enable	show system-info	This command displays the system's CPU utilization and memory information.	
enable	show uptime	This command displays the system uptime.	

# 10.2.2 Default Settings

# 10.2.2.1 System

Table 70: CLI "System" Configuration

Node	"System" Configuration Command	Description	
enable	ping IPADDR [-c COUNT]	This command sends an echo request to the destination host. The –c parameter allow user to specific the packet count.	
		The default count is 4.	
enable	ping IPADDR [-s SIZE]	This command sends an echo request to the destination host.  The –s parameter allow user to specific the packet size.  Valid range: 0 1047 bytes	
enable	ping IPADDR [-c COUNT -s SIZE]	This command sends an echo request to the destination host.  The –c parameter allow user to specific the packet count.  The default count is 4.  The –s parameter allow user to specific the packet size.  Valid range: 0 1047 bytes	
enable	ping IPADDR [-s SIZE -c COUNT]	This command sends an echo request to the destination host.  The –c parameter allow user to specific the packet count.  The default count is 4.  The –s parameter allow user to specific the packet size.  Valid range: 0 1047 bytes	
configure	Reboot	This command reboots the system.	
configure	hostname STRINGS	This command sets the system's network name.	
configure	interface eth0	This command enters the eth0 interface node to configure the system IP.	
configure	configure terminal	This command enter the configuration mode.	
configure	interface eth0	This command enter the configuration mode of the interface.	
eth0	Show	This command show information about eth0.	
eth0	ip address A.B.C.D/M	This command sends an echo request to the destination host. The –c parameter allow user to specific the packet count. The default count is 4. The –s parameter allow user to specific the packet size. Valid range: 0 1047 bytes	
eth0	ip address default-gateway A.B.C.D	This command configures the system's default gateway.	
eth0	ip dhcp client (disable enable renew)	This command configures a DHCP client function for the system. "Disable": Use a static IP address for the switch. "Enable & Renew": Use the DHCP client to get an IP address from the DHCP server.	
eth0	management vlan VLAN ID	This command configures the management VLAN.	



### 10.2.2.1.1 Jumbo Frame

Table 71: CLI "Jumbo Frame" Configuration

Node	Command	Description
enable	show jumboframe	This command displays the current jumbo frame settings.
configure	jumboframe (10240 1522 1536 1552 92 16)	This command configures the maximum number of bytes for frame sizes.
configure	interface IFNAME	This command starts configuration mode.
interface	jumboframe(10240 1522 1 536 1552 9010 9216)	This command configures the maximum number of bytes per frame.
configure	interface range gigabitethernet1/0/PORTLI STS	This command starts configuration mode.
if-range	jumboframe(10240 1522 1 536 1552 9010 9216)	This command configures the maximum number of bytes per frame.

### 10.2.2.1.2 SNTP

Table 72: CLI "SNTP" Configuration

Node	Command	Description
enable	show time	This command displays the current time and date configuration.
configure	time HOUR:MINUTE:SECOND	This command sets the current time of the switch. hour: 0 23 min: 0 59 sec: 0 59 Note: If you do not configure daylight saving time until after the date and time, the switch uses daylight saving time.
configure	time date YEAR/MONTH/DAY	This command sets the current date of the switch. year: 1970– month: 1 12 day: 1 31
configure	time daylight-saving-time	This command enables daylight saving time.
configure	no time daylight-saving-time	This command disables daylight saving time on the switch.
configure	time daylight-saving-time start-date (first   second   third   fourth   last) (Sunday   Monday   Tuesday   Wednesday   Thursday   Friday   Saturday) MONTH HOUR	This command sets the start date of daylight saving time.
configure	time daylight-saving-time end-date (first   second   third   fourth   last) (Sunday   Monday   Tuesday   Wednesday   Thursday   Friday   Saturday) MONTH HOUR	This command sets the end date of daylight saving time.
configure	time ntp-server (disable enable)	This command disables/enables the NTP server settings.
configure	time ntp-server IP_ADDRESS	This command sets the IP address of the time server.
configure	time ntp-server domain-name STRING	This command sets the domain names of the time server.
configure	time timezone STRING	This command sets the time difference between UTC (formerly GMT) and the time zone.  Valid range: −1200 +1200



### Example

L2SWITCH(config)#time ntp-server 192.5.41.41

L2SWITCH(config)#time timezone +0800

L2SWITCH(config)#time ntp-server enable

L2SWITCH(config)#time daylight-saving-time start-date first Monday 6 0

L2SWITCH(config)#time daylight-saving-time end-date last Saturday 10 0

### 10.2.2.1.3 Management Host

Table 73: CLI "Management Host" Configuration

Node	Command	Description
enable	show interface eth0	The command displays all eth0 interface configurations.
eth0	Show	The command displays all eth0 interface configurations.
eth0	management host A.B.C.D	The command adds a management host address.
eth0	no management host A.B.C.D	The command deletes a management host address.

### **Example**

L2SWITCH#configure terminal

L2SWITCH(config)#interface eth0

L2SWITCH(config-if)#management host 192.168.200.106



# 10.2.2.2 MAC Management

Table 74: CLI "MAC Management" Configuration

Node	Command	Description
enable	show mac-address-table aging-time	This command displays the current "Age Time" for the MAC address table.
enable	show mac-address-table (static dynamic)	This command displays the current static/dynamic unicast address entries.
enable	show mac-address-table mac MACADDR	This command displays information on a specific MAC address table.
enable	show mac-address-table port PORT_ID	This command displays the current unicast address entries recognized by the specific port.
configure	mac-address-table static MACADDR vlan VLANID port PORT_ID	This command configures a static unicast entry.
configure	no mac-address-table static MACADDR vlan VLANID	This command deletes a static unicast entry from the address table.
configure	mac-address-table aging- time VALUE	This command configures the MAC table "Age Time."
configure	clear mac address-table dynamic	This command deletes the dynamic address entries.

### **Example**

L2SWITCH(config)#mac-address-table static 00:11:22:33:44:55 vlan 1 port 1

### 10.2.2.3 Port Mirroring

Table 75: CLI "Port Mirroring" Configuration

Node	Command	Description
enable	show mirror	This command displays the current "Port Mirroring" configurations.
configure	mirror (disable enable)	This command disables/enables "Port Mirroring" on the switch.
configure	mirror destination port PORT_ID	This command specifies the monitor port for the "Port Mirroring."
configure	mirror source ports PORT_LIST mode (both ingress egress)	This command adds a port or port range as the source port(s) for the "Port Mirroring."
configure	no mirror source ports PORT_LIST	This command removes a port or port range as the source port(s) for the "Port Mirroring."

### Example

L2SWITCH#configure terminal

L2SWITCH(config)#mirror enable

L2SWITCH(config)#mirror destination port 2

L2SWITCH(config)#mirror source ports 3-11 mode both



### 10.2.2.4 Port Settings

Table 76: CLI "Port Settings" Configuration

Node	Command	Description
enable	show interface IFNAME	This command displays the current port configurations.
configure	interface IFNAME	This command is used to enter the "interface configure node."
interface	Show	This command displays the current port configurations.
interface	flowcontrol (off   on)	This command disables/enables "Flow Control" for a port.
interface	speed (auto 10-full   10- full-n   10-half   10-half-n   100-full   100-full -n   100- half   100-half-n   1000-full   1000-full-n)	This command configures the speed and duplex mode for a port.
interface	shutdown	This command disables a specific port.
interface	no shutdown	This command enables a specific port.
interface	description STRINGs	This command configures a description for the respective port.
interface	no description	This command is used to configure the standard description of the port.
configure	interface range gigabitethernet1/0/PORTLI STS	This command is used to enter the interface configure node.
if-range	description STRINGs	This command configures a description for the specific port.
if-range	no description	This command is used to configure the standard port description for the individual ports.
if-range	shutdown	This command disables specific ports.
if-range	no shutdown	This command enables specific ports.
if-range	speed (auto 10-full   10- full-n   10-half   10-half-n   100-full   100-full -n   100- half   100-half-n   1000-full   1000-full-n)	This command configures the speed and duplex for the port.

# Example

L2SWITCH#configure terminal

L2SWITCH(config)#interface fa1/0/1

L2SWITCH(config-if)#speed auto



# 10.2.3 Advanced Settings

### 10.2.3.1 Storm Control

Table 77: CLI "Storm Control" Configuration

Node	Command	Description
enable	show storm-control	This command displays the current "Storm Control" configurations.
configure	storm-control rate RATE_LIMIT type (bcast   mcast   DLF   bcast+mcast   bcast+DLF   mcast+DLF   bcast+mcast+DLF) ports PORTLISTS	This command enables bandwidth limitation for broadcast, multicast or DLF packets and sets it for a specified type.
configure	no storm-control type (bcast   mcast   DLF   bcast+mcast   bcast+DLF   mcast+DLF   bcast+mcast+DLF) ports PORTLISTS	This command disables bandwidth limitation for broadcast, multicast or DLF packets.

### Example

L2SWITCH#configure terminal

L2SWITCH(config)#storm-control rate 1 type broadcast ports 1-6

L2SWITCH(config)#storm-control rate 1 type multicast ports 1-6

L2SWITCH(config)#storm-control rate 1 type DLF ports 1-6



### 10.2.3.1.1 VLAN

### 10.2.3.1.2 Port Isolation

Table 78: CLI "Port Isolation" Configuration

Node	Command	Description
enable	show port-isolation	This command displays the current "Port Isolation" configurations.  "V" indicates that the port's packets can be sent to this port.  "-" indicates that the port's packets cannot be sent to this port.
interface	port-isolation ports PORTLISTS	This command configures a port or port range to forward data packets from a specific port.
interface	no port-isolation	This command configures all ports to forward data packets from a specific port.

### Example

L2SWITCH(config)#interface 1/0/2

L2SWITCH(config-if)#port-isolation ports 3-10

#### 10.2.3.1.2.1 VLAN Settings

Table 79: CLI "VLAN Settings" Configuration

Node	Command	Description
enable	show vlan VLANID	This command displays the VLAN configurations.
configure	vlan <1–4094>	This command enables a VLAN and enters the VLAN node.
configure	no vlan <1–4094>	This command deletes a VLAN.
vlan	show	This command displays the current VLAN configurations.
vlan	name STRING	This command assigns a name to the specific VLAN. The VLAN name should be a combination of numbers, letters, hyphens (-) and underscores (_). The maximum length of the name is 16 characters.
vlan	no name	This command resets the VLAN name to the default setting.  Note: The default VLAN name comprises the following: : "VLAN"+VLAN_ID, VLAN1, VLAN2,
vlan	fixed PORT_LIST	This command assigns ports to a VLAN group as fixed subscribers.
vlan	no fixed	This command deletes all fixed ports from a VLAN.
vlan	tagged PORT_LIST	This command assigns fixed ports to a VLAN group as tagged subscribers. The port(s) should be a fixed subscriber of the VLAN group.
vlan	no tagged	This command deletes all tagged fixed ports from a VLAN.
vlan	untagged PORT_LIST	This command assigns fixed ports to a VLAN group as untagged subscribers. The port(s) should be a fixed subscriber of the VLAN group.
vlan	no untagged	This command deletes all untagged ports from a VLAN.
vlan	acceptable frame type (all   tagged   untagged)	This command configures the permissible frame type.

#### Example

L2SWITCH#configure terminal

L2SWITCH(config)#vlan 2

L2SWITCH(config-vlan)#fixed 1-6

L2SWITCH(config-vlan)#untagged 1-3



#### 10.2.3.2 LLDP

Table 80: CLI "LLDP" Configuration

Node	Command	Description
enable	show Ildp	This command displays the LLDP configurations.
enable	show lldp neighbor	This command displays all information of port neighbors.
configure	lldp (disable   enable)	This command globally enables/disables the LLDP function on the switch.
configure	lldp tx-hold <2-100>	This command configures the "tx-Hold Time" that determines the TTL of the switch message (TTL = tx-hold * tx-interval).
interface	Ildp tx-interval <1-3600>	This command configures the interval to transmit the LLDP packets.



#### 10.2.3.2.1 Loop Detection

Table 81: CLI "Loop Detection" Configuration

Node	Command	Description
enable	show loop-detection	This command displays the current configuration for "Loop Detection."
configure	loop-detection (disable   enable)	This command disables/enables "Loop Detection" on the switch.
configure	loop-detection address MACADDR	This command configures the destination MAC address for special "Loop Detection" packets.
configure	no loop-detection address	This command resets the destination MAC address to the default setting (00:0b:04:AA:AA:AB).
interface	loop-detection (disable   enable)	This command disables/enables "Loop Detection" for a specific port.
interface	no shutdown	This command enables a specific port. The command can enable a port blocked by "Loop Detection."
interface	loop-detection recovery (disable   enable)	This command enables/disables the "Recovery" function on a port.
interface	loop-detection recovery time VALUE	This command configures the "Recovery Time" period.

#### Example

L2SWITCH(config)#loop-detection enable

L2SWITCH(config)#interface 1/0/1

L2SWITCH(config-if)#loop-detection enable

L2SWITCH(config-if)#loop-detection recovery enable

L2SWITCH(config-if)#loop-detection recovery time 10



#### 10.2.3.2.2 STP

Table 82: CLI "STP" Configuration

Node	Command	Description
enable	show spanning-tree active	This command only displays STP information for
		active ports.
enable	show spanning-tree	This command only displays STP information for
	blockedports	blocked ports.
enable	show spanning-tree port detail PORT ID	This command displays STP information for the interface port.
enable	show spanning-tree	This command displays STP information for the
criabio	statistics PORT_ID	interface port.
enable	show spanning-tree	This command displays a summary of port states and
	summary	configurations.
enable	clear spanning-tree counters	This command clears the STP statistics for all ports.
enable	clear spanning-tree	This command clears the STP statistics for a specific
fi	counters PORT_ID	port.
configure	spanning-tree (disable   enable)	This command disables/enables the STP function in the system.
configure	spanning-tree algorithm-	This command configures the bridge times ("Forward
	timer forward-time TIME	Delay," "Max Age" and "Hello Time").
	max-age TIME hello-time	
configure	no spanning-tree	This command configures the default values for
	algorithm-timer	"Forward Delay," "Max Age" and "Hello Time."
configure	spanning-tree forward-time	This command configures the "Forward Delay" period
	<4–30>	(in seconds) for the bridge.
configure	no spanning-tree forward- time	This command configures the default values for "Forward Delay."
configure	spanning-tree hello-time <1–10>	This command configures the "Hello Time" period (in seconds) for the bridge.
configure	no spanning-tree hello- time	This command configures the default values for the "Hello Time."
configure	spanning-tree max-age	This command configures the "Max Age" period (in
	<6-40>	seconds) for bridge messages.
configure	no spanning-tree max-age	This command configures the default values for the "Max Age."
configure	spanning-tree mode (rstp   stp)	This command configures the STP mode.
configure	spanning-tree pathcost method (short   long)	This command configures the path cost method.
configure	spanning-tree priority	This command configures the priority for the system.
configure	no spanning-tree priority	This command configures the default values for the system priority.
interface	spanning-tree bpdufilter	This command configures enables/disables the
intoute	(disable   enable)	"BPDU Filter" function.
interface	spanning-tree bpduguard (disable   enable)	This command configures enables/disables the "BPDU Guard" function.
interface	spanning-tree edge-port (disable   enable)	This command enables/disables the "Edge Port" setting.



Table 82: CLI "STP" Configuration

Node	Command	Description
interface	spanning-tree cost VALUE	This command configures the costs for the specific port. Cost range: 16-bit-based value range from 1 to 65,535, 32-bit-based value range from 1 to 200,000,000.
interface	no spanning-tree cost	This command sets the path cost of the specific port to the default value.
interface	spanning-tree port-priority <0-240>	This command configures the priority for the specific port (default value: 128).
interface	no spanning-tree port- priority	This command sets the priority of the specific port to the default value.



### 10.2.3.3 Security

#### 10.2.3.4 Access Control List

Table 83: CLI "Access Control List" Configuration

Node	Command	Description
enable	show access-list	This command displays all access control profiles.
configure	access-list STRING	This command creates a new access control profile, where "STRING" is the profile name.
configure	no access-list STRING	This command deletes an access control profile.
acl	show	This command displays the current access control profile.
acl	action (disable   drop   permit)	This command processes the profile.  "disable": The profile is disabled.  "drop": If packets match the profile, they are dropped.  "permit": If packets match the profile, they are forwarded.
acl	destination mac host MACADDR	This command configures the destination MAC address and the mask for the profile.
acl	destination mac MACADDR	This command configures the destination MAC address and the mask for the profile.
acl	destination mac MACADDR MACADDR	This command configures the destination MAC address and the mask for the profile.  The second "MACADDR" parameter is the mask (e.g., ffff.ffff.0000) for the profile.
acl	no destination mac	This command deletes the destination MAC address from the profile.
acl	ethertype STRING	This command configures the ETHERNET type for the profile, where the "STRING" is a hexadecimal value, e.g., 08AA.
acl	no ethertype	This command deletes the ETHERNET type limit from the profile.
acl	source mac host MACADDR	This command configures the source MAC address and the mask for the profile.
acl	source mac MACADDR MACADDR	This command configures the source MAC address and the mask for the profile.
acl	no source mac	This command deletes the source MAC and the mask from the profile.
acl	source ip host IPADDR	This command configures the source IP address for the profile.
acl	source ip IPADDR IPMASK	This command configures the source IP address and the mask for the profile.
acl	no source ip	This command deletes the source IP address from the profile.
acl	destination ip host IPADDR	This command configures a specific destination IP address for the profile.
acl	destination ip IPADDR IPMASK	This command configures the destination IP address and the mask for the profile.
acl	no destination ip	This command deletes the destination IP address from the profile.



#### 10.2.3.4.1 Monitor

#### 10.2.3.4.2 Alarm

Table 84: CLI "Alarm" Configuration

	Command	Description
enable	show alarm-info	This command displays alarm information.

#### 10.2.3.4.3 Monitor Information

Table 85: CLI "Monitor Information" Configuration

Node	Command	Description
enable	show hardware-monitor (C F)	This command displays hardware operation information.

#### 10.2.3.5 SFP Information

Table 86: CLI "SFP Information" Configuration

Node	Command	Description
enable	show sfp info port PORT_ID	This command displays the SFP information.
enable	show sfp ddmi port PORT_ID	This command displays the SFP DDMI status.



#### 10.2.3.6 Management

#### 10.2.3.7 SNMP

Table 87: CLI "SNMP" Configuration

Node	Command	Description
enable	show snmp	This command displays the SNMP configurations.
configure	snmp community STRING (ro   rw) trusted-host IPADDR	This command configures the "SNMP Community" name.
configure	snmp (disable   enable)	This command disables/enables SNMP on the switch.
configure	snmp system-contact STRING	This command configures contact information for the system.
configure	snmp system-location STRING	This command configures the location information for the system.
configure	snmp system-name STRING	This command assigns a name to the system.
configure	snmp trap-receiver IPADDR VERSION COMMUNITY	This command sets up the trap receiver's configurations, including the IP address, version (v1 or v2c) and "Community."

#### **Example**

L2SWITCH#configure terminal

L2SWITCH(config)#snmp enable

L2SWITCH(config)#snmp community public rw trusted-host 192.168.200.106/24

L2SWITCH(config)#snmp trap-receiver 192.168.200.106 v2c public

L2SWITCH(config)#snmp system-contact IT engineer

L2SWITCH(config)#snmp system-location Wago



#### 10.2.3.8 **Maintenance**

Table 88: CLI "Maintenance" Configuration

Node	Command	Description
configure	reboot	This command reboots the system.
configure	reload default-config	This command resets the system configuration to the default settings.  Note: The system automatically reboots to apply the configurations.
configure	write memory	This command writes the current operating configurations to the configuration file.
configure	archive download-config <url path=""></url>	This command downloads an updated configuration file from the TFTP server, where <url path=""> can be: ftp://user:pass@192.168.1.1/file http://192.168.1.1/file tftp://192.168.1.1/file</url>
configure	archive upload-config <url path=""></url>	This command uploads the current configurations file to the TFTP server.
configure	archive download-fw <url path=""></url>	This command downloads an updated firmware file from the TFTP server, where <url path=""> can be: ftp://user:pass@192.168.1.1/file http://192.168.1.1/file tftp://192.168.1.1/file</url>

## 10.2.4 System Log

Table 89: CLI "System Log" Configuration

Node	Command	Description
enable	show syslog	The command displays all log messages recorded in the switch.
enable	show syslog level <1-6>	This command displays the log messages with the "LEVEL" recorded in the switch.
enable	show syslog server	The command displays the syslog server configurations.
configure	syslog (disable   enable)	The command disables/enables the syslog function.
configure	clear syslog	The command clears the syslog message.

#### **Example**

L2SWITCH#configure terminal

L2SWITCH(config)#syslog-server ip 192.168.200.106

L2SWITCH(config)#syslog-server enable



#### 10.2.4.1 User Account

Table 90: CLI "System Log" Configuration

Node	Command	Description
enable	show user account	This command displays the current user accounts.
configure	add user USER_ACCOUNT PASSWORD (normal   admin)	This command adds a new user account.
configure	delete user USER_ACCOUNT	The command deletes an existing user account.

#### Example

L2SWITCH#configure terminal

L2SWITCH(config)#add user q admin

L2SWITCH(config)#add user 1 1 normal



## 10.3 Modbus/TCP Tables

#### 10.3.1 Data Format and Function Code

Modbus/TCP supports different types of data formats for reading. The four most important types are:

Table 91: Data Format and Function Code

Data Access Type	)	Function Code	Function Name	Note
Bit access	Physical Discrete Inputs	2	Read Discrete Inputs	Not supported.
	Internal Bits or Physical Coils	1	Read Coils	Not supported.
Word access (16-bit access)	Physical Input Registers	4	Read Input Registers	
	Physical Output	3	Read Holding Registers	Not supported.

## 10.4 Modbus Register

The Modbus address space of the Lean Managed Switches starts at 1000 (decimal) for function code 4.



## Note

#### Modbus address space

The Modbus address space is also displayed in Web based management.

Table 92: Modbus Registers

t .	Read Input Registers (Function Code 04) Register Number 30001~39999								
		Date	For-	Description					
Dec	Hex	Dec	Hex	Length/ Word	mat				
System	System Information								
1001	3E9	1000	3E8	1	HEX	Vendor ID = 0x30DE			
1002	3EA	1001	3E9	16	ASCII	Vendor Name = "WAGO"			
						Word 0 Hi byte = 'W'			
						Word 0 Lo byte = 'A'			
						Word 1 Hi byte = 'G'			
						Word 1 Lo byte = 'O'			
						Word 2 Hi byte = '\0'			



Ī	1033	409	1032	408	16	ASCII	Product Name = "852-1816"
							Word 0 Hi byte = '8'
							Word 0 Lo byte = '5'
							Word 1 Hi byte = '2'
							Word 1 Lo byte = '-'
							Word 2 Hi byte = '1'
							Word 2 Lo byte = '8'
							Word 3 Hi byte = '1'
							Word 3 Lo byte = '6'
							Word 4 Hi byte = '\0'
							Word 4 Lo byte = '\0
-	1065	429	1064	428	7	ASCII	Product Serial Number
							Ex: Serial No=A00000000001
	1081	439	1080	438	12	ASCII	Firmware Version=" V1.0.1.S0"
							Word 0 Hi byte = 'V'
							Word 0 Lo byte = '1'
							Word 1 Hi byte = '.'
							Word 1 Lo byte = '0'
							Word 2 Hi byte = '.'
							Word 2 Lo byte = '1'
							Word 3 Hi byte = '.'
							Word 3 Lo byte = 'S'
							Word 4 Hi byte = '0'
							Word 4 Lo byte = '\0'
							Word 5 Hi byte = '\0'
							Word 5 Lo byte = '\0'
							Word 6 Hi byte = '\0'
							Word 6 Lo byte = '\0'
							Word 7 Hi byte = '\0'
							Word 7 Lo byte = '\0'
							Word 8 Hi byte = '\0'
							Word 8 Lo byte = '\0'
j	1097	449	1096	448	16	ASCII	Firmware Release Date="Mon Sep 30
_							18:51:45 2013"
	1113	459	1112	458	3	HEX	ETHERNET MAC Address
							Ex: MAC = 00-01-02-03-04-05
							Word 0 Hi byte = 0 x 00
							Word 0 Lo byte = 0 x 01
							Word 1 Hi byte = 0 x 02
							Word 1 Lo byte = 0 x 03
							Word 2 Hi byte = 0 x 04
							Word 2 Lo byte = 0 x 05





				2	HEX	Port 1 to 12 Tx Packets
2537	9E9	2536	9E8			Ex: port 1 Tx Packet Amount =
						0x87654321
2539	9EB	2538	9EA			Word 0 = 8765
2541	9ED	2540	9EB			Word 1 = 4321
2543	9EF	2542	9EE			
2545	9F1	2544	9F0			
2547	9F3	2546	9F2			
2549	9F5	2548	9F4			
2551	9F7	2550	9F6			
2553	9F9	2552	9F8			
2555	9FB	2554	9FA			
2557	9FD	2556	9FC			
2559	9FF	2558	9FE			
2561	A01	2560	A00			
2563	A03	2562	A02			
2565	A05	2564	A04			
2567	A07	2566	A06			
				2	HEX	Port 1 to 12 Rx Packets
2601	A29	2600	A28			Ex: port 1 Rx Packet Amount = 0x123456
2603	A2B	2602	A2A			Word 0 = 0012
2605	A2D	2604	A2C			Word 1 = 3456
2607	A2F	2606	A2E			
2609	A31	2608	A30			
2611	A33	2610	A32			
2613	A35	2612	A34			
2615	A37	2614	A36			
2617	A39	2616	A38			
2619	A3B	2618	A3A			
2621	A3D	2620	A3C			
2623	A3F	2622	A3E			
2625	A41	2624	A40	1		
2627	A43	2626	A42	1		
2629	A45	2628	A44	1		
2631	A47	2630	A46			

				2	HEX	Port 1 to 10 Tx Error Packets
2665	A69	2664	A68			Ex: port 1 Tx Error Packet Amount =
						0x87654321
2667	A6B	2666	A6A			Word 0 =8765
2669	A6D	2668	A6C			Word 1 = 4321
2671	A6F	2670	A6E			
2673	A71	2672	A70			
2675	A73	2674	A72			
2677	A75	2676	A74			
2679	A77	2678	A76			
2681	A79	2680	A78			
2683	A7B	2682	A7A			
2685	A7D	2684	A7C			
2687	A7F	2686	A7E			
2689	A81	2688	A80			
2691	A83	2690	A82			
2693	A85	2692	A84			
2695	A87	2694	A86			



				2	HEX	Port 1 to 10 Rx Error Packets
2729	AA9	2728	AA8	- -	IILA	Ex: port 1 Rx Error Packet Amount =
						0x123456
2731	AAB	2730	AAA			Word 0 = 0012
2733	AAD	2732	AAC			Word 1 = 3456
2735	AAF	2734	AAE			
2737	AB1	2736	AB0			
2739	AB3	2738	AB2			
2741	AB5	2740	AB4			
2743	AB7	2742	AB6			
2745	AB9	2744	AB8			
2747	ABB	2746	ABA			
2749	ABD	2748	ABC			
2751	ABF	2750	ABE			
2753	AC1	2752	AC0			
2755	AC3	2754	AC2			
2757	AC5	2756	AC4			
2759	AC7	2758	AC6			
		Ring Info		1.		I
2793	8E9	2792	AE8	1	HEX	Spanning Tree Status
						0x0000 : STP is disabled
						0x0001 : STP
				1.		0x0002 : RSTP
2797	8ED	2796	AEC	1	HEX	ERPS Status
						0x0000 : Disabled
	• •					0x0001 : Enabled
	nformati	_	IDE0	14	LIEV	Division for EDDO ( / ) ()
3561	DE9	3560	DE8	1	HEX	Ring ID for ERPSn (n=1)
2500	DEA	2504	DEO	1	LIEV	Ex: 0x001 Ring ID=1
3562	DEA	3561	DE9	1	HEX	State for ring of ERPS  0x0000: Disabled.
						0x0000: Disabled.
2562	DED	2562	DEA	33	ASCII	
3563	DEB	3562	DEA	33	ASCII	Name of Ring
						Ring Name = "Ring1" Word 1 Lo byte = 'R'
						Word 2 Lo byte = 'i'
						Word 3 Lo byte = 'n'
						Word 4 Lo byte = 'g'
						Word 5 Lo byte = '1'
						Word 6 Lo byte = '\0'
3596	E0C	3595	E0B	1	HEX	Version & Ring Type
3390	L	3393	LOD	'	IILA	High byte – Version.
						Low byte – Ring Type.
						0x01:Major-ring
						0x02:Sub-ring
3597	E0D	3596	E0C	1	HEX	Ex: 0x0201– Version2, Type: Major-ring
3397	[E0D	2580		1'		Instance of Ring Ex: 0x0001 Instance ID=1
3500	EOE	3507	EOD	1	⊔E∨	
3598	E0E	3597	E0D	1'	HEX	Control VLAN of Ring
						E:0x000b Control VLAN=11



3599	E0F	3598	E0E	1	HEX	Right Port of Ring High byte –Port No.
						Low byte – Port Type.
						0x01:Normal
						0x02:RPL Owner
						0x03:RPL Neighbour
						Ex: 0x0502- Port 5, RPL Owner
3600	E10	3599	E0F	1	HEX	Left Port of Ring
						High byte –Port No.
						Low byte – Port Type.
						0x01:Normal
						0x02:RPL Owner
						0x03:RPL Neighbour
						Ex: 0x0303- Port 3, RPL Neighbour
3601	E11	3600	E10	1	HEX	Ring port state
						High byte –Left port state.
						Low byte – Right port state.
						0x00: No connection
						0x01: Forwarding
						0x02: Blocking
						Ex: 0x0001– Left Port No connection
						Right Port Forwarding
3602	E12	3601	E11	1	HEX	Ring ID for ERPSn (n=2)
3603	E13	3602	E12	1		State of ERPS Ring
3604	E14	3603	E13	33	ASCII	Name of Ring
3637	E35	3636	E34	1	HEX	Version & Ring Type
3638	E36	3637	E35	1		Instance of Ring
3639	E37	3638	E36	1		Control VLAN of Ring
3640	E38	3639	E37	1		Right Port of Ring
3641	E39	3640	E38	1		Left Port of Ring
3642	E3A	3641	E39	1		Ring port state



# **List of Figures**

Figure 1: Front View of the Lean Managed Switch	21
Figure 2: Top View of the Lean Managed Switch	23
Figure 3: Grounding screw	24
Figure 4: Power Supply (PWR/RPS)	25
Figure 5: Network Connections	
Figure 6: Device LEDs	28
Figure 7: Port LEDs	29
Figure 8: DIP Switches	
Figure 9: Reset Button	
Figure 10: Label	
Figure 11: Dashboard - Example	
Figure 12: Dashboard	
Figure 13: CPU Usage	
Figure 14: Memory Usage	
Figure 15: Transmitting Port Usage (Example)	
Figure 16: Receiving Port Usage (Example)	
Figure 17: Transmitting Port Broadcast Rate (Example)	
Figure 18: Receiving Port Broadcast Rate (Example)	
Figure 19: Port Link Down Statistics (Example)	
Figure 20: LED Information	
Figure 21: Port Information - Example	
Figure 22: Collapse, User Login, Topology Map	
Figure 23: Log in	
Figure 24: Tab "Information" – Menu "Device Status"	
Figure 25: Topology Map – Link Down Port 1	
Figure 26: Topology Map – Link not registered	
Figure 27: Topology Map – Link Information	
Figure 28: Tab "Information" – Menu "Device Status" – "Device Details"	
Figure 29: Tab "Information" – Menu "Device Status" – "Network Details"	
Figure 30: Tab "Information" – Menu "Device Status" – "Operating Time"	
Figure 31: Tab "Information" – Menu "Port Counter"	
Figure 32: Tab "Information" – Menu "Utilization Information"	
Figure 33: Tab "Configuration" – Menu "LLDP Settings"	
Figure 34: Tab "Configuration" – Menu "LLDP Neighbor Information"	
Figure 35: Tab "Configuration" – Menu "Manual Registration"	
Figure 36: Tab "Configuration" – Menu "Loop Detection" – "Configuration	
Settings"	69
Figure 37: Tab "Configuration" – Menu "Loop Detection" – "Configuration Statu	
(Example)	
Figure 38: Half-Duplex Mode	
Figure 39: Full-Duplex Mode	
Figure 40: Tab "Configuration" – Menu "Mirror" – "Port Mirroring Settings"	
Figure 41: Tab "Configuration" – Menu "Port Setup" – "Port Setup"	
Figure 42: Tab "Configuration" – Menu "Port Setup" – "Port Status" (Example).	
Figure 43: Tab "Configuration" – Menu "Port Priority" – "Port Priority Settings"	
Figure 44: Tab "Configuration" – Menu "Port Priority" – "Port Priority Status"	
(Evample)	21



Figure 45: Tab "Configuration" – Menu "SNMP" – "Event Settings" – "Trap Ev	
State Settings"	
Figure 46: Tab "Configuration" – Menu "SNMP" – "Port Event Settings" – "Po	
Link-Change Trap Settings"	
Figure 47: Tab "Configuration" - Menu "SNMP" - "Port Event Settings" - "Po	rt
Link-Change Trap Status" (Example)	86
Figure 48: Tab "Configuration" – Menu "SNMP" – "SNMP Setup" – "SNMP Se	etup"
Figure 49: Tab "Configuration" – Menu "SNMP" – "SNMP Trap" – "Trap Rece	iver
Settings"	
Figure 50: Tab "Configuration" – Menu "SNMP" – "SNMPv3 Group"	
Figure 51: Tab "Configuration" – Menu "SNMP" – "SNMPv3 User"	
Figure 52: Tab "Configuration" – Menu "SNMP" – "SNMPv3 View"	
Figure 53: Tab "Configuration" – Menu "System Management" – "General Se	
Figure 54: Tab "Configuration" – Menu "System Management" – "SNTP"	
Figure 55: Tab "Configuration" – Menu "System Management" – "User Accou	
Configuration – Wend Cystem Management – Oser Accord	
Figure 56: Tab "Configuration" – Menu "Storm Control" (Example)	
Figure 57: IEEE 802.1X	
Figure 58: RADIUS Server	
Figure 59: Tab "Security" – Menu "802.1X" – "Global Setup"	
Figure 60: Tab "Security" – Menu "802.1X" – "Global Setup"	
· · ·	
Figure 61: Tab "Security" – Menu "802.1X" – "Port Setup"	
Figure 62: Tab "Security" – Menu "802.1X" – "Port Status" (Example)	
Figure 63: Tab "Security" – Menu "ACL" – "Access Control List Settings"	
Figure 64: Tab "Security" – Menu "ACL" – "Access Control List Status" Figure 65: Tab "Security" – Menu "Port Security" (Example)	
Figure 66: Tab "Security" – Menu "Service Control"	
Figure 67: Tab "Security" – Menu "VLAN" – "Port Isolation" (Example) Figure 68: Tab "Security" – Menu "VLAN" – "VLAN Setup" (Example)	
Figure 69: Tab "Redundancy" – Menu "ERPS"	
·	
Figure 70: Tab "Redundancy" – Menu "STP/RSTP Setup"	
Figure 71: Tab "Redundancy" – Menu "STP/RSTP Port Setup" (Example)	
Figure 72: Tab "Diagnostic" – Menu "Information"	
· · ·	
Figure 74: Tab "Diagnostic" – Menu "Traffic Flooding" (Example)	
Figure 75: Tab "Diagnostic" – Menu "Port Utilization" (Example)	155
Figure 76: Tab "Diagnostic" – Menu "Dashboard Configuration" – "Port	457
Registration Learn"	
Figure 77: Tab "Diagnostic" – Menu "Dashboard Configuration" – "Port Link D	
Statistics"	
Figure 78: Tab "Diagnostic" – Menu "Dashboard Configuration" – "Critical/Ale	
Threshold 01"	
Figure 79: Tab "Diagnostic" – Menu "Dashboard Configuration" – "Critical/Ale	
Threshold 02"	
Figure 80: Tab "Diagnostic" – Menu "Modbus"	
Figure 81: Tab "Diagnostic" – Menu "System Log"	
Figure 82: Tab "Maintenance" – Menu "Maintenance" – "Reboot"	
Figure 83: Tab "Maintenance" – "Reboot" Tab – Message	166



itenance" – Menu "Maintenance" – "Upgrade Firmware"167	Figure 84: Tab
itenance" – Menu "Maintenance" – "Upload Configuration"	Figure 85: Tab
168	
itenance" – Menu "Maintenance" – "Download Configuration" 169	Figure 86: Tab
itenance" – Menu "Maintenance" – "Reset Configuration".170	Figure 87: Tab
itenance" – "Reset" Tab – Message170	Figure 88: Tab



## **List of Tables**

Table 1: Number Notation	10
Table 2: Font Conventions	10
Table 3: Legend for the Figure "Front View of the Lean Managed Switch"	22
Table 4: Legend for the Figure "Top View of the Lean Managed Switch"	
Table 5: Legend for Figure "Power Supply (PWR/RPS)"	
Table 6: Legend for Figure "Network Connections"	
Table 7: Legend for "Device LEDs" Figure	
Table 8: Legend for "Port LEDs" Figure	
Table 9: Legend for Figure "DIP Switches"	
Table 10: Legend for Figure "Reset Button"	
Table 11: Legend for Figure "Label"	
Table 12: Technical Data – Device Data	
Table 13: Technical Data – System Data	
Table 14: Technical Data – Power Supply	
Table 15: Technical Data – Communication	
Table 16: Technical Data – Environmental Conditions	
Table 17: Default Settings for the Telnet Port	
Table 18: Login Screen	
Table 19: Overview – Navigation Links and WBM Pages	
Table 20: Tab "Information" – Menu "Device Status" – "Device Details"	
Table 21: Tab "Information" – Menu "Device Status" – "Network Details"	
Table 22: Tab "Information" – Menu "Device Status" – "Operating Time"	
Table 23: Tab "Information" – Menu "Port Counter"	
Table 24: Tab "Information" – Menu "Utilization Information"	63
Table 25: Tab "Configuration – Menu "LLDP Settings"	64
Table 26: Tab "Configuration" – Menu "LLDP Neighbor Information"	65
Table 27: Tab "Configuration" – Menu "Manual Registration"	67
Table 28: Tab "Configuration" - Menu "Loop Detection" - "Configuration Setti	ngs"
Table 29: Tab "Configuration" - Menu "Loop Detection" - "Configuration Statu	JS"
(Example)	
Table 30: Tab "Configuration" – Menu "Mirror" – "Port Mirroring Settings"	76
Table 31: Tab "Configuration" – Menu "Port Setup" – "Port Setup"	
Table 32: Tab "Configuration" – Menu "Port Setup" – "Port Status" (Example)	
Table 33: Tab "Configuration" – Menu "Port Priority" – "Port Priority Settings".	80
Table 34: Tab "Configuration" – Menu "Port Priority" – "Port Priority Status"	
(Example)	81
Table 35: Tab "Configuration" - Menu "SNMP" - "Event Settings" - "Trap Event S	
State Settings"	
Table 36: Tab "Configuration" - Menu "SNMP" - "Port Event Settings" - "Port	
Link-Change Trap Settings"	85
Table 37: Tab "Configuration" - Menu "SNMP" - "Port Event Settings" - "Port	
Link-Change Trap Status" (Example)	86
Table 38: Tab "Configuration" - Menu "SNMP" - "SNMP Setup" - "SNMP Set	
Table 20. Tab "Configuration" Many "CNIMD" "CNIMD Trans" "Trans Decei	88
Table 39: Tab "Configuration" – Menu "SNMP" – "SNMP Trap" – "Trap Receiv Settings"	ver 90
	71



92
94
96
etup"
99
102
unt"
106
109
115
116
118
119
121
122
125
127
130
133
138
141
145
148
149
150
153
156
161
161
165
171
172
173
174
175
176
177
177
178
179
180
181
182
183
184
186
187
187
187
188



Table 88: CLI "Maintenance" Configuration	189
Table 89: CLI "System Log" Configuration	
Table 90: CLI "System Log" Configuration	
Table 91: Data Format and Function Code	
Table 92: Modbus Registers	





WAGO Kontakttechnik GmbH & Co. KG

Postfach 2880 • D - 32385 Minden

Hansastraße 27 • D - 32423 Minden

Phone: +49 571 887 – 0

Fax: +49 571 887 – 844169

E-Mail: info@wago.com Internet: www.wago.com