


# IRONHORSE WORM GEARBOX USER MANUAL TABLE OF CONTENTS

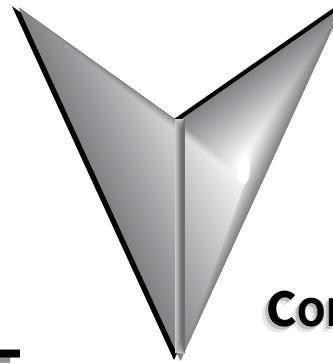

## CONTENTS

### IRONHORSE WORM GEARBOXES USER MANUAL TOC

IRONHORSE® WORM GEARBOX USER MANUAL . . . . .	CF-1
WARNINGS AND TRADEMARKS . . . . .	W-1
Warnings and Trademarks . . . . .	W-1
IRONHORSE WORM GEARBOX USER MANUAL REVISION HISTORY . . . . .	H-1
IRONHORSE WORM GEARBOX USER MANUAL TABLE OF CONTENTS . . . . .	TOC-1
CHAPTER 1: GETTING STARTED . . . . .	1-1
User Manual Overview . . . . .	1-2
Overview of This Publication . . . . .	1-2
Who Should Read This Manual . . . . .	1-2
Technical Support . . . . .	1-2
Special Symbols . . . . .	1-2
IronHorse® Worm Gearbox Introduction . . . . .	1-3
Purpose of Worm Gearboxes . . . . .	1-3
Package Contents . . . . .	1-3
Part Number Explanation . . . . .	1-4
Nameplate Information . . . . .	1-4
CHAPTER 2: CAST-IRON WORM GEARBOXES . . . . .	2-1
IronHorse® Cast-Iron Worm Gearboxes . . . . .	2-2
Gearbox Selection Factors . . . . .	2-2
Service Factors and K Factors . . . . .	2-2
IronHorse® Cast-Iron Worm Gearbox Specifications . . . . .	2-3
IronHorse® Cast-Iron Worm Gearbox Dimensions . . . . .	2-8
Solid-Shaft Output Gearboxes WG-xxx-xxx-D/L/R . . . . .	2-8
Hollow-Bore Output Gearboxes WG-xxx-xxx-H . . . . .	2-9
IronHorse® Cast-Iron Worm Gearbox Accessory Mounting Bases . . . . .	2-10
Mounting Base Selection and Dimensions . . . . .	2-10
CHAPTER 3: ALUMINUM WORM GEARBOXES . . . . .	3-1
IronHorse® Aluminum Worm Gearboxes . . . . .	3-2
Gearbox Selection Factors . . . . .	3-2
Service Factors and K Factors . . . . .	3-2
IronHorse® Aluminum Worm Gearbox Specifications . . . . .	3-3
Frame Sizes 30, 40, 50 mm Specifications . . . . .	3-3
Frame Sizes 63, 75 mm Specifications . . . . .	3-4
IronHorse® Aluminum Worm Gearbox Dimensions . . . . .	3-5
IronHorse® Aluminum Worm Gearbox Accessories . . . . .	3-6
CHAPTER 4: INSTALLATION, LUBRICATION, SEALS . . . . .	4-1

<i>IronHorse<sup>®</sup> Worm Gearbox Installation . . . . .</i>	<i>4-2</i>
<i>    Installation Instructions . . . . .</i>	<i>4-2</i>
<i>    Vent Plug Installation . . . . .</i>	<i>4-2</i>
<i>IronHorse<sup>®</sup> Worm Gearbox Lubrication &amp; Mounting Orientations. . . . .</i>	<i>4-3</i>
<i>    Lubrication Instructions . . . . .</i>	<i>4-3</i>
<i>    Lubricant Capacities and Mounting Orientations. . . . .</i>	<i>4-4</i>
<i>IronHorse<sup>®</sup> Worm Gearbox Seal Sizes . . . . .</i>	<i>4-4</i>
<i>    Aluminum Worm Gearbox Input and Output Seal Sizes . . . . .</i>	<i>4-4</i>
<i>    Cast-Iron Worm Gearbox Input Seal Sizes. . . . .</i>	<i>4-5</i>
<b>APPENDIX A: GLOSSARY OF TERMS. . . . .</b>	<b>A-1</b>
<i>    Glossary of Gearbox Terms . . . . .</i>	<i>A-2</i>
<b>APPENDIX B: GEARBOX SELECTION. . . . .</b>	<b>B-1</b>
<i>    Gearbox Selection Procedure . . . . .</i>	<i>B-2</i>
<i>    Gearbox Selection Steps . . . . .</i>	<i>B-2</i>
<i>    Gearbox Selection Example. . . . .</i>	<i>B-2</i>