


Fuse Connector Module ZL-CM08TF Cables and PLC I/O Modules

PLC Type	Cable Type	PLC I/O Module Type	Connector Module Type
DL205	ZL-2CBL1	D2-08TD1	ZL-CM08TF
DL205	ZL-2CBL1	D2-08TR	ZL-CM08TF
DL205	ZL-2CBL1	D2-08TA	ZL-CM08TF
DL205	ZL-2CBL1	D2-08TD2	ZL-CM08TF

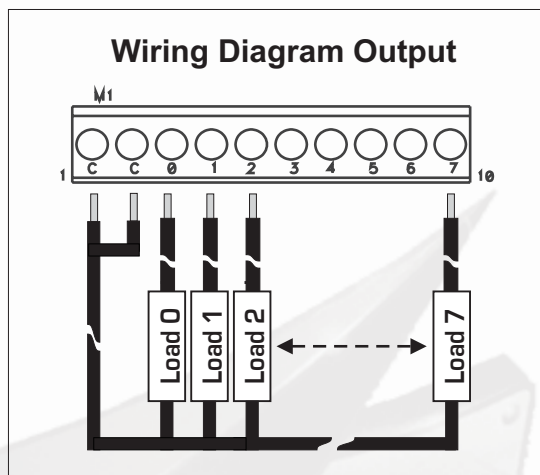

WARNING : WIRE ONLY ACCORDING TO WIRING DIAGRAMS SHOWN BELOW TO AVOID CAUSING DAMAGE TO THE PLC OR CONNECTOR MODULE. MATCH THE CORRECT COMBINATION OF CABLE, PLC I/O MODULE, AND CONNECTOR MODULE AS SHOWN.


Fuse Installation And Removal

REMOVAL

INSTALLATION


Wiring Diagram power supply and cable

PLC DL 205 Type D2-08TD1
DC Output I/O Module

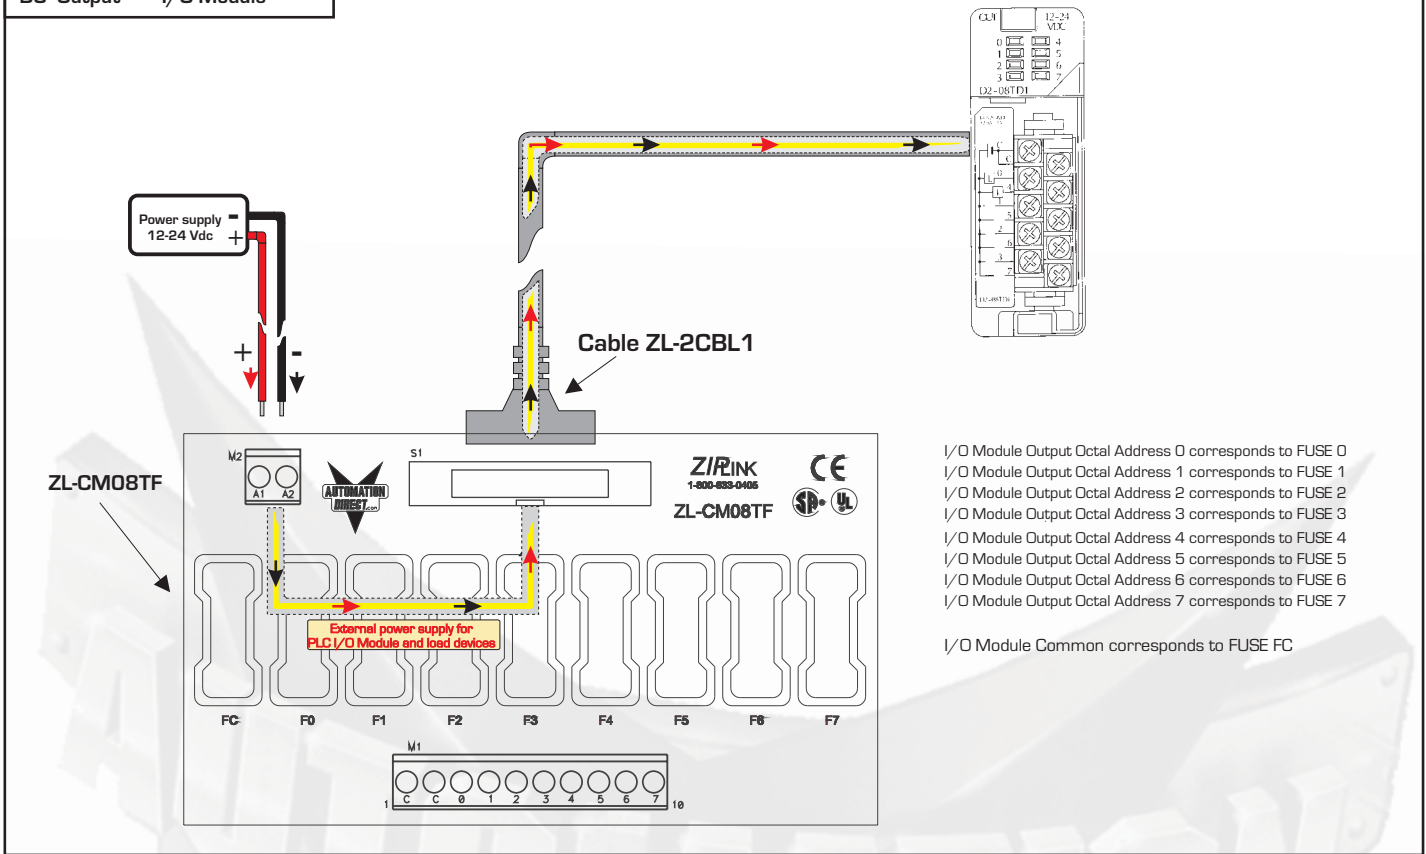



Wiring Diagram power supply and cable

PLC DL 205 Type D2-08TR
Relay Output I/O Module

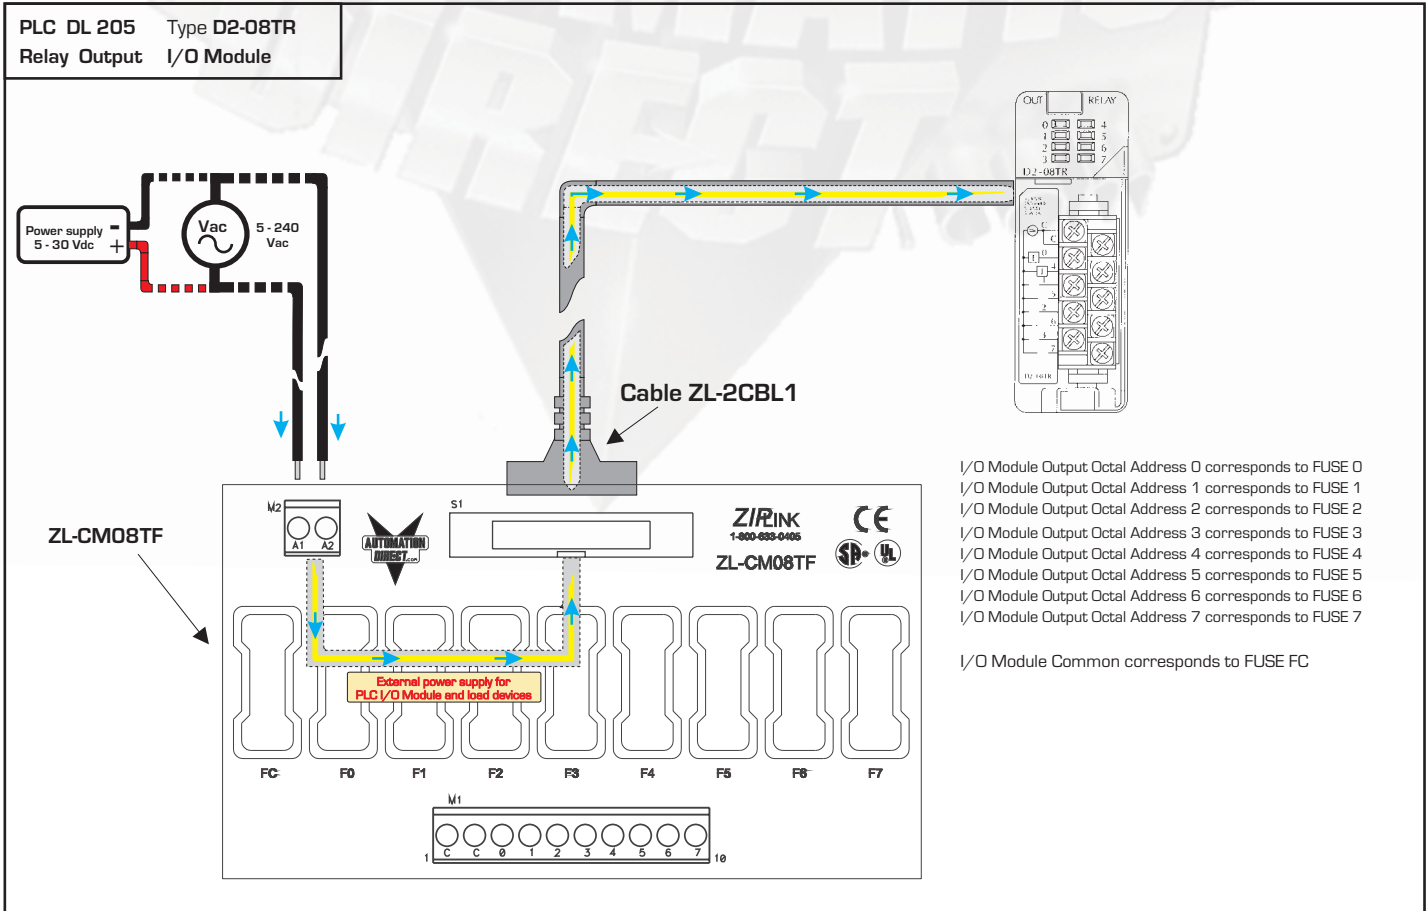

Wiring Diagram power supply and cable

PLC DL 205 Type D2-08TA
AC Output I/O Module

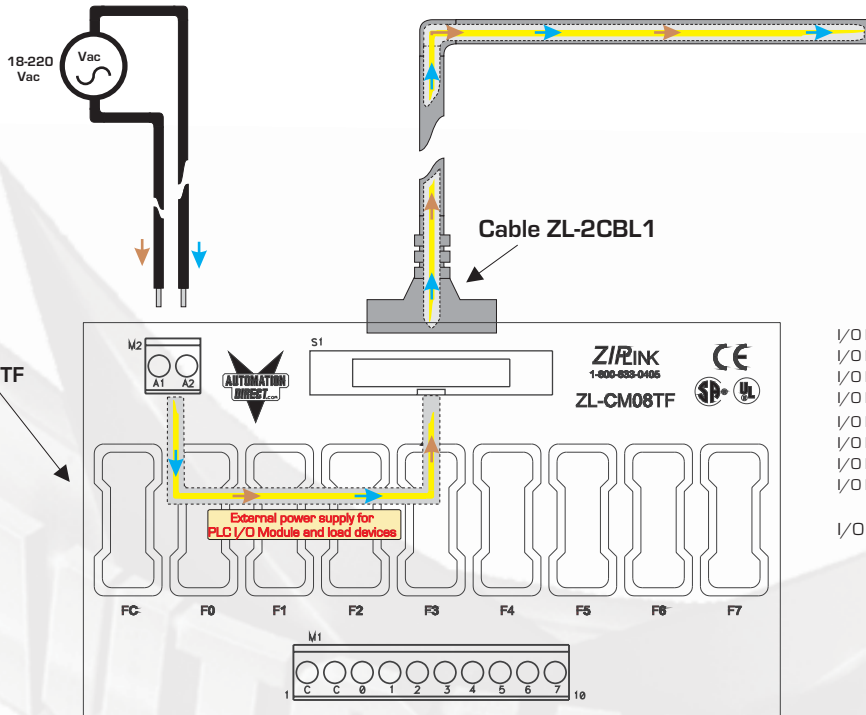
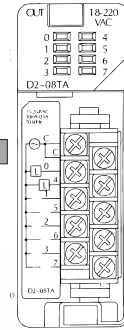


- I/O Module Output Octal Address 0 corresponds to FUSE 0
- I/O Module Output Octal Address 1 corresponds to FUSE 1
- I/O Module Output Octal Address 2 corresponds to FUSE 2
- I/O Module Output Octal Address 3 corresponds to FUSE 3
- I/O Module Output Octal Address 4 corresponds to FUSE 4
- I/O Module Output Octal Address 5 corresponds to FUSE 5
- I/O Module Output Octal Address 6 corresponds to FUSE 6
- I/O Module Output Octal Address 7 corresponds to FUSE 7

I/O Module Common corresponds to FUSE FC

Wiring Diagram power supply and cable

PLC DL 205 Type D2-08TD2
DC Output I/O Module

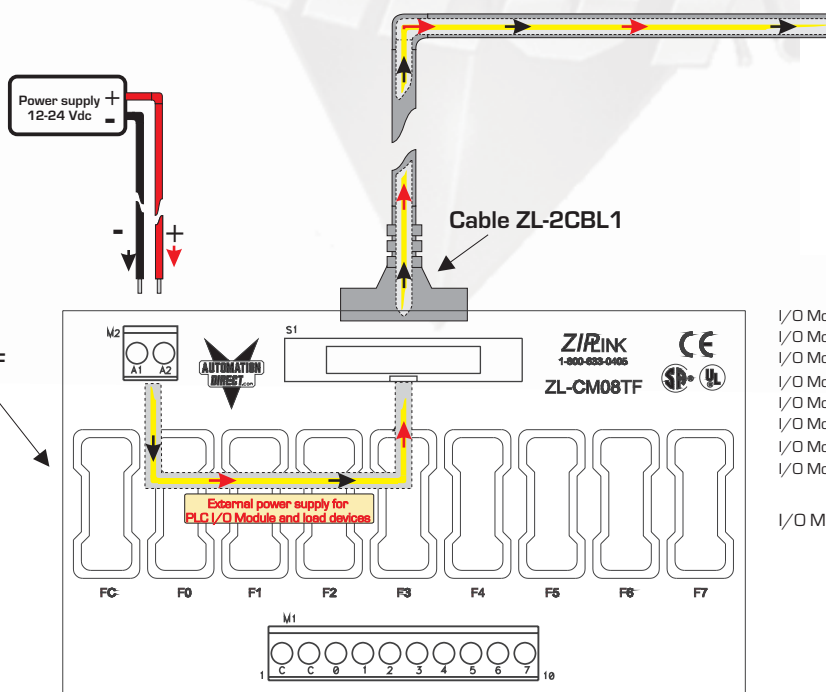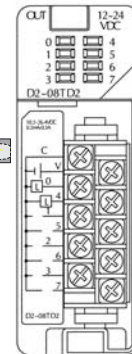

- I/O Module Output Octal Address 0 corresponds to FUSE 0
- I/O Module Output Octal Address 1 corresponds to FUSE 1
- I/O Module Output Octal Address 2 corresponds to FUSE 2
- I/O Module Output Octal Address 3 corresponds to FUSE 3
- I/O Module Output Octal Address 4 corresponds to FUSE 4
- I/O Module Output Octal Address 5 corresponds to FUSE 5
- I/O Module Output Octal Address 6 corresponds to FUSE 6
- I/O Module Output Octal Address 7 corresponds to FUSE 7

I/O Module Common corresponds to FUSE FC