


DC Output Modules

P2-08TD1P

\$0?v8:

Sinking Output

The P2-08TD1P DC Output Module provides eight 12–24 VDC sinking outputs with short-circuit and overload protection.

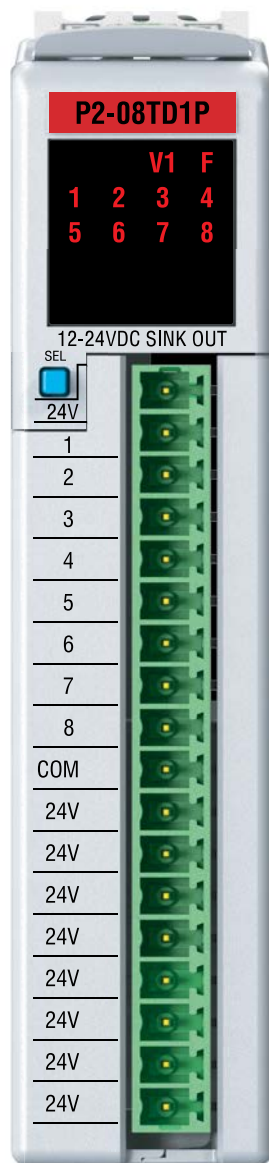

Terminal block sold separately

We recommend using prewired ZIPLink cables and connection modules. See Wiring Solutions.

If you wish to hand-wire your module, a removable terminal block is sold separately. Order part number [P2-RTB](#) or [P2-RTB-1](#).



Output Specifications

Outputs per Module	8 sinking
Rated Voltage	12–24 VDC
Operating Voltage Range (Tolerance)	10.2–26.4 VDC
Maximum Output Current	0.25 A continuous
On Voltage Drop	0.5 VDC
Maximum Inrush Current	Self-limited
OFF to ON Response	0.5 ms
ON to OFF Response	0.5 ms
Overcurrent Trip	0.6 A min., 1.2 A max. >50ms duration
Minimum Load Current to Avoid Open Load Fault Detection	113µA
Maximum Leakage Current	135µA 10.2–26.4 VDC
Over-temperature Shutdown	Independent to each output
Load Resistance to Avoid Open Load Fault Detection	<58kΩ
Status Indicators	Logic Side (8 points)
External 24V Error Indicator	Logic Side (1 points)
Fault Condition Indicator	Logic Side (8 points)
Commons	1
Fuses	None
External DC Power Required	24VDC @ 30mA

Note 1: Open Load Fault is always enabled, but is only valid when output is OFF. If Open Load Fault happens while output is ON, fault will not appear until you turn OFF output.

Note 2: The SEL button cycles between the output status and fault status. If the "F" LED is OFF the numbered LEDs are showing output status. If the "F" LED is ON the numbered LEDs are showing fault status of each output. The "V1" LED is independent of fault or output display.

General Specifications

Operating Temperature	0° to 60°C (32° to 140°F)
Storage Temperature	-20° to 70°C (-4° to 158°F)
Humidity	5 to 95% (non-condensing)
Environmental Air	No corrosive gases permitted
Vibration	IEC60068-2-6 (Test Fc)
Shock	IEC60068-2-27 (Test Ea)
Field to Logic Side Isolation	1800VAC applied for 1 second
Insulation Resistance	>10MΩ @ 500VDC
Heat Dissipation	1.8 W
Enclosure Type	Open equipment
Module Keying to Backplane	Electronic
Module Location	Any I/O slot in any Productivity2000 system
Field Wiring	Use ZIPLink wiring system or removable terminal block (not included). See Wiring Solutions.
Connector Type (Sold separately)	18-pin Removable Terminal Block
Weight	97.6 g (3.4 oz)
Agency Approvals**	UL508 file E139594, Canada & USA CE (EN61131-2*)

*Meets EMC and Safety requirements. See the Declaration of Conformity for details.

**To obtain the most current agency approval information, see the Agency Approval Checklist section on the specific component part number web page.

LED Status

Fault Condition	Fault Status Indication	Operation to Reset Fault
Missing External 24VDC	V1 LED is ON	Apply external 24VDC
Open Load (Note 1)	"F" LED is ON (Note 2)	Connect the load
Over Temperature or Over Load Current		Turn the output OFF or cycle power

DC Output Modules


P2-08TD1P (cont'd)

Removable Terminal Block Specifications		
Part Number	P2-RTB	P2-RTB-1
Number of positions	18 screw terminals	18 push release terminals
Wire Range	30–16 AWG (0.051–1.31 mm ²) Solid/stranded conductor 3/64 in (1.2 mm) insulation max. 1/4 in (6–7 mm) strip length	28–16 AWG (0.081–1.31 mm ²) Solid/stranded conductor 3/64 in (1.2 mm) insulation max. 19/64 in (7–8 mm) strip length
Conductors	USE COPPER CONDUCTORS, 75°C or equivalent.	
Screw Driver Width	0.1 in. (2.5 mm) maximum	NA
Screw Size	M2	N/A
Screw Torque	2.5 lb·in (0.28 N·m)	N/A



* Recommended screw driver: P/N [TW-SD-MSL-1](#).

Wiring Diagrams

SINGLE POWER SOURCE

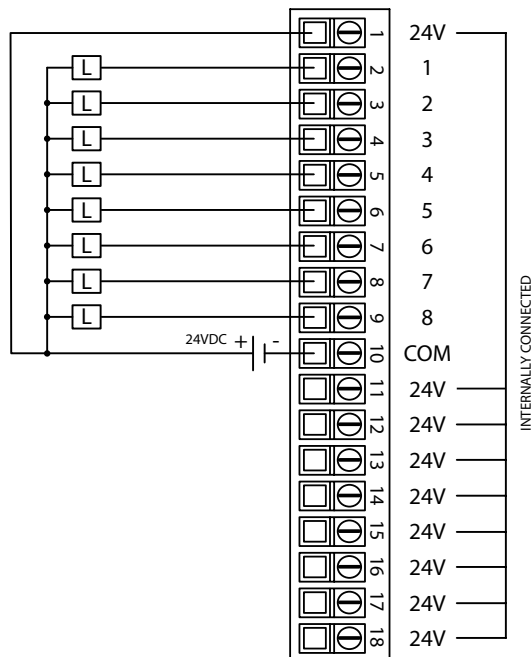

DUAL POWER SOURCE

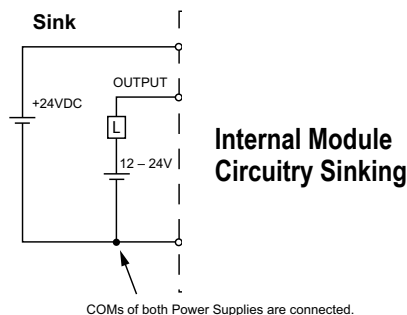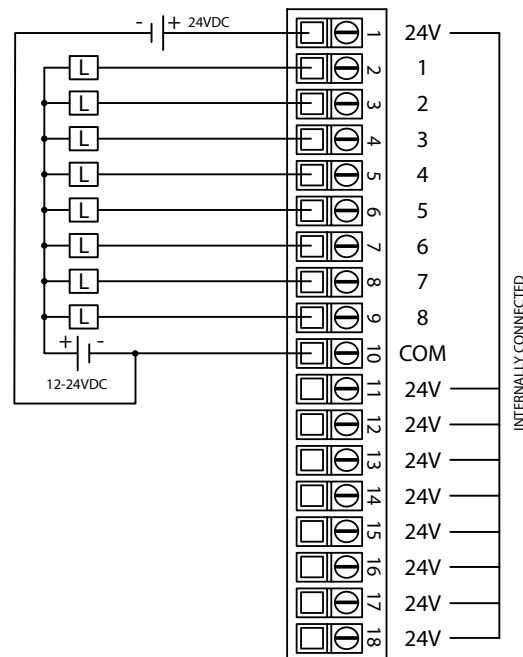

COMs of both Power Supplies are connected.

NOTE: If two separate power supplies are used to supply module control logic and output, grounds from both power supplies must be connected. For testing outputs, see note in P2-USER-M manual under P2-08TD1P wiring.



Wiring Solutions

Wiring Solutions using the ZIPLink wiring system

ZIPLinks eliminate the normally tedious process of wiring between devices by utilizing prewired cables and DIN rail mount connector modules. It's as simple as plugging in a cable connector at either end and terminating wires at only one end. Prewired cables keep installation clean and efficient, using half the space at a fraction of the cost of standard terminal blocks. There are several wiring solutions available when using the ZIPLink System ranging from

CPU I/O-to-ZIPLink Connector Modules that are ready for field termination, options for connecting to third party devices, GS Series, DuraPulse and SureServo Drives, and specialty relay, transorb and communications modules. Pre-printed I/O-specific adhesive label strips for quick marking of ZIPLink modules are provided with ZIPLink cables. See the following solutions to help determine the best ZIPLink system for your application.

Solution 1: DirectLOGIC, CLICK, Productivity® 1000, Productivity® 2000 and Productivity3000® I/O Modules to ZIPLink Connector Modules

When looking for quick and easy I/O-to-field termination, a ZIPLink connector module used in conjunction with a prewired ZIPLink cable, consisting of an I/O terminal block at one end and a multi-pin connector at the other end, is the best solution.



Use the CPU I/O Modules to ZIPLink Connector Modules selector tables located in the ZIPLink Wiring Solutions section to:

1. Locate your I/O module/CPU,
2. Select a ZIPLink Module, and
3. Select a corresponding ZIPLink Cable.

Solution 2: DirectLOGIC, CLICK, Productivity1000, Productivity2000 and Productivity3000 I/O Modules to 3rd Party Devices

When wanting to connect I/O to another device within close proximity of the I/O modules, no extra terminal blocks are necessary when using the ZIPLink Pigtail Cables. ZIPLink Pigtail Cables are prewired to an I/O terminal block with color-coded pigtail with soldered-tip wires on the other end.



Use the I/O Modules to 3rd Party Devices selector tables located in the ZIPLink Wiring Solutions section to:

1. Locate your CPU I/O module, and
2. Select a ZIPLink Pigtail Cable that is compatible with your 3rd party device.

Solution 3: GS Series and DuraPulse Drives Communication Cables

Need to communicate via Modbus RTU to a drive or a network of drives?

ZIPLink cables are available in a wide range of configurations for connecting to CPUs, SureServo, SureStep, Stellar Soft Starter and AC drives. Add a ZIPLink communications module to quickly and easily set up a multi-device network.

Use the Drives Communication selector tables located in the ZIPLink Wiring Solutions section to:

1. Locate your Drive and type of communications, and
2. Select a ZIPLink cable and other associated hardware.





Wiring Solutions

Solution 4: Serial Communications Cables

ZIPLink offers communications cables for use with DirectLOGIC, CLICK, Productivity1000, Productivity2000 and Productivity3000 CPUs, that can also be used with other communications devices. Connections include a 6-pin RJ12 or 9-pin, 15-pin and 25-pin D-Sub connectors which can be used in conjunction with the RJ12 or D-Sub Feedthrough modules.

Using the Serial Communications Cables selector table located in the ZIPLink Wiring Solutions section,

1. Locate your connector type
2. Select a cable.



Solution 5: Specialty ZIPLink Modules

For additional application solutions, ZIPLink Specialty Modules are available in a variety of configurations including stand-alone relays, 24VDC and 120VAC transorb modules, D-Sub, RJ12 and RJ45 feedthrough modules, communication port adapter and distribution modules, and SureServo 50-pin I/O interface connection.

Using the ZIPLink Specialty Modules selector table located in the ZIPLink Wiring Solutions section:

1. Locate the type of application.
2. Select a ZIPLink module.



Solution 6: ZIPLink Connector Modules to 3rd Party Devices

If you need a way to connect your device to terminal blocks without all that wiring time, then our pigtail cables with color-coded soldered-tip wires are a good solution. Used in conjunction with any compatible ZIPLink Connector Modules, a pigtail cable keeps wiring clean and easy and reduces troubleshooting time.

Use the Universal Connector Modules and Pigtail Cables table located in the ZIPLink Wiring Solutions section to:

1. Select module type,
2. Select the number of pins
3. Select cable.





I/O Modules to ZIPLink Connector Modules - Productivity2000

Discrete Input Modules

Productivity2000 Input Module ZIPLink Selector					
I/O Input Module	ZIPLink Parameters				
	# of Terms	Component	Part No.	Cable Part No.	
<u>P2-08ND3-1</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL18 *</u>	
<u>P2-16ND3-1</u>	18	Sensor/LED	<u>ZL-LTB16-24-1</u>		
<u>P2-16ND-TTL</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>		
<u>P2-08NE3</u>					
<u>P2-16NE3</u>					
<u>P2-32ND3-1</u>	40	Feedthrough	<u>ZL-RTB40 (-1)</u>	<u>ZL-CBL40 *</u>	
		Sensor/LED	<u>ZL-LTB16-24-1</u>		
<u>P2-32NE3</u>	40	Feedthrough	<u>ZL-RTB40 (-1)</u>	<u>ZL-P2-CBL18 *</u>	
<u>P2-08NAS</u>	8	Feedthrough	<u>ZL-RTB20 (-1)</u>		
<u>P2-16NA</u>	18				

Discrete Output Modules

Productivity2000 Output Module ZIPLink Selector				
I/O Output Module	ZIPLink Parameters			
	# of Terms	Component	Part No.	Cable Part No.
<u>P2-08TD1S</u>	8	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL18 *</u>
<u>P2-08TD2S</u>	8			
<u>P2-15TD1</u>	15			
<u>P2-15TD2</u>	15			
<u>P2-08TD1P</u>	18			
<u>P2-16TD-TTL</u>	18			
<u>P2-08TD2P</u>	18			
<u>P2-08TRS</u>	18			
<u>P2-08TAS</u>	18			
<u>P2-16TA</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL18 *</u>
		Fuse	<u>ZL-RFU20 ²</u>	
<u>P2-16TD1P</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	
		Relay (Sinking)	<u>ZL-RRL16-24-1</u>	
			<u>ZL-RRL16W-24-1</u>	
			<u>ZL-RRL16F-24-1</u>	
<u>P2-16TD2P</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	
		Relay (Sourcing)	<u>ZL-RRL16-24-2</u>	
			<u>ZL-RRL16W-24-2</u>	
			<u>ZL-RRL16F-24-2</u>	
<u>P2-32TD1P</u>	32	Feedthrough	<u>ZL-RTB40 (-1)</u>	<u>ZL-CBL40 *</u>
<u>P2-32TD2P</u>	32			
<u>P2-16TR</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL18 *</u>
		Fuse	<u>ZL-RFU20 ²</u>	

Specialty Modules

Productivity2000 Specialty & Motion Modules ZIPLink Selector				
I/O Module	ZIPLink Parameters			
	# of Terms	Component	Part No.	Cable Part No.
<u>P2-HSI</u>	40	Feedthrough	<u>ZL-RTB40 (-1)</u>	<u>ZL-CBL40-S</u>
<u>P2-HSO</u>				<u>ZL-CBL40-1S</u> <u>ZL-CBL40-2S</u>
<u>P2-02HSC</u>	See Note 1			
<u>P2-04PWM</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL18</u> *
<u>P2-08SIM</u>	See Note 1			
<u>P2-SCM</u>	See Note 1			

* Select the cable length by replacing the * with: Blank = 0.5 m, -1 = 1.0 m, or -2 = 2.0 m.

1. These modules are not supported by the ZIPLink wiring system

2. Note: Fuses (5 x 20 mm) are not included. See Edison Electronic Fuse section for (5 x 20 mm) fuse. S500 and GMA electronic circuit protection for fast-acting maximum protection. S506 and GMC electronic circuit protection for time-delay performance. Ideal for inductive circuits.

To ensure proper operation, do not exceed the voltage and current rating of ZIPLink module. [ZL-RFU20](#) = 2A per circuit; [ZL-RFU40](#) = 400 mA per circuit.





I/O Modules to ZIPLink Connector Modules - Productivity2000

Analog Input Modules

Productivity2000 Analog Input Module ZIPLink Selector				
I/O Analog Module	ZIPLink Parameters			
	# of Terms	Component	Part No.	Cable Part No.
<u>P2-04AD</u>	18	Feedthrough	<u>ZL-RTB20</u> (-1)	<u>ZL-P2-CBL18</u> *
<u>P2-04AD-1</u>				
<u>P2-04AD-2</u>				
<u>P2-08AD-1</u>				
<u>P2-08AD-2</u>				
<u>P2-08ADL-1</u>				
<u>P2-08ADL-2</u>				
<u>P2-16AD-1</u>	24			<u>ZL-P2-CBL24</u> *
<u>P2-16AD-2</u>				
<u>P2-16ADL-1</u>				
<u>P2-16ADL-2</u>				
<u>P2-06RTD</u>	Matched Only	See Note 1		
<u>P2-08THM</u>	T/C Wire Only	See Note 1		
<u>P2-08NTC</u>	Copper Conductors	See Note 1		

* Select the cable length by replacing the * with: Blank = 0.5 m, -1 = 1.0 m,
or -2 = 2.0 m.

1. These modules are not supported by the ZIPLink wiring system.

Analog Output Modules

Productivity2000 Analog Output Module ZIPLink Selector				
I/O Analog Module	ZIPLink Parameters			
	# of Terms	Component	Part No.	Cable Part No.
<u>P2-04DA</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL18 *</u>
<u>P2-04DA-1</u>				
<u>P2-04DA-2</u>				
<u>P2-04DAL-1</u>				
<u>P2-04DAL-2</u>				
<u>P2-08DA-1</u>				
<u>P2-08DA-2</u>				
<u>P2-08DAL-1</u>	24	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL24 *</u>
<u>P2-08DAL-2</u>				
<u>P2-16DA-1</u>				
<u>P2-16DA-2</u>				
<u>P2-16DAL-1</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL18 *</u>
<u>P2-16DAL-2</u>				
<u>P2-8AD4DA-1</u>	18	Feedthrough	<u>ZL-RTB20 (-1)</u>	<u>ZL-P2-CBL18 *</u>
<u>P2-8AD4DA-2</u>				



I/O Modules

A variety of discrete, analog and specialty I/O modules are available for use in a Productivity2000 system. Specifications for each module are on the following pages.

A filler module is available for unused I/O module slots (part number [P2-FILL](#)).

Discrete Input Modules

Productivity2000 Discrete Input Modules			
Part Number	Number of Inputs	Description	Price
P2-08SIM	8	Input Simulator Module	\$0?uc:
P2-08ND3-1	8	Sinking/Sourcing 12-24 VDC	\$1o98:
P2-16ND-TTL	16	Sinking/Sourcing	\$,-067!i:
P2-16ND3-1	16	Sinking/Sourcing 24V AC/DC	\$01o99:
P2-32ND3-1	32	Sinking/Sourcing 12-24 VDC	\$01o9a:
P2-08NE3	8	Sinking/Sourcing 24V AC/DC	\$0?v3:
P2-16NE3	16	Sinking/Sourcing 12-24 VDC	\$00?v4:
P2-32NE3	32	Sinking/Sourcing 24V AC/DC	\$,00,96:
P2-08NAS	8	AC Isolated 100-120 VAC	\$,012d[:
P2-16NA	16	AC 100-240 VAC	\$00?v5:

Specialty Modules

Productivity2000 Specialty Modules			
Part Number	Number of Channels	Description	Price
P2-HSI	2	High-Speed Input	\$00?vg:
P2-HSO**	2	High-Speed Output	\$00?vh:
P2-02HSC	2	High-Speed Counter	\$04n54:
P2-04PWM	4	Pulse-Width Modulation	\$04n55:
P2-SCM	4 ports	Serial Communications Module	\$00?uy:

** ZIPLink required.

Analog Output Modules

Productivity2000 Analog Output Modules			
Part Number	Number of Channels	Description	Price
P2-04DA	4	Analog Output (Voltage/Current)	\$00?u?:
P2-04DA-1	4	Analog Output (Current)	\$04n56:
P2-04DA-2	4	Analog Output (Voltage)	\$04n57:
P2-04DAL-1*	4	Analog Output (Current)	\$012e1:
P2-04DAL-2*	4	Analog Output (Voltage)	\$012e2:
P2-08DA-1	8	Analog Output (Current)	\$,00?u,:
P2-08DA-2	8	Analog Output (Voltage)	\$00?v0:
P2-08DAL-1*	8	Analog Output (Current)	\$,00,ep:
P2-08DAL-2*	8	Analog Output (Voltage)	\$,00,eq:
P2-16DA-1	16	Analog Output (Current)	\$00?v1:
P2-16DA-2	16	Analog Output (Voltage)	\$00?v2:
P2-16DAL-1*	16	Analog Output (Current)	\$,00,es:
P2-16DAL-2*	16	Analog Output (Voltage)	\$,00,et:

* Low resolution analog modules without OLED display.

Discrete Output Modules

Productivity2000 Discrete Output Modules			
Part Number	Number of Outputs	Description	Price
P2-08TD1S	8	Isolated Sinking	\$12ga:
P2-08TD2S	8	Isolated Sourcing	\$12gb:
P2-15TD1	15	Sinking	\$12d#:
P2-15TD2	15	Sourcing	\$,12d!:
P2-08TD1P	8	Sinking Protected	\$0?v8:
P2-08TD2P	8	Sourcing Protected	\$0?v9:
P2-16TD-TTL	16	Sourcing	\$,067!h:
P2-16TD1P	16	Sinking Protected	\$00?va:
P2-16TD2P	16	Sourcing Protected	\$00?vb:
P2-32TD1P	32	Sinking Protected	\$012d?:
P2-32TD2P	32	Sourcing Protected	\$,012d,:
P2-08TAS	8	Isolated AC	\$012g9:
P2-16TA	16	100-240 VAC Output	\$00?vc:
P2-06TRS	6	Isolated Relay	\$,067!e:
P2-08TRS	8	Isolated Relay	\$0?vd:
P2-16TR	16	Relay	\$,00?vf:

Analog Input Modules

Productivity2000 Analog Input Modules			
Part Number	Number of Channels	Description	Price
P2-04AD	4	Analog Input (Voltage/Current)	\$00?uv:
P2-04AD-1	4	Analog Input (Current)	\$04n52:
P2-04AD-2	4	Analog Input (Voltage)	\$04n53:
P2-08AD-1	8	Analog Input (Current)	\$,00?u[:
P2-08AD-2	8	Analog Input (Voltage)	\$00?u,:
P2-08ADL-1*	8	Analog Input (Current)	\$,00,ek:
P2-08ADL-2*	8	Analog Input (Voltage)	\$,-00,el:
P2-16AD-1	16	Analog Input (Current)	\$00?u#:
P2-16AD-2	16	Analog Input (Voltage)	\$,00?u!:
P2-16ADL-1*	16	Analog Input (Current)	\$,00,en:
P2-16ADL-2*	16	Analog Input (Voltage)	\$,00,eo:
P2-06RTD	6	Analog RTD Input	\$00?v7:
P2-08NTC	8	Analog Thermocouple Input	\$,0118,:
P2-08THM	8	Analog Thermistor Input	\$00?v6:

Productivity2000 Analog Input/Output Modules			
Part Number	Number of Channels	Description	Price
P2-8AD4DA-1	8/4	Analog Input/Output (Current)	\$00?uz:
P2-8AD4DA-2	8/4	Analog Input/Output (Voltage)	\$,00?uj:

I/O Module Installation Procedure

WARNING: DO NOT APPLY FIELD POWER UNTIL THE FOLLOWING STEPS ARE COMPLETED. SEE HOT-SWAP PROCEDURE FOR EXCEPTIONS.

Step One: Align module catch with base slot and module into connector.



Step Two: Pull top locking tab toward module face. Click indicates lock is engaged.



Step Three: Attach field wiring using removable terminal block or ZIPLink wiring system.



WARNING: EXPLOSION HAZARD – DO NOT CONNECT OR DISCONNECT CONNECTORS OR OPERATE SWITCHES WHILE CIRCUIT IS LIVE UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS. DO NOT HOT-SWAP MODULES UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS.