



# Stepping System Accessories

## SureStep® Microstepping Drives Accessories

### SureMotion Pro Drive Configuration Software - for Advanced Stepper Drives and Advanced Integrated Motor/Drives

#### Free Download

SureMotion Pro configuration software is available as a free download from our website for SureStep advanced components (STP-DRV-4850, -80100, & STP-MTRD-xxxxxR).

- Completely replaces SureStep Pro. Required for integrated motor/drives.
- Used for easy configuration and setup of the drive, including drive, motion control mode, I/O, motor.
- Open, Save, Upload, Download configuration files to Advanced Drives and Drive/Motors.
- Status Monitor screen aids in troubleshooting alarms and faults.
- Self Test Mode verifies motor wiring and functionality.
- SCL Terminal window allows testing/verification of SCL (serial ASCII) commands before PLC programming begins.
- Help files include technical data, application information, advanced setup, serial command instructions.
- Runs on 32-bit/64-bit Windows operating systems.



### SureStep Drive Configuration Software - for Advanced Stepper Drives

Part Number	Price	Description
<b>SM-PRO</b>	\$,2b[.:	SureMotion Pro Windows configuration software, USB drive or free download. For use with SureStep stepper drives with serial port. Requires PC serial port, <a href="#">USB-RS232-1</a> or <a href="#">STP-USB485-4W</a> serial adapters.

\* Available for purchase on USB or can be [downloaded for free](#) from the AutomationDirect Web site ([www.AutomationDirect.com](http://www.AutomationDirect.com)).