

PINK Wiring Solutions

Wiring Solutions using the **ZIP**Link Wiring System

ZIPLinks eliminate the normally tedious process of wiring between devices by utilizing prewired cables and DIN rail mount connector modules. It's as simple as plugging in a cable connector at either end or terminating wires at only one end. Prewired cables keep

installation clean and efficient, using half the space at a fraction of the cost of standard terminal blocks. There are several wiring

solutions available when using the ZIPLink System ranging from PLC I/O-to-ZIPLink Connector Modules that are ready for field

termination, options for connecting to third party devices, GS, DuraPulse and SureServo Drives, as well as special relay, transorb and communications modules. Pre-printed I/O-specific adhesive label strips for quick marking of ZIPLink modules are provided with ZIPLink cables. See the following solutions to help determine the best ZIPLink system for your application.

Solution 1: Do-more, DirectLOGIC, CLICK and Productivity Series I/O Modules to ZIPLink Connector Modules

When looking for quick and easy I/O-to-field termination, a **ZIP**Link connector module used in conjunction with a prewired **ZIP**Link

cable, consisting of an I/O terminal block at one end and a multipin connector at the other end, is the best solution.



Using the PLC I/O Modules to ZIPLink Connector Modules selector tables located in this section,

- 1. Locate your I/O module/PLC
- 2. Select a **ZIP**Link Module
- 3. Select a corresponding **ZIP**Link Cable.



Solution 2: Do-more, DirectLOGIC, CLICK and Productivity Series I/O Modules to **3rd Party Devices**

When wanting to connect I/O to another device within proximity of the I/O modules, no extra terminal blocks are necessary when using the ZIPLink Pigtail Cables. ZIPLink Pigtail Cables are prewired to an I/O terminal block with color-coded pigtail with soldered-tip wires on the other end.

Using the I/O Modules to 3rd Party Devices selector tables located in this section,

- 1. Locate your PLC I/O module
- 2. Select a **ZIP**Link Pigtail Cable that is compatible with your 3rd party device.



Solution 3: GS Series and DuraPulse Drives **Communication Cables**

Need to communicate via Modbus RTU to a drive or a network of drives?

ZIPLink cables are available in a wide range of configurations for connecting to PLCs and SureServo, SureStep, Stellar Soft Starter and AC drives. Add a **ZIP**Link communications module to quickly and easily set up a multi-device network.

Using the Drives Communication selector tables located in this section,

- 1. Locate your Drive and type of communications
- 2. Select a **ZIP**Link cable and other associated hardware.





Solution 4: Serial Communications Cables

ZIPLink offers communications cables for use with **Direct**LOGIC, CLICK, and Productivity CPUs, that can also be used with other communications devices. Connections include a 6-pin RJ12 or 9-pin, 15-pin and 25-pin D-sub connectors which can be used in conjunction with the RJ12 or D-Sub feedthrough modules.

Using the Serial Communications Cables selector table located in this section,

1. Locate your connector type

2. Select a cable.



Solution 5: Specialty ZIPLink Modules

For additional application solutions, **ZIP**Link modules are available in a variety of configurations including stand-alone relays, 24VDC and 120VAC transorb modules, D-sub, RJ12 and RJ45 feedthrough modules, communication port adapter and distribution modules, and SureServo 50-pin I/O interface connection.

Using the **ZIP**Link Specialty Modules selector table located in this section,

- 1. Locate the type of application
- 2. Select a **ZIP**Link module.



Solution 6: ZIPLink Connector Modules to 3rd Party Devices

If you need a way to connect your device to terminal blocks without all that wiring time, then our pigtail cables with color-coded soldered-tip wires are a good solution. Used in conjunction with any compatible **ZIP**Link Connector Modules, a pigtail cable keeps wiring clean and easy and reduces troubleshooting time.

Using the Universal Connector Modules and Pigtail Cables table located in this section,

- 1. Select module type
- 2. Select the number of pins
- 3. Select cable.



PLC I/O Modules to ZIPLink Connector Modules – Do-more!/DL205

Do-more / DL205 PLC Input Module ZIPLink Selector					
PLC	<i>ZIP</i> Link				
Input Module	# of Terms	Component	Module Part No.	Cable Part No. †	
D2-08ND3	10	Feedthrough	ZL-RTB20 (-1)	ZL-D2-CBL10 * ZL-D2-CBL19	
<u>D2-16ND3-2</u>	19	Feedthrough			
		Sensor	ZL-LTB16-24-1	ZL-D2-CBL19-1 ZL-D2-CBL19-2	
D2-32ND3 1	40	Feedthrough	<u>ZL-RTB40</u> (-1)	180 deg conn: ZL-D24-CBL40	
		Sensor	ZL-LTB32-24-1	ZL-D24-CBL40-1 ZL-D24-CBL40-2 45 deg conn: ZL-D24-CBL40-X ZL-D24-CBL40-1X ZL-D24-CBL40-1X ZL-D24-CBL40-2X	
D2-32ND3-2 ¹	40	Feedthrough	<u>ZL-RTB40(</u> -1)		
		Sensor	ZL-LTB32-24-1		
D2-08NA-1	10	Feedthrough ZL-RTB20 (-1)	<u>ZL-RTB20</u> (-1)	ZL-D2-CBL10 ZL-D2-CBL10-1 ZL-D2-CBL10-2	
D2-08NA-2	10				
<u>D2-16NA</u>	19		ZL-D2-CBL19 *		

[†] X in the part number represents a 45° angle.

Do-more/DL205 PLC Combo In/Out Module ZIPLink Selector					
PLC	<i>ZIP</i> Link				
Combo Module	# of Terms	Component	Module Part No.	Cable Part No.	
D2-08CDR	10	Feedthrough	<u>ZL-RTB20</u> (-1)	ZL-D2-CBL10 *	

Do-more/DL205 PLC Analog Module ZIPLink Selector				
PLC	<i>ZIP</i> Link			
Analog Module	# of Terms	Component	Module	Cable
F2-04AD-1		Feedthrough	<u>ZL-RTB20</u> (-1)	ZL-D2-CBL10 ZL-D2-CBL10-1 ZL-D2-CBL10-2
F2-08AD-1				
F2-04AD-2				
F2-08AD-2				
F2-02DA-1				
F2-02DAS-1	10			
F2-08DA-1				ZL-D2-CBL19 ZL-D2-CBL19-1
F2-02DA-2				ZL-D2-CBL19-2
F2-02DAS-2				ZL-D2-CBL10
F2-08DA-2				ZL-D2-CBL10-1
<u>F2-4AD2DA</u>				ZL-D2-CBL10-2
F2-8AD4DA-1	19			ZL-D2-CBL19 ZL-D2-CBL19-1
F2-8AD4DA-2	19			<u>ZL-D2-CBL19-1</u> ZL-D2-CBL19-2
F2-04RTD	Matched	These modules are not supported by the <i>ZIP</i> Link wiring system		
F2-04THM	Only			



Do-more/ DL205 PLC Output Module ZIPLink Selector					
PLC	<i>ZIP</i> Link				
Output Module	# of Terms	Component	Module Part No.	Cable Part No. †	
D2-04TD1 ² D2-08TD1	10	Feedthrough	<u>ZL-RTB20</u> (-1)	ZL-D2-CBL10 ZL-D2-CBL10-1	
D2-08TD1 D2-08TD2	10			ZL-D2-CBL10-1 ZL-D2-CBL10-2	
D2-16TD1-2		Feedthrough			
<u>DZ-101D1-Z</u>		Fuse	ZL-RFU20 4		
		Feedthrough	<u>ZL-RTB20</u> (-1)		
		Fuse	ZL-RFU20 ⁴	ZL-D2-CBL19	
<u>D2-16TD2-2</u>	19	Relay	ZL-RRL16-24-2 ZL-RRL16W-24-2 ZL-RRL16F-24-2 ZL-RRL16HDF-24-2	ZL-D2-CBL19-1 ZL-D2-CBL19-2	
F2-16TD1P		Feedthrough ZL-	ZL-RTB20 (-1)	-	
F2-16TD2P			<u>ZL-RTD20</u> (-1)		
D2-32TD1 ¹	- 40	Feedthrough	<u>ZL-RTB40</u> (-1)	180 deg conn: ZL-D24-CBL40-1 ZL-D24-CBL40-2 45 deg conn: ZL-D24-CBL40-2 75 deg conn:	
<u>DZ-321D1</u>		Fuse	ZL-RFU40 ⁴		
		Feedthrough	<u>ZL-RTB40</u> (-1)		
<u>D2-32TD2</u> ¹		Fuse	ZL-RFU40 ⁴	ZL-D24-CBL40-1X ZL-D24-CBL40-2X	
<u>D2-08TA</u>	40	E		ZL-D2-CBL10	
F2-08TA	10 Feedthrough ZL-RTB20 (-1)		ZL-D2-CBL10-1 ZL-D2-CBL10-2		
	19	Feedthrough		ZL-D2-CBL19	
<u>D2-12TA</u>		Fuse	ZL-RFU20 4	ZL-D2-CBL19-1 ZL-D2-CBL19-2	
D2-04TRS ²	40	E a althua a sh		ZL-D2-CBL10	
<u>D2-08TR</u>	10	Feedthrough		<u>ZL-D2-CBL10-1</u> ZL-D2-CBL10-2	
F2-08TRS ²	19	Foodthrough	<u>ZL-RTB20</u> (-1)	ZL-D2-CBL19 *	
F2-08TR ³	10	Feedthrough		ZL-D2-CBL10 *	
D2-12TR	19	Feedthrough		ZL-D2-CBL19 ZL-D2-CBL19-1	
		Fuse	ZL-RFU20 4	ZL-D2-CBL19-1 ZL-D2-CBL19-2	

† X in the part number represents a 45° angle plug

Select the cable length by replacing the * with: Blank = 0.5 m, -1 = 1.0 m, or -2 = 2.0 m.

1 To make a custom cable for the 32-point modules, use: Solder-style 180° connector ZL-D24-CON or Solder-style 45° connector ZL-D24-CON-X

2 Caution: The D2-04TD1, D2-04TRS, and F2-08TRS outputs are derated not to exceed module specs 2A per point and 2A per common when used with the ZIPLink wiring system.

3 The F2-08TR outputs are derated not to exceed 2A per point and 4A per common when used with the ZIPLink wiring system.

4 Fuses (5 x 20 mm) are not included. See Edison Electronic Fuse section for (5 x 20 mm) fuse. S500 and GMA electronic circuit protection for fast-acting maximum protection. S506 and GMC electronic circuit protection for time-delay performance. Ideal for inductive circuits.

To ensure proper operation, do not exceed the voltage and current rating of ZIPLink module. <u>ZL-RFU20</u> = 2A per circuit; <u>ZL-RFU40</u> = 400mA per circuit.

Note: ZIPLink Connector Module specifications follow the Compatibility Matrix tables. **ZIP**Link Cables specifications are at the end of this **ZIP**Link section.