Do-more! Designer Programming Software

Do-more Designer (Part No. DM-PGMSW)

Do-more! Designer is a full-featured programming software. Do-more Designer is a free download from Automationdirect.

com. A CD-ROM version is also available for purchase for \$10.00.



Do-more! Designer System Requirements

Do-more! Designer Windows-based programming software (CD-ROM or web down-load) works with a variety of Windows® operating systems listed below.

Do-more! Designer software can connect to your PLC system using one of the following specifications. More detailed specifications can be found in the User Manual and Do-more! Designer software online Help files.

Do-more! Designer is compatible with any of these PC operating systems:

Windows[®] 10

- Windows[®] 8.1 64 bit
- Windows[®] 8.1 32 bit
- Windows[®] 8 64 bit
- Windows[®] 8 32 bit
- Windows[®] 7 64 bit
- Windows[®] 7 32 bit
- Windows[®] Vista 64 bit

Windows[®] Vista - 32 bit

Hardware Requirements:

HD Space: 140Mb

Video: 1024x768 256 color (1280x720 true color recommended) 1GHz , single core CPU (2GHz, multi-core recommended) 1GB RAM (3GB recommended)

Other: Windows[®] 8 RT Edition is not supported.





Start Page

When the software is started, the Start Page is displayed. This page contains a Launchpad with Projects, Applications and Links windows. It also contains shortcuts to important help file topics and the Do-more Simulator.



From the Start Page, you can select from any of 5 short videos that demonstrate how to use the software and explain how the Do-more! technology works.

- Video 1: "Welcome", welcomes you to the Do-more! Designer Software. This video familiarizes you
 with the BRX environment showing you how to connect to a BRX MPU, open a project, etc.
- Video 2: "Quick Start", walks you through writing and documenting a simple program and downloading it to the BRX MPU.
- Video 3: "Troubleshooting", introduces you to and shows you how to use the troubleshooting and debugging tools built in to the Do-more! Designer software.
- Video 4: "Architecture", explains how the Do-more ! Technology works. Understanding the Do-more Technology allows you to take advantage of the built-in features allowing you to create projects easier and decreasing the amount of programming time needed.
- Video 5: "Helpful Hints", covers some of the most common BRX MPU programming challenges and explains how easily Do-more! Designer can help with these challenges.
- Video Search & Download Utility opens a search window and download screen.

Do-more Designer 2.0.0 - UNITILED - [\$Main]	
File Edit Search View Tools PLC Debug Window Help	
🕼 🖓 🖓 🖓 🚱 🚱 🔯 🚱 🔯 🚱 🚱 🚱 🖉 🚱 🖉 🖉 🚱 🖉 🚱 🚱 🍰 🚱 🍪 🚱 🖓 🖓 🖓 🖓 🖓 🖓 🖓 🖓 🖓 🖓 🖓 🖓 V V V V	s On The Web Tip Help .
Read PLC Vinte PLC New Online Domore Sim Data Debug Trend Memory Status All Status No Status Forces Value Mode Info Configure Devices Check	PID Overview PID View
Xet Image: Second	
Project Browser 🛛 🗶 🏦 Start Page 💽 Dashboard 🚱 SMain	Instruction ToolboxX
	Contact Trailing Edge One-Shot
In the second system Tasks	Contact (Shift+F3)
Links	-) Equal-To Relational Contact (=) -) Less-Than-or-Equal-To
	Relational Contact
A Proces (NOP)	Kot-Equal-To Relational Contact (!) Greater-Than Relational
Discontinues Solution (NOP)	Contact Coil/Bit Output
	Analog/Process CTRIO Date/Time/Calendar
6 (NOP)	Ethernet File System
7 (NOP)	Hardware/Device High Speed/Axis
8(NOP)	Misc/Data Manipulation Program Control
	Program-Looping Protocol-Custom/ASCII
9 (NOP)	Protocol-Standard String
₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩	7
Instr Toolbox Accept F2 F3 Sh+F2 Sh+F3 = ! > Delta Out St Rest Browse ^ Miles For Help, press F1 Image S Image D Offline 00110/65536 Br-Object 00110/65536 Br-Object D 00110/65536 Br-Object D	ode - 11E-10ED23-D

Do-more! Designer Features

Do-more! Designer has the following main features:

- Supports the Do-more PLC instruction set
- Project Browser (Window to organize the user project)
- Data View (Interface to monitor and edit PLC data in a list)
- Trend View (Interface to monitor PLC data with trend graphs)
- PID View (Interface to monitor and tune the individual PID control loop)
- PID Overview (Interface to monitor multiple PID control loops)
- Debug View (Interface to debug the ladder programs)

When Do-more! Designer is installed on your PC, the following tools are also installed:

- Do-more Simulator (Offline simulator of ladder program execution and PID control)
- Do-more Logger (Software tool to log PLC data)
- ERM Workbench (Configuration tool for the ERM modules)
- NetEdit 3 (Configuration tool for the ECOM/EBC Ethernet modules)

Programming Cables

The Do-more! Designer Software supports RS-232, USB and Ethernet protocols for programming and monitoring. Cables for these ports are listed below and can be purchased at Automationdirect.com.

USB Cables (USB 2.0, Type A-B connectors):

- USB-CBL-AB3 (3 ft.)
- USB-CBL-AB6 (6 ft.)
- USB-CBL-AB10 (10 ft.)
- USB-CBL-AB15 (15 ft.)

RS232 Serial Cable

• D2-DSCBL (12 ft. 9-pin D-sub to RJ12 connector)

Ethernet Cables (Cat5e)

Automationdirect.com sells many Ethernet patch cables in various colors and lengths. Please check the Cables section in this catalog for further details.



In

C

Do-more PLC Instruction Set

The Instruction Toolbox was developed specifically for the new Do-more! Designer. The Instruction Toolbox allows one-click access to all available instructions.

Instruction Toolb	ox	<u> </u>		
🔶 Favorites				
Contact				
Norm	ally Open Contact (F2)		
Norm	ally Clocod Contact	/ED)		
Leadi	Instruction Toolbo	×	<u>+ x</u>	
(Shift	👷 Favorites			
-J Trailin	Contact			
- Creat		ada Dia da		
	ND - Trailing Edu	Instruction Toolbox	₽ x	
	NOP Coil - Null	🔶 Eavorites		
-J S F Less-	OUT Coil - Write	Contact		
-J < F Less-	OUTI Coil - Out I	Coil/Bit Output		
- 🔀 - Not-f	PD - Leading Edg	Analog/Process	Instruction Toolbox	 Ψ×
- 🗲 📙 Great	PONOFF - Push	CTRIO	☆ Favorites	
	RST Coil - Reset	Date/Time/Calendar	Contact	
Coil/Bit Output	RSTI Coil - Reset	Ethernet	Coil/Bit Output	
Analog/Process	KSTK - Keset Kar	File System	Analog/Process	
Date/Time/Cale	SET Coil - Set In	Hardware/Device	CTRIO	
Ethernet	SETR - Set Bange	High Speed/Axis	Date/Time/Calendar	
File System	SR - Shift Registe	AXCAM - Axis Electro	Ethernet	
Hardware/Devic	Analog/Process	AXCONFIG - Axis Con	File System	
High Speed/Avia	CTRIO	AXFOLLOW - Axis Pos	Hardware/Device	
Math	Date/Time/Calend	AXGEAR - Axis Electro	High Speed/Axis	
Misc/Data Mani	Ethernet	AXHOIVE - AXIS PERO AXIOG - Avis log Mos	Math	
Program Contro	File System	AXPOSSCRV - Axis Me	DEC - Decrement	
Program-Loopir	Hardware/Device	AXPOSTRAP - Axis M	INC - Increment	
Protocol-Custor	High Speed/Axis	Trapezoid	LERP - Linear Interpolation	
Protocol-Standa	Math	AXRSTFAULT - Reset /	MATH - Calculate Expression	ı
String	Misc/Data Manip	AXSETPROP - Set Axis	RANDSEED - Random Numb	er Seed
Timer/Counter/	Program Control	AXVEL - Axis Set Velo		
	Program-Looping	TDODECFG - Deconfil		
	Protocol-Custom,	for Table Driven Outn		
	Protocol-Standard	Math		
	String	Misc/Data Manipulatio		
	Timer/Counter/D	Program Control		
		Program-Looping		
		Protocol-Custom/ASCI	Misc/Data Manipulation	
		Protocol-Standard	Program Control	
		Timer/Counter/Drum	Program-Looping	
	,	niner/Counter/Drum	Protocol-Custom/ASCII	
			Protocol-Standard	
			String	
			Timer/Counter/Drum	

You may see some similarities to the DirectLOGIC PLC instruction set. However, the instruction set for the new Do-more! is more advanced and intuitive. A good example is the MATH instruction. Now, just one MATH instruction covers all math operations and also allows you to mix different data types in one expression.

There are over 60 operators and functions available with the MATH instruction.

> NOTE: To learn more about the MATH instruction, please refer to the Do-more Designer help topic 'MATH – Calculate Expression'.

MATH Calculate Expression Result D0 Expression SQRT(V1 * N23 * 1.23) + SUMR(R32, 10)

Operators

+, -, *, /, %, **, <, <=, ==, !=, >=, >, &&, ||, &, |, ^, <<, >>, >>>, -, ~, !

Functions

ABS, ACOS, ASIN, ATAN, AVGR, COS, COUNTIFEQ, COUNTIFNE, COUNTIFGE, COUNTIFGT, COUNTIFLE, COUNTIFLT, DEG, E, FRAC, IF, LN, LOG, MAXR, MAX, MINR, MIN, NOW, PI, RAD, RANDINT, RANDREAL, REF, ROUND, SIN, SQRT, STDEVR, STDEVPR, SUMIFEQ, SUMIFNE, SUMIFGE, SUMIFGT, SUMIFLE, SUMIFLT, SUMR, TAN, TICKms, TICKus, TOINT, TOREAL, TRUNC

Data Types

Do-more! Designer supports the following seven primary data types:

- Bit (0 or 1)
- Unsigned Byte (0 to 255)
- Signed Byte (-128 to 127)
- Unsigned Word (0 to 65,535)
- Signed Word (-32,768 to 32,767)
- Signed DWord (-2,147,483,648 to 2,147,483,647)
- Real (-3.4028235E+038 to 3.4028235E+038)

Data Structures

Do-more! Designer supports data structures as additional data types. Structures use the familiar PC programming organization of "dot notation". All available elements of a structure are shown in this format. The following data structures are currently available:

- Timer Structure
- Counter Structure
- Stream Structure SIM_Process Structure
- String Structure PID Structure
- Server Structure
- Date/Time Structure Peerlink Structure
- Task Structure Rampsoak Structure
- Program Structure
- DeviceRef Structure
- Drum Structure
- I/O_Master Structure Eth_IO_Master Structure GS Drive Structure
- Packet Structure

The data structure is a set of data. For instance, a Timer structure (Timer Struct) has the following set of data:

- Acc (Accumulated Time, Signed DWord)
- Done (Bit)
- Zero (Bit)
- Timing (Bit)
- Reset (Bit)

When you use a timer instruction (TMR), a Timer structure is assigned to the instruction. If you select 'TO', you can access the above data with dot notation. For instance, to access the accumulated time (Acc), enter 'TO.Acc'. To access the Done bit, enter 'TO.Done'.

Memory Addressing

With Do-more!, each memory address type has its own specific data type. Here are some examples:

- V (Unsigned Word)
- N (Signed Word)
- D (Signed DWord)
- R (Real)

If you see address 'V123' in the ladder program, the memory address always stores an Unsigned Word value. With this memory addressing method, it becomes easier to read and write the ladder programs.

Although most of the memory addressing is decimal, the memory addresses DLX, DLY, DLC and DLV use octal. These four memory address types can be used to exchange data with BRX or DirectLOGIC PLCs, which use octal memory addressing.



Array Addressing

The Do-more! Designer supports one-dimensional array addressing with all memory addresses. A V-memory address must be used as the index for an array. With Do-more! the following ladder program is valid.



Note: In this example, V0, V100, V101, V102 and V200 are indices.

Code-block, Program and Task

One Do-more project can consist of more than one ladder program. Each ladder program is called a 'Code-block'. Do-more! supports two types of code-blocks, Program and Task:

Program

Programs are code-blocks that run based on an event using the RUN instruction. They can be self-terminating or never terminate. Stage programming is only supported inside Program code-blocks.

Task

Tasks are code-blocks that are enabled and disabled using the ENTASK instruction. The ENTASK instruction allows you to specify an interval to execute the task's logic with a millisecond resolution or to execute a single time on a leading edge input.

Stages

The Do-more! Designer supports Stages. You can use Stages only in the Program codeblocks. (They are not available in the Task code-blocks.) Do-more! supports the following instructions for Stage Programming¹:



1 There is no ISG (Initial Stage) instruction in Do-more!; the first stage in the Program code-block becomes the initial stage automatically.

2 Many asynchronous instructions can directly initiate a Jump to Stage.



WX	Modbus Network Write
Device	@IntModTCPClient
 Modbus/TCP addressing — IP Address 	
Fixed IP Address	127 . 0 . 0 . 1 °
C Variable IP Address	D0
TCP Port Number	502 °
Unit ID	255
Function Code	5 - Write Single Coil 👻
To Modbus Offset Address Number of Modbus Coils From Do-more Memory Address	1 0 5 or Constant C0 0
To Modbus Offset Address Number of Modbus Coils From Do-more Memory Address Do-more Range – Enable	s or Constant CO n/a
To Modbus Offset Address Number of Modbus Coils From Do-more Memory Address Do-more Range - Enable	s or Constant CO o
To Modbus Offset Address Number of Modbus Coils From Do-more Memory Address Do-more Range Enable © Once on Leading Edge © Continuous on Power Flo	s or Constant
To Modbus Offset Address Number of Modbus Coils From Do-more Memory Address Do-more Range Enable Conce on Leading Edge Continuous on Power Flo Constant hrhm	1 • 1 • 1 • 0 • 0 • 0 • 1 • 0 •
To Modbus Offset Address Number of Modbus Coils From Do-more Memory Address Do-more Range Enable	1 • 1 • C0 • w at Interval • in m_sec.s_msms
To Modbus Offiset Address Number of Modbus Colls From Do-more Memory Address Do-more Range Enable © Once on Leading Edge © Continuous on Power Flo © Constant <u>hrn m</u> © Vaniable <u>D0</u> On Success: © Set bit © JM	1 0 1 1 CO 0 w at Interval n/a in m sec s ms ms ms P to Stage C2 0
To Modbus Offset Address Number of Modbus Colls From Do-more Memory Address Do-more Range Enable ^C Once on Leading Edge ^C Constant <u>hrh</u> m ^C √ariable On Success: ^C Set bit ^C JM On Error: ^C Set bit ^C JM	1 • 1 1 CO • w at Interval n/a inim secs ms P to Stage C2 • P to Stage C3 •

