
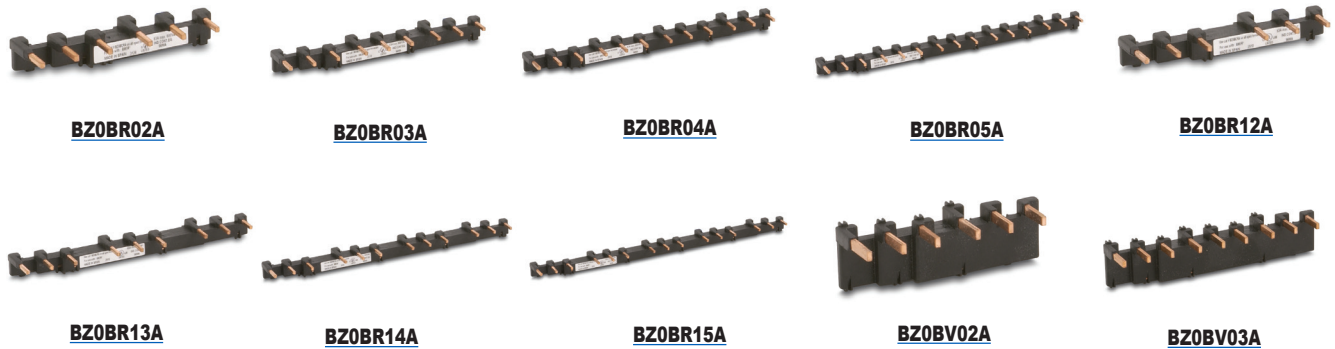


Fuji Duo Series Manual Motor Starters Accessories

Busbar system

Features

- The busbar system reduces wiring time and saves floor space.
- The busbar makes it easy to power from 2 to 5 manual motor starters, with no wiring needed.
- The 3-phase feed-in terminals are used to connect the wire for the power supply circuit.
- The busbar cover guards against accidental touching of non-connected busbar terminals (charged parts).
- If using BZ0TCRE terminal cover with BM3R series MMS, the busbar system can not be used.

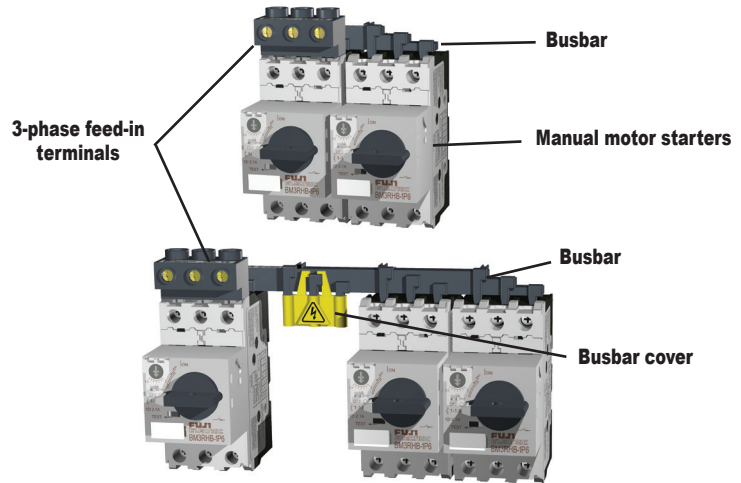

Note: Busbar photos continued on next page.



BZ0BFRA



BZ0BFVA



BZ0BCRA



BZ0BCVA

Busbar System Components and Ratings							
Part Number	Price	Description	Used with	Specifications		Weight (g)	
BZ0BR02A		Busbar	BM3R	Continuous current: 64A max. pin connection	2-BM3R, modular space: 45mm	30	
BZ0BR03A					3-BM3R, modular space: 45mm	50	
BZ0BR04A					4-BM3R, modular space: 45mm	70	
BZ0BR05A					5-BM3R, modular space: 45mm	90	
BZ0BR12A					2-BM3R, modular space: 54mm	30	
BZ0BR13A			BM3R+ 1 external accessory, 9mm wide		3-BM3R, modular space: 54mm	55	
BZ0BR14A					4-BM3R, modular space: 54mm	80	
BZ0BR15A					5-BM3R, modular space: 54mm	105	
BZ0BV02A					BM3V	2-BM3V, modular space: 55mm	140
BZ0BV03A						3-BM3V, modular space: 55mm	240
BZ0BV04A			4-BM3V, modular space: 55mm			340	
BZ0BV12A			BM3V + 1 external accessory, 9mm wide			2-BM3V, modular space: 64mm	150
BZ0BV13A						3-BM3V, modular space: 64mm	270
BZ0BV14A					4-BM3V, modular space: 64mm	380	
BZ0BFRA			3-phase feed-in terminal		BM3R	Continuous current: 64A max. Applicable cable size: 25 mm ² max.	40
BZ0BFVA		BM3V		Continuous current: 126A max. Applicable cable size: 50 mm ² max.	170		
BZ0BCRA		Busbar cover	BZ0BR	For pin connection	10		
BZ0BCVA			BZ0BV	NOTE: Some fine tuning and fitting adjustments may be needed.	5		

