


# SJ300 Configuration, Control and Monitoring

The SJ300 Series drives can be configured multiple ways. The drive can be configured using the removable keypad that comes with the drive (OPE-SRE), the remote digital keypad with serial communications (SC-OPE3I), or the optional Windows-based programming software DOP-PRO, available for free download at [www.drivemanager.com](http://www.drivemanager.com). The DOP-PRO-CBL programming cable is required to download configurations to the drive.

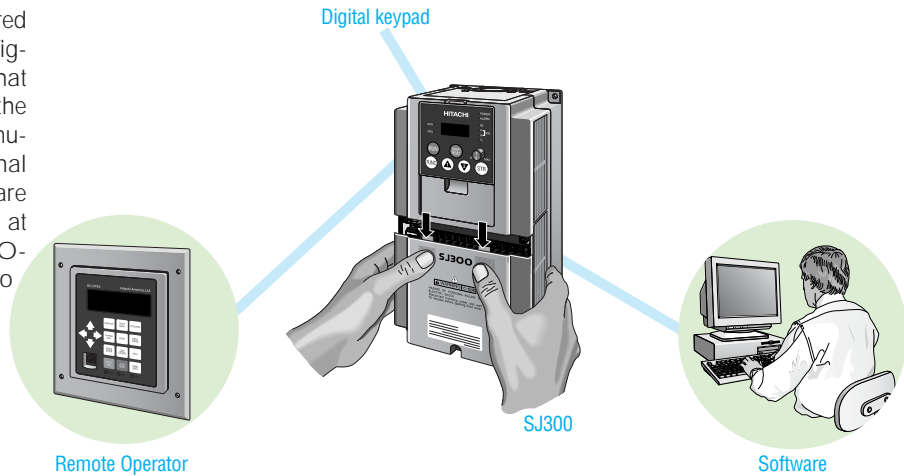


## Digital keypad

### OPE-SRE (SJ300 Series only)

The OPE-SRE comes standard on every SJ300 Series drive. This keypad has a single line, 4-character LED display. The OPE-SRE can be used to program the drive's parameters as well as monitor specific drive functions.

The OPE-SRE can be mounted on the SJ300 drive or mounted remotely. Use a standard UTP Cat5e Ethernet cable (3m maximum length) for remote mounting. Replacement keypads for the SJ300 are available and come with an extra filler plate.

Digital Keypad		
Part Number	Description	Price
OPE-SRE	Digital remote operator	<--->

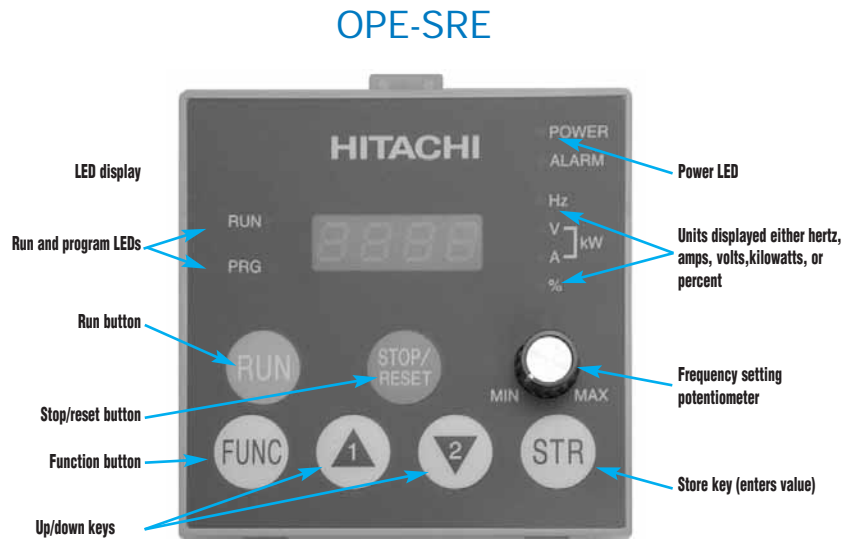

## Programming Cable

The DOP-PRO-CBL cable is used to interface a PC to an SJ300 drive using DOP-PRO configuration software. It has a built-in RS232/422 converter and an RJ45 connector.

Programming Cable		
Part Number	Description	Price
DOP-PRO-CBL	Programming cable for DOP-PRO software	<--->

## DOP-PRO-CBL

