

# SureStep<sup>®</sup> Stepping System Accessories

## SureStep<sup>®</sup> Microstepping Drives Accessories

### SureMotion Pro Drive Configuration Software - for Advanced Stepper Drives and Advanced Integrated Motor/Drives

#### Free Download

SureMotion Pro configuration software is available as a free download from our website for SureStep advanced components (STP-DRV-4850, -80100, & STP-MTRD-xxxxR).

- Completely replaces SureStep Pro. Required for integrated motor/drives.
- Used for easy configuration and setup of the drive, including drive, motion control mode, I/O, motor.
- Open, Save, Upload, Download configuration files to Advanced Drives and Drive/Motors.
- Status Monitor screen aids in troubleshooting alarms and faults.
- Self Test Mode verifies motor wiring and functionality.
- SCL Terminal window allows testing/verification of SCL (serial ASCII) commands before PLC programming begins.
- Help files include technical data, application information, advanced setup, serial command instructions.
- Runs on 32-bit/64-bit Windows operating systems.



#### SureStep Drive Configuration Software - for Advanced Stepper Drives

Part Number	Price	Description
<b>SM-PRO *</b>	\$9.00	SureMotion Pro Windows configuration software, USB drive or free download. For use with SureStep stepper drives with serial port. Requires PC serial port, USB-RS232 or STP-USB485-4W serial adapters.

\* Available for purchase on USB or can be [downloaded for free](http://www.AutomationDirect.com) from the AutomationDirect Web site ([www.AutomationDirect.com](http://www.AutomationDirect.com)).