

Manually Configuring VPN Through the LAN Side

StrideLinx PRO VPN router

STRIDELINX

- Overview
- Configuration
- Diagnostics
- System

0.7.2

System

Date: Tue Jun 30 14:39:36 2026

Agent

Status

StrideLinx	registered
VPN	connected
Configuration	connected
Data Logging	unconfigured
Active Connection	Wi-Fi Client

Information

Type in the IP address of the VPN into a web browser.

← → ↻ Not secure 192.168.10.200/#/ ☆ D New Chrome available

SL StrideLinx PRO VPN router STRIDELINX

- Overview
- Configuration**
- Diagnostics
- System

0.7.2

System

Date Tue Jun 30 14:46:28 2026


Agent

Status


StrideLinx	registered
VPN	connected
Configuration	connected
Data Logging	unconfigured
Active Connection	Wi-Fi Client

Information

Click on Configuration

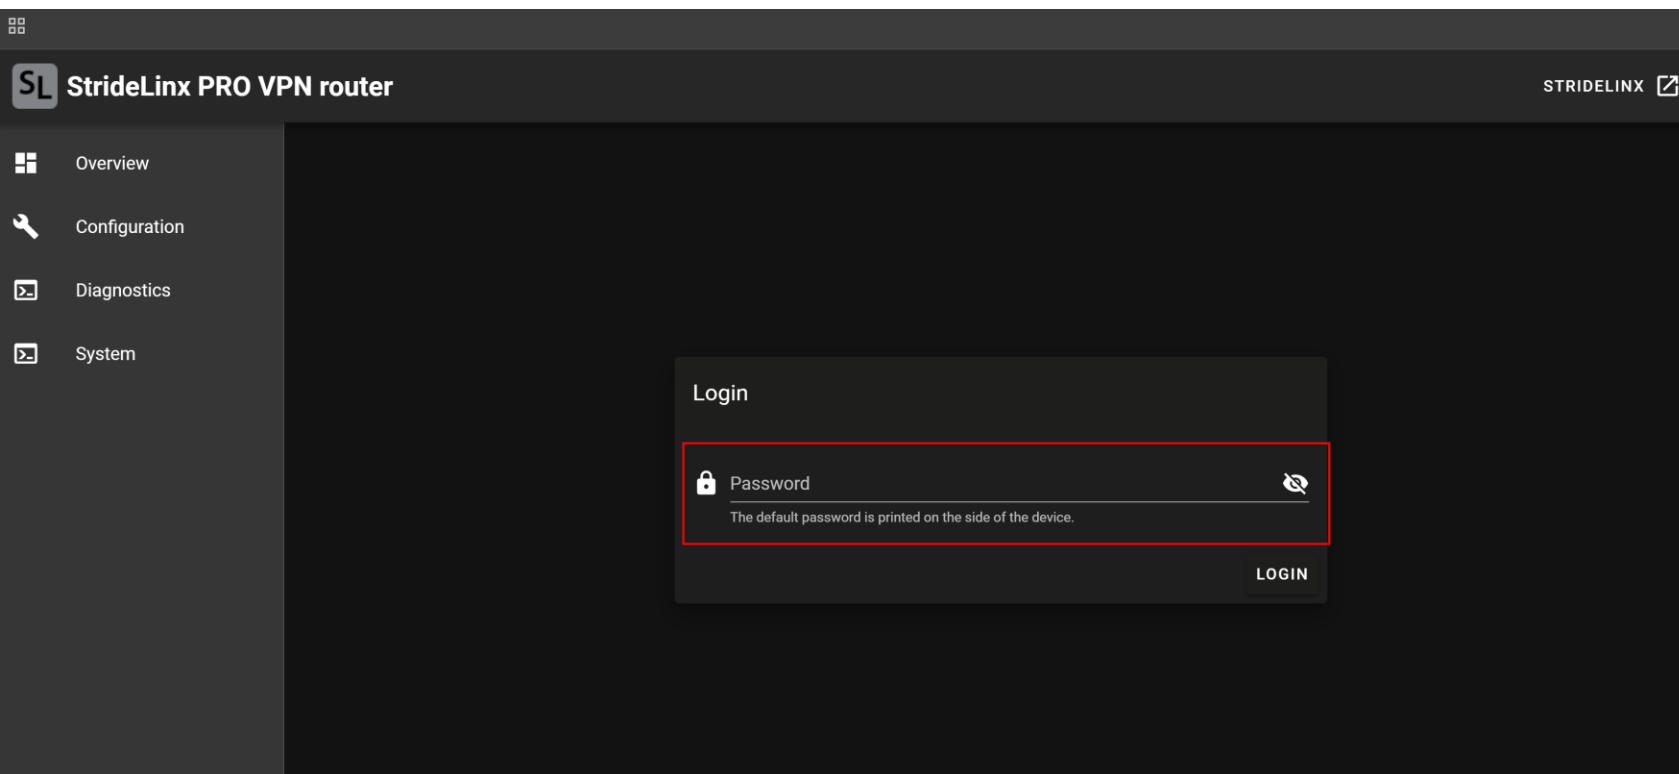

It will then ask you to login with a password. The password is on the side of the router.

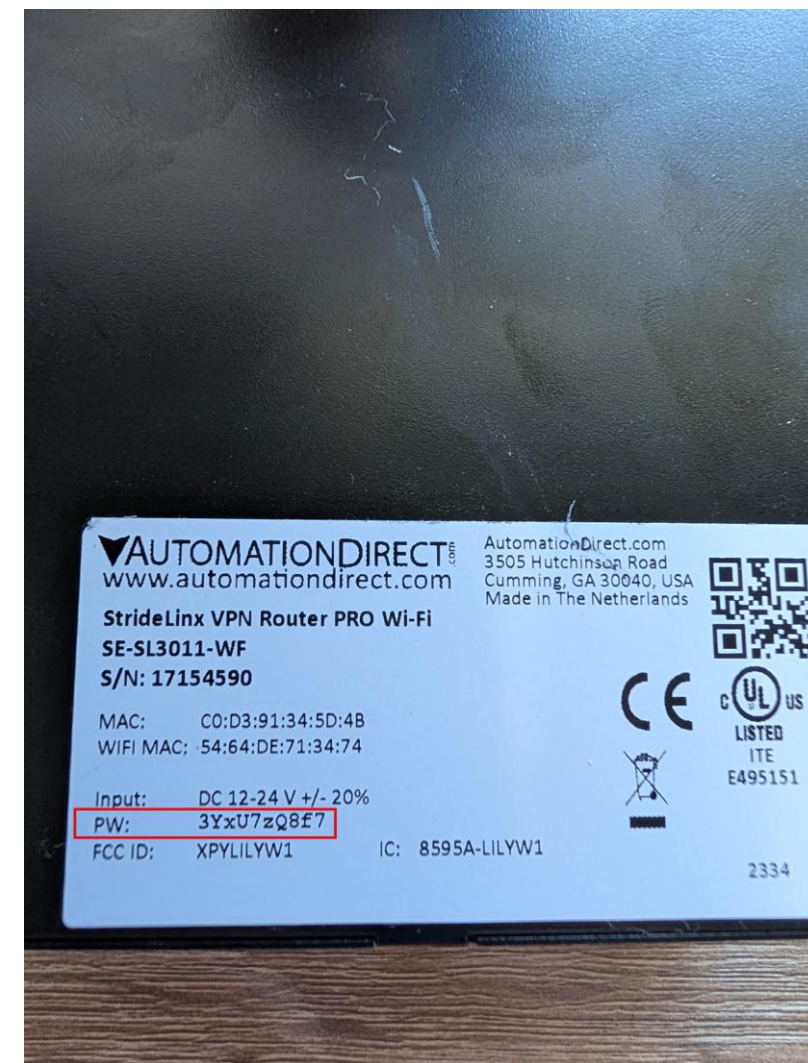

The screenshot shows a web browser window with the address bar displaying "192.168.10.200/#/configuration". The page title is "StrideLinX PRO VPN router". The left sidebar contains navigation options: Overview, Configuration (selected), Diagnostics, System, Account, and a LOGOUT button. The main content area is titled "StrideLinX" and displays the following configuration details:

Company ID	9228-4554-1242-6292-2927
Network	
WAN	
Ethernet	
Connection Type	Static
IP Address	192.168.1.2
Netmask	255.255.255.0

From here you can configure the VPN.