1-800-633-0405 RHINO PSM24-BCM360S Battery Control Module

The battery control module, when combined with a PSM24 power supply, makes a perfect DC-UPS system by providing the means to charge and monitor an external lead acid battery. The power supply charges the connected battery and keeps it in a charged mode.

Consequently, the output voltage of the system is equivalent to the battery voltage. To avoid overcharging the battery, an external temperature sensor automatically adjusts the battery voltage to the required end of charge voltage. This configuration extends the battery life.




Battery Control Module							
Part Number	Price	Drawing Link	Input	Input Power Max	Output Voltage Nom	*Output Power Max	
PSM24-BCM360S <u>PSM24-BCM360S</u> (includes terminal plugs)	\$222.00	PDF	24VDC power supply and 24VDC battery	360W	24VDC	360W	


*reduce maximum output current by battery charging current.

General Specifications					
Operating Temperature	-25 to 70°C max [-13 to 158°F] 1.5%/K, derating above 40°C [104°F]				
Electromagnetic Compatibility	In correspondence to connected units [no internal switching device]				
Battery Protection	Over voltage, deep discharge, short-circuit and reverse connection [built-in fuse]				
Status Signals	DC-OK input, DC-OK output, BAT OK [all relay contacts closed at status OK]				
Rating per Relay Contact	30 VDC / 1.0 A max.				
Remote Link Wire 0.5m	One cable included with PSM24-BCM360S module				
Remote ON/OFF	By external contact: ON = J5.7 + J5.8 not shorted OFF = J5.7 + J5.8 shorted				

Battery Control Module Function Diagram

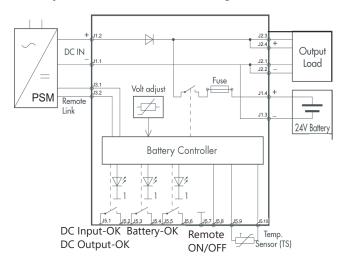

Battery Control Module Connector Positions

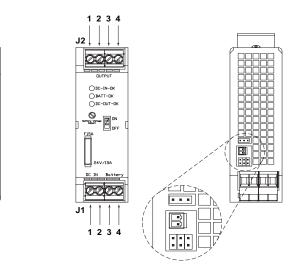

PIN	J1	J2	J3	J4	J5	J6
1	- Vin [DC In]	GND [-]	S+	15 sec test	DC-IN-OK Signal	PSM24-360S [factory setting]
2	+ Vin [DC In]	GND [-]	S-	Common	DC-IN-OK Relay contact	PSM24-180S
3	- Bat in	Vout [+]	—	10 min test	Bat-OK Signal	PSM24-090S
4	+ Bat in	Vout [+]	—	—	Bat-OK Relay Contact	—
5	—	_	—	—	DC-OUT-OK Signal	—
6	—	_	—	—	DC-OUT-OK Relay Contact	—
7	—	_	—	—	Remote ON/OFF	—
8	_	—	—	—	Remote ON/OFF	—
9	_	—	—	—	Temperature Sensing	—
10	—	_	—	—	Temperature Sensing	—

C

RHINO Power Supplies - Accessories PSM Series

A variety of accessories is available to complement the RHINO PSM power supplies. Choose panel mounting brackets and replacement plug kits from the table below, based on the size of the power supply. There is also a temperature sensor for the battery control module and replacement link cable for the redundancy and battery control modules.





Accessories						
Part Number	Price	Drawing Link	Description			
PSM-PANEL1	\$43.00	PDF	Panel mounting bracket. 1 bracket type A includes M4-screw [DIN 74-4fA] for 78W, 90W, 156W, 180W PSM power supplies			
PSM-PANEL2	\$37.50	PDF	Panel mounting bracket. 2 brackets type A include M4-screws [DIN 74-4fA] for 360W, 600W PSM power supplies			
PSM-PK1	\$8.50	N/A	Replacement plug kit for PSM series with 78W and 90W outputs			
PSM-PK2	\$12.50	N/A	Replacement plug kit for PSM series with 156W, 180W and 360W outputs			
<u>PSM-TS</u>	\$38.00	N/A	Temperature sensor for PSM24-BCM360S battery control module			
PSM-JC01	\$9.00	N/A	Replacement link cable for PSM series redundancy module PSM24-REM360S and battery control module PSM24-BCM360S			

Mounting


PSM power supplies are designed for mounting on a DIN rail. Please allow minimum free space of 80 mm (3.15") above and below, and 50 mm (1.97") on each side of the power supply for air convection. To attach unit onto the DIN rail, hook the top part of clip on DIN rail, then push down and inward until you hear the clipping sound. To remove, pull the latch of the clip using an insulated flathead screwdriver.


For wall or chassis mounting, use mounting brackets <u>PSM-PANEL1</u> (for 78W to 180W PSM style power supplies) or <u>PSM-PANEL2</u> (for 360W and 600W PSM power supplies). Remove the DIN clips and replace with the brackets. Use the countersink screws included with the wall mount kit to attach the brackets to the power supply. To attach the power supply to the DIN rail



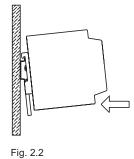

To remove the power supply from DIN rail

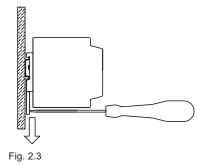



1-800-633-0405 **RHINO Battery Control Modules Overview**

A battery control module (BCM), in combination with an external sealed lead acid battery, can be added to a DC power supply to create a DC uninterruptible power supply (UPS) that will maintain power to a connected load upon loss of mains power.

The battery control module performs several key functions in the DC UPS system. Under normal conditions, it monitors the status of the DC input power, monitors and controls charging of the external lead acid battery, and provides status/alarm contacts to allow remote monitoring of the state of the UPS.

In the event that the DC power supply voltage drops out, the BCM monitors and supplies power to the load from the battery and monitors the battery during discharge.

Several battery control modules, with a range of features, are available for use with RHINO power supplies. Key differentiating features of the battery control modules are delineated in the following table.

Battery Control Module Selection Guide						
Part Number	PSH-BCM360S	PSB24-BCM960S	<u>PSL-24-BCM240</u>	PSM24-BCM360S		
Price	\$274.00	\$66.00	\$34.50	\$222.00		
Drawing Link	PDF	PDF	PDF	PDF		
Highlights	Most versatile	Most versatile Highest power Lowest cost/watt Conformal coating		Legacy		
Nominal Output Voltage	24/48 VDC	24 VDC	24 VDC	24 VDC		
Amperage Rating	15A at 24 VDC, 7.5 A at 48 VDC	40A	10A	15A		
Number of Power Inputs	Redundant inputs for two independent power supplies	One power supply	power supply One power supply			
Battery Type	12V sealed lead acid	sealed lead acid 24V sealed lead acid 24V sealed lead acid		24V sealed lead acid		
Protection Type	Over voltage, Over current, Deep discharge, Reverse polarity, Battery overcharge, Over temperature					
Battery Temperature Compensation	Yes	No	No Yes			
Compatibility	Universal	Universal	Universal	Requires RHINO PSM24 power supply		







