




Series 3825


Application and Installation Guide

Two-Way, Two-Position, Normally Closed

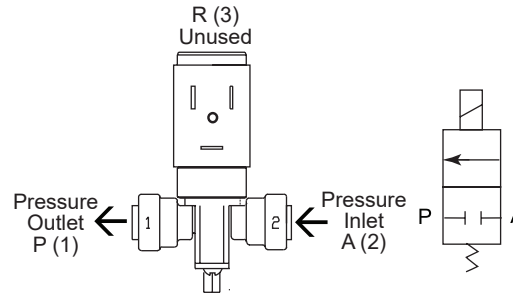


- Position 1) Coil De-energized. Pressure inlet port A (2) is closed from outlet port P (1). Port R (3) is unused.
- Position 2) Coil Energized. Pressure inlet port A (2) is connected to outlet port P (1)

Two-Way, Two Position, Normally Open

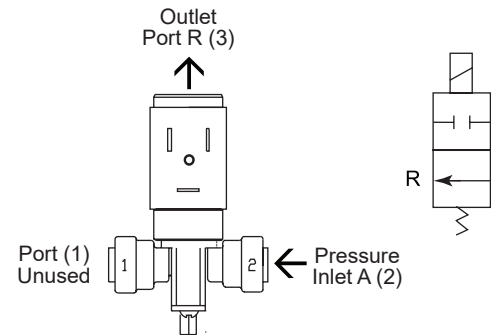

- Position 1) Coil De-energized. Pressure inlet port A (2) is open to outlet port R (3).
- Position 2) Coil Energized. Pressure inlet port A (2) is blocked to outlet port R (3)

Three-Way, Two Position, Normally Closed

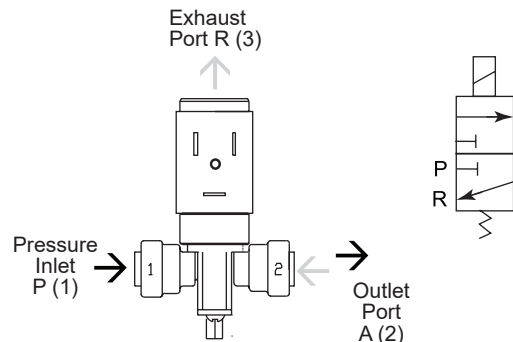

- Position 1) Coil De-energized. Pressure inlet port P (1) is blocked and outlet port A (2) is open to exhaust port R (3)
- Position 2) Coil Energized. Pressure inlet port P (1) is open to outlet port A (2). Exhaust port R (3) is blocked.

Caution

Do not use media, voltage or pressures other than that recommended by Spartan Scientific Inc. as valve malfunction could result. Misuse or misapplication of Spartan solenoid valves could cause serious bodily injury or property damage.

Warranty Information

Solenoid valves and all other products manufactured by Spartan are warranted by Spartan to be free from defects in material and workmanship for a period of 1 year from the date of purchase. Spartan's obligation under this warranty is limited to repair or replacement of the defective product or refund of the purchase price paid solely at the discretion of Spartan and provided such defective product is returned to Spartan freight prepaid and upon examination by Spartan such product is found defective. This warranty shall be void in the event that the product has been subject to misuse, misapplication, improper maintenance, modification or tampering. This warranty is expressed in lieu of all other warranties, expressed or implied from Spartan Scientific, Inc., representatives or employees.



8510 Foxwood Ct. • Youngstown, Ohio 44514
 PH: (855)629-4648 • Fax: (330)758-3314
 www.spartanscientific.com




8510 Foxwood Ct. • Youngstown, Ohio 44514
 PH: (855)629-4648 • Fax: (330)758-3314
 www.spartanscientific.com



Series 3825


Application and Installation Guide

Three-Way, Two Position, Normally Open

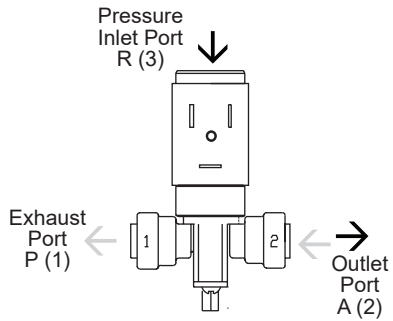


- Position 1) Coil De-energized. Pressure inlet port R (3) is open to outlet port A (2). Exhaust port P (1) is blocked.
- Position 2) Coil Energized. Pressure inlet port R (3) is blocked, outlet port A (2) is connected to exhaust port P (1).

Three-Way, Two Position, Mixing Function

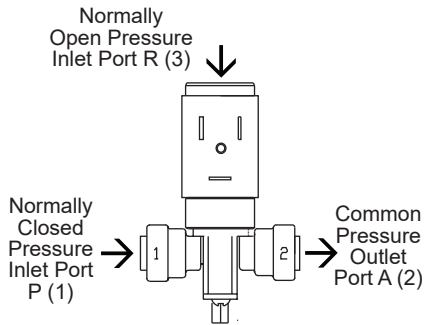

- Position 1) Coil De-energized. Normally open inlet R (3) connected to outlet port A (2). Port P (1) is blocked.
- Position 2) Coil Energized. Pressure port P (1) is connected to outlet port A (2). Port R (3) is blocked.

Three-Way, Two Position, Diverter Function

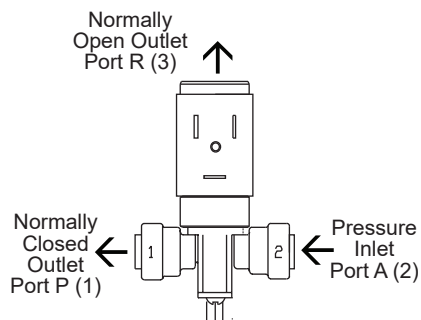

- Position 1) Coil De-energized. Pressure inlet port A (2) is connected to normally open outlet port R (3) and normally closed outlet port P (1) is blocked.
- Position 2) Coil Energized. Pressure inlet port A (2) diverts to normally closed outlet port P (1) and normally open port R (3) is blocked.




Series 3825

Application and Installation Guide


Electrical Hook-Up

Spade Style Coil

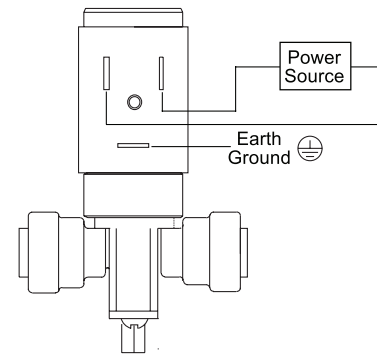

Power leads connected to verticle pins on all versions. Horizontal pin is earth ground on all versions.

Flying Lead Style Coil

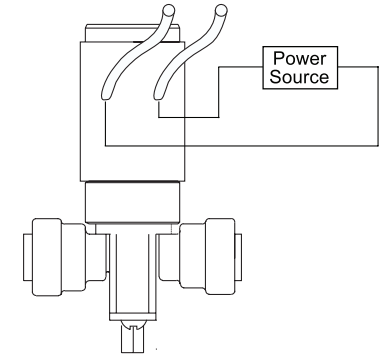

Power leads connected to coil flying leads. No earth ground present.

Mounting Hole / Passage Pattern

Series 3825

