

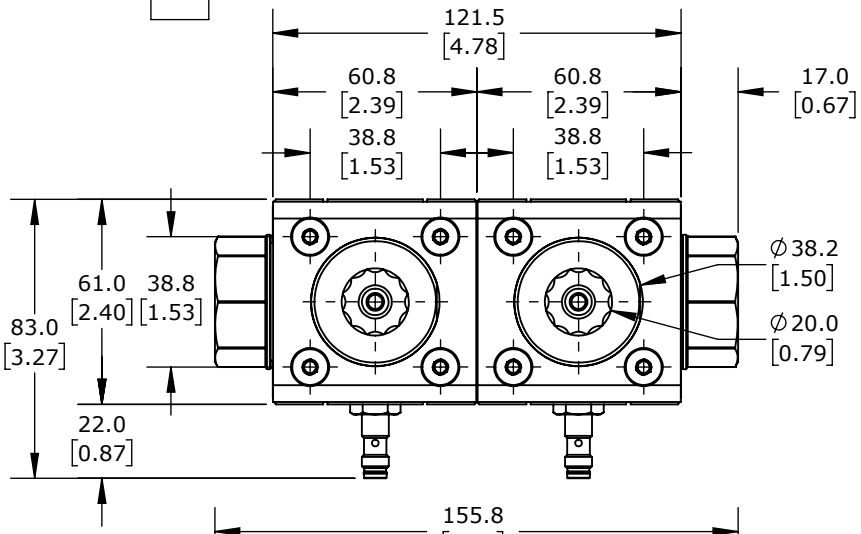



INSTALLATION INSTRUCTIONS:

1.) 3-PIN M8 CONNECTOR FOR SENSOR FEEDBACK
2.) CONNECT THE AIR TUBES TO THE VALVE USING PNEUMATIC FITTINGS
3.) MOUNT THE COIL ON THE PILOT AND TIGHTEN THE LOCKING NUT (MAX 1 Nm)
4.) MONOSTABLE MANUAL OPERATOR TO BE USED FOR ANY TESTS DURING INSTALLATION

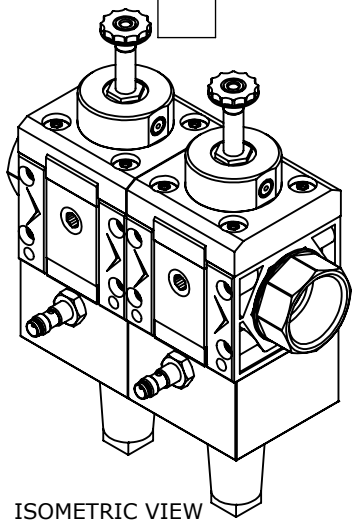

ISOMETRIC VIEW

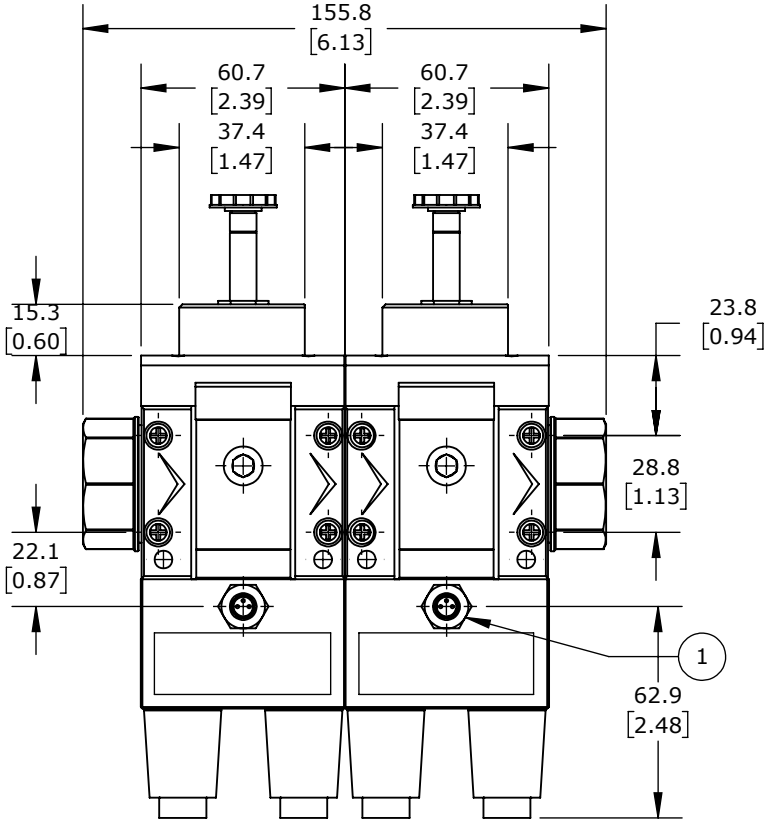

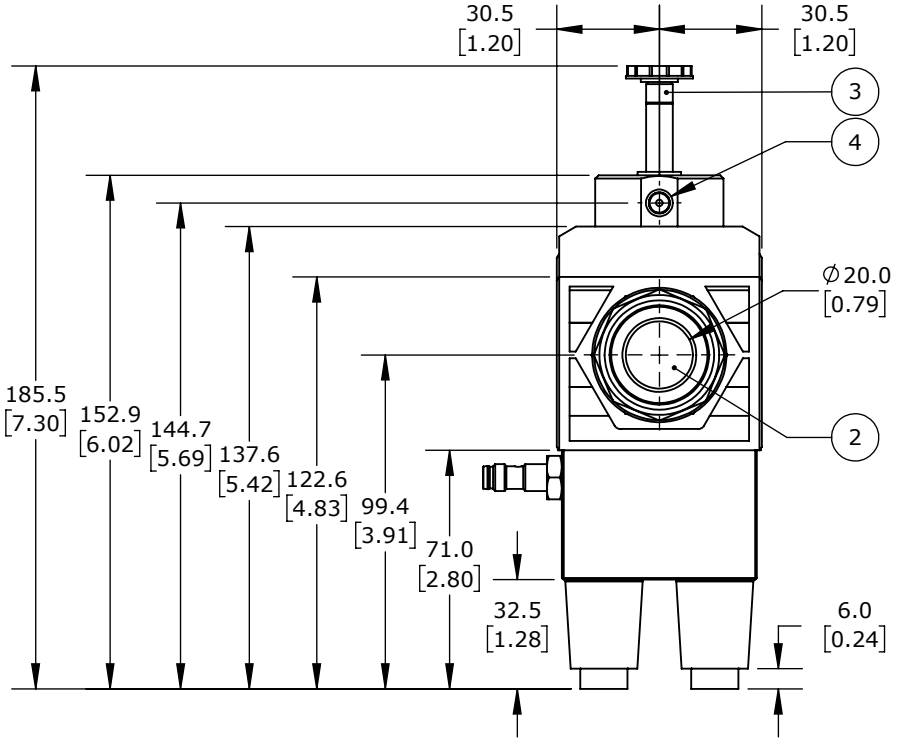

METAL WORK SAFETY RATED PNEUMATIC VALVES	5U26W726	AutomationDirect.com 1-800-633-0405

3rd ANGLE	NOT TO SCALE	PART DIMENSIONS MAY DIFFER SLIGHTLY DUE TO MANUFACTURER'S VARIANCES	METRIC UNITS USED FOR PART DESIGN	UNLESS OTHERWISE SPECIFIED UNITS ARE: **mm** **[inch]**	MODEL REV. --	DRAWING DATE 9/18/2026	SHEET 1 OF 1