wenglor
the innovative family

Operating Instructions

OPT2178

Laser Distance Sensor Time of Flight



EN

Translation of the original operating instructions
Subject to change without notice
Available as PDF file only
Version 1.0
www.wenglor.com

Table of Contents

1 General 4

1.1 Information Concerning these Instructions 4

1.2 Explanation of Symbols 4

1.3 Limitation of Liability 5

1.4 Copyrights 5

2 For Your Safety 6

2.1 Use for Intended Purpose 6

2.2 Use for Other than the Intended Purpose 6

2.3 Personnel Qualifications 6

2.4 Modification of Products 7

2.5 General Safety Precautions 7

2.6 Laser Warnings 7

2.7 Approvals and protection classes 7

3 Technical Data 9

3.1 General data 9

3.1.1 Light Spot Diameter 10

3.1.2 Switching distance 10

3.2 Warm-Up Phase 10

3.3 Mode-Dependent Data 11

3.4 Housing Dimensions 11

3.5 Control panel 12

3.6 Complementary Products 12

4 Transport and Storage 13

4.1 Transport 13

4.2 Storage 13

5 Installation and Electrical Connection 14

5.1 Installation 14

5.2 Electrical Connection 14

5.3 Diagnosis 15

5.4 Troubleshooting 16

6 Settings 17

6.1 Configuration with Push of Button / Teach-In 17

7 Settings via menu 18

8 Function Description 21

8.1 Sensor Functions 21

8.2 Display Functions 23

8.3 Input/Output Functions (I/O) 23

8.3.1 Pin Function 23

8.3.2 Output Functions 24

8.3.3 Input Functions 25

8.4 Switching Point Functions (SSC1/SSC2) 25

8.5 Condition Monitoring Functions 27

8.5.1 Status Message Function 27

8.5.2 Warning/Error Output Function 27

8.5.3 Speed Measurement 28

8.5.4 Signal Monitoring 29
8.5.5 Simulation Functions 29

9 Bluetooth 31

9.1 weCon Installation 31
9.2 Establishing Connection with Sensor 31
9.3 Using the weCon App 32

10 IO-Link 33

10.1 Parameters 33
10.2 Condition Monitoring/Process Data 33
10.2.1 Process Data In 33
10.2.2 Process Data Out 33
10.2.3 Events 33

11 Maintenance Instructions 35

12 Proper Disposal 36

13 Declarations of Conformity 37

1 General

1.1 Information Concerning these Instructions

- These instructions make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change. The current version can be found at www.automationdirect.com in the product's separate download area.



INFORMATION

The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

1.2 Explanation of Symbols

- Safety precautions and warnings are emphasized by means of symbols and signal words.
- Safe use of the product is only possible if these safety precautions and warnings are adhered to.

The safety precautions and warnings are laid out in accordance with the following principle:

SIGNAL WORD

Type and source of danger!

Possible consequences in the event that the hazard is disregarded.

→ Measures for averting the hazard.

The meanings of the signal words, as well as the scope of the associated hazards, are listed below:



⚠ DANGER

This signal word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.



⚠ WARNING

This signal word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.



⚠ CAUTION

This signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



NOTICE

This signal word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.

INFORMATION

Information draws attention to useful tips and suggestions, as well as information on efficient, error-free use.

1.3 Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art technology, as well as applicable standards and guidelines. Subject to change without notice.
- A valid declaration of conformity can be accessed at www.automationdirect.com in the product's separate download area.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as "wenglor") excludes all liability in the event of:
  - Non-compliance with the instructions
  - Use of the product for purposes other than those intended.
  - Use by untrained personnel.
  - Use of unapproved spare parts.
  - Unapproved modification of products.
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating instructions unless wenglor was verifiably aware of such errors at the point in time at which the operating instructions were prepared.

1.4 Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.

2 For Your Safety

2.1 Use for Intended Purpose

Laser Distance Sensors ToF

Laser distance sensors Time-of-Flight (ToF) work according to the principle of transit time measurement, which means that they cover large working ranges up to 10,000 mm, so that objects can be reliably detected even at great distances. The ToF sensors are extremely robust against interfering ambient light, which ensures reliable operation.

This Product Can Be Used in the Following Industry Sectors:

- Special-purpose mechanical engineering
- Heavy mechanical engineering
- Logistics
- Automotive industry
- Food industry
- Packaging industry
- Pharmaceuticals industry
- Plastics industry
- Woodworking industry
- Consumer goods industry
- Paper industry
- Electronics industry
- Glass industry
- Steel industry
- Aviation industry
- Chemicals industry
- Alternative energies
- Raw materials extraction

2.2 Use for Other than the Intended Purpose

- Not a safety component in accordance with 2006/42/EC (Machinery Directive).
- The product may be used only with accessories supplied or approved by wenglor, or in combination with approved products. A list of approved accessories and combination products can be found at www.automationdirect.com on the product detail page.



⚠ DANGER

Risk of personal injury or property damage in case of use for other than the intended purpose!

Use for other than the intended purpose may lead to hazardous situations.

→ Observe instructions regarding use for intended purpose.

2.3 Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel who use the product must have (permanent) access to the operating instructions.

⚠ DANGER

Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!

Personal injury and damage to equipment may occur.

→ Adequate training and qualification of personnel

2.4 Modification of Products

⚠ DANGER

Risk of personal injury or property damage if the product is modified!

Personal injury and damage to equipment may occur. Noncompliance may result in loss of the CE and/or UKCA mark and voiding of the warranty.

→ Modification of the product is not permitted

2.5 General Safety Precautions

INFORMATION

These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.

In the event of possible changes, the current version of the operating instructions can be found at www.automationdirect.com in the product's separate download area.

Read the operating instructions carefully before using the product.

Protect the sensor against contamination and mechanical influences.

2.6 Laser Warnings

LASER CLASS 1 EN 60825-1:2014+A11:2021	**Laser Class 1 (EN 60825-1)** Applicable standards and safety regulations must be observed.

2.7 Approvals and protection classes

c UL us LISTED
IND. CONT. EQ
72HL / E189727
For use in class 2 circuits

RoHS

UK CA

NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate this equipment.

3 Technical Data

3.1 General data

	OPT2178
Optical data	
Working Range	200...100000 mm
Setting Range	200...100000 mm
Reference Reflector/Reflector Foil	ZRAF08K01
Reproducibility maximum	20 mm*
Linearity Deviation	50 mm*
Switching Hysteresis	< 50 mm
Light Source	Laser (red)
Wavelength	660 nm
Laser Class (EN 60825-1)	1
Service Life (T = +25 °C)	100000 h
Max. Ambient Light	25000 Lux
Reflector required	yes
Electrical data	
Supply Voltage	18...30 V DC
Current Consumption (Ub = 24 V)	< 60 mA
Switching Frequency	25 Hz*
Switching Frequency (max.)	50 Hz*
Response Time	30 ms *
Response Time (min.)	15 ms *
Temperature Drift	< 0.4 mm/K
Temperature Range	-40...50 °C
Number of Switching Outputs	2
Switching Output Voltage Drop	< 2.5 V
Switching Output/Switching Current	100 mA
Short Circuit Protection	yes
Reverse Polarity Protection	yes
Overload Protection	yes
Interface	IO-Link V1.1.3
IO-Link transmission speed	COM3
Protection Class	III
FDA Accession Number	2412451-001
Mechanical data	
Setting Method	(OLED)/Bluetooth menu
Housing Material	Plastic, ABS
Optic Cover	Plastic, PMMA
Degree of Protection	IP67 IP68
Connection	M12 × 1; 5-pin
Safety technology data	
MTTFd (EN ISO 13849-1)	369.13 a
Output functions	
Output	PNP
Circuit	NO

	OPT2178
General data	
Scope of delivery	24 × BEF-SET-14 mounting sets 24 × Z1PE002 mounting sets 24 × initial start-up instructions 24 × sensors
Contains FCC ID: 2A3OLDC1392	x

* Depending on the mode, see chapter Mode-dependent data [▶ 11]

3.1.1 Light Spot Diameter

Working Distance	0 m	50 m	100 m
Light Spot Diameter	5 mm	< 100 mm	< 200 mm

3.1.2 Switching distance


The achievable switching distance depends on the reflector used. The nominal switching distance is achieved with the reference reflector specified in the technical data. Please refer to the following table for the achievable ranges with other reflectors:

	OPT2178
RQ100BA	0.2...50 m
RE6151BM	0.2...20 m
RF505	0.2...75 m
RF508	0.2...25 m
RF258	0.2...20 m
RF100100	0.2...50 m
RF5050	0.2...25 m
ZRAF07K01	0.2...75 m
ZRAF08K01	0.2...100 m
ZRDF03K01	0.2...25 m
ZRDF10K01	0.2...50 m

3.2 Warm-Up Phase

The warm-up phase lasts 6 minutes. The switch-on drift during this time is shown in the following diagram.

Switching On Drift

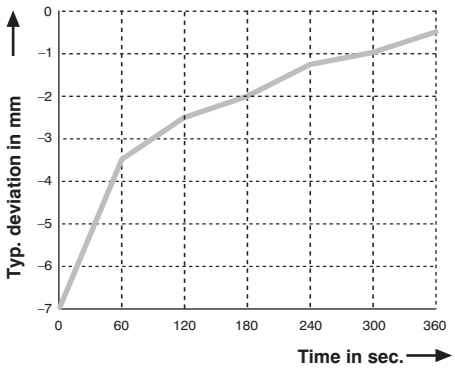

NOTICE


Specifications correspond to measured value without load. With the analog variants, specifications may differ due to the load on the analog output.

3.3 Mode-Dependent Data

Some technical data depend on the mode set. Depending on the setting, the following data are obtained:

Mode	Working range	Switching frequency	Response time	Maximum reproducibility	Linearity deviation	Detection with weak signals
Speed	200...100,000 mm	50 Hz	15 ms	30 mm	50 mm	+
Precision (default)	200...100,000 mm	25 Hz	30 ms	20 mm	50 mm	++
Precision Plus	200...100,000 mm	12.5 Hz	60 ms	20 mm	50 mm	+++

3.4 Housing Dimensions

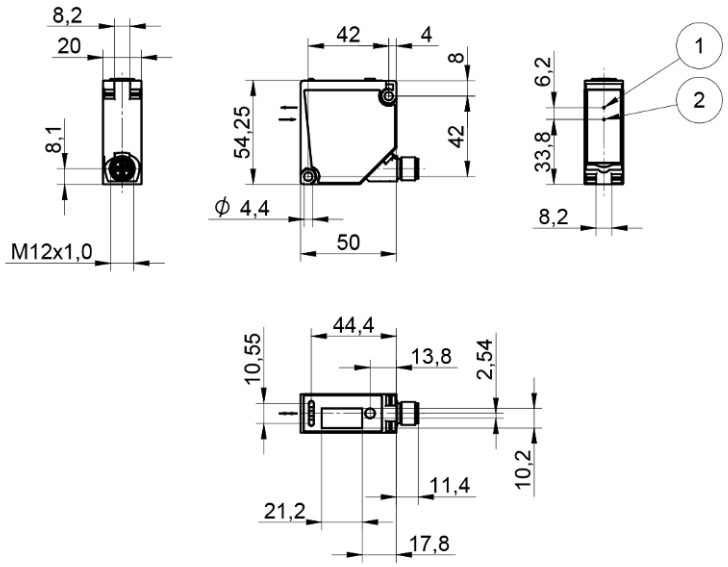

(1) Transmitter Diode


(2) Receiver Diode

Screw M4 = 0.5 Nm

Dimensions in mm (1 mm = 0.03937 inch)

3.5 Control panel

X7



68 = Power LED
5a = Switching Status Indicator, O1
6a = Switching Status Indicator, O2
60 = display
20 = Enter key

3.6 Complementary Products

wenglor offers you the right connection and mounting technology as well as other accessories for your product. You can find this at www.automationdirect.com on the product details page at the bottom.

4 Transport and Storage

4.1 Transport

Upon receipt of shipment, the goods must be inspected for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device, making reference to damage in transit.

4.2 Storage

The following points must be taken into consideration with regard to storage:

- Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- Protect the product against mechanical impacts.
- Protect the product against exposure to direct sunlight.



NOTICE

Risk of property damage in case of improper storage!

The product may be damaged.

→ Storage instructions must be complied with.

5 Installation and Electrical Connection

5.1 Installation

- Protect the product from contamination during installation.
- Relevant electrical and mechanical regulations, standards, and safety rules must be observed.
- Protect the product from mechanical impact.
- Ensure that the sensor is mechanically secure.
- Torque values must be observed (see section Technical Data [▶ 9]).
- Insert the supplied spacer sleeves into the pockets provided on the side facing the mounting surface.
- Mount the sensor using M4 screws through the mounting hole.
- Do not exceed the maximum tightening torque of 0.5 Nm.





NOTICE

Risk of property damage in case of improper installation!

The product may be damaged!

→ Comply with installation instructions.

⚠ CAUTION

Risk of personal injury or property damage during installation!

Personal injury and damage to the product may occur.

→ Ensure a safe installation environment.

5.2 Electrical Connection


- Wire the sensor according to the connection diagram.
- Switch on the supply voltage (see section Technical Data [▶ 9]).
- If using IO-Link, connect the sensor to 18...30 V DC.
- If not using IO-Link, connect the sensor to 10...30 V DC.
- The blue supply voltage indicator lights up.
- Adjust the sensor so that the light spot hits the reflector or reflector foil.

⚠ DANGER


Risk of personal injury or property damage due to electric current.

Live parts may cause damage to persons and equipment.

→ The electrical device may only be connected by qualified personnel.

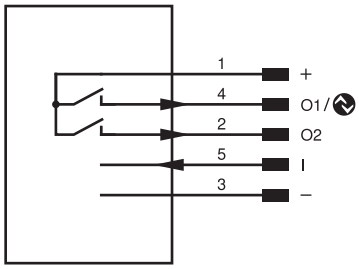

Pin	Pin function	Polarity	Circuit
1	Supply voltage +		
2	Switching output	PNP	NO
3	Supply voltage 0 V		
4	Switching output	PNP	NO
5	Input		High active

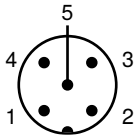

1	Brown	2	White
3	Blue	4	Black
5	Gray		

5.3 Diagnosis

Display	Status	Meaning
Power LED P		Sensor ready
		No voltage supply available
		Warning The LEDs for switching status indicator O1, O2, and analog display AO remain in operation
		Error The LEDs for switching status indicator O1, O2, and analog display AO are not functioning
		Localization Localization function active
		Sensor ready for Bluetooth connection
Switching status indicator O1, O2		Switching outputs active
		Switching outputs not active

= not lit

= permanently lit

= flashing

5.4 Troubleshooting

Error	Possible cause	Elimination
Warning	Signal warning	• Reduce distance sensor – reflector/reflector foil • Adjust angle sensor – reflector/reflector foil
	Undervoltage	• Increase voltage supply to min. 18 V DC
Error	Short circuit	• Check the electrical wiring and eliminate the short circuit
	Temperature error	• Disconnect the sensor from the supply voltage and allow it to cool • Mount the mounting bracket as a heat sink • Reduce load on outputs
	Device error	• Disconnect the sensor from the supply voltage and restart it • Replace the sensor

Via IO-Link, it is possible to identify the respective causes precisely by means of condition monitoring. Further diagnosis functions and status messages are also possible. See section Condition Monitoring/Process Data [▶ 33].

INFORMATION

Behavior in case of error:

1. Shut down the machine.
2. Analyze and rectify the cause of the error using the diagnostic information.
3. If the error cannot be rectified, contact wenglor support.
4. Do not operate the machine if the error behavior is unclear.
5. The machine must be taken out of service if the error cannot be clearly identified or reliably rectified.

⚠ DANGER

Risk of personal injury or property damage if not observed!

The safety function of the system is disabled. Damage to personnel and equipment.

→ Behavior in case of error as specified.

6 Settings

The sensor can be set via teach-in, IO-Link, and weCon. The various setting options are described below.


6.1 Configuration with Push of Button / Teach-In

This section describes the settings that can be configured directly on the sensor using the button.

Switching output

Teach-in

Various teach-in modes are available. These can be set via IO-Link (see section Parameters [▶ 33]). The default setting is foreground teach-in.

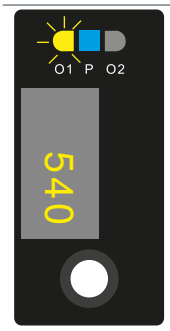

Teach-in for O1

1. Adjust the sensor so that the light spot is on the reflector or reflector foil.
2. Press and hold the teach-in key or enter button for 2 seconds until LED O1 starts flashing.
3. Release the teach-in key or Enter button.
4. The distance is taught in and LED O1 flashes twice briefly to confirm successful teaching.



Teach-in for O2

1. Adjust the sensor so that the light spot is on the reflector or reflector foil.
2. Press and hold the teach-in key or enter button for 5 seconds until LED O2 starts flashing.
3. Release the teach-in key or Enter button.
4. The distance is taught in and the O2 LED flashes twice briefly to confirm that the teaching-in process was successful.

INFORMATION

When teaching in, if there is no reflector/reflector foil or the reflector/reflector foil is too far from the sensor, the switching distance is set to the end of the setting range. The Power LED lights up yellow, and the switching status LEDs for the respective switching output flash twice. The same applies if the reflector/reflector foil is too close; here, the switching distance is set to the start of the setting range. If there is an error during teach-in preventing it from being carried out, this is indicated by a red LED.

7 Settings via menu

This section describes the settings that can be configured via the integrated OLED display. The menu is controlled by pressing the Enter button.



The currently measured distance is shown in display mode.

Menu control


Press the Enter button to navigate through the menu and make settings.

Short press in display mode	Jump to the menu
Short keystroke	Next menu item
Press button for 2 sec.	Selection
Press button for 5 sec.	Exit the menu, display mode

Menu structure

The menu is divided into 2 areas. Various sensor status messages are displayed in the Info menu. The Info menu is also used to open the main menu where the settings can be made.

Info menu

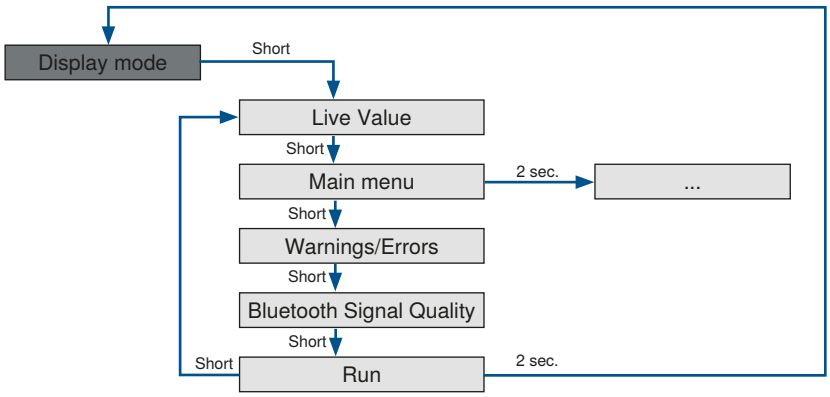


Live value		This display is shown after jumping to the Info menu. The currently measured distance is displayed in combination with the measured value unit.
Main menu		Jump to the main menu to make settings

Warnings/Errors		Warnings or errors are displayed in this view
Bluetooth signal quality		The Bluetooth signal quality is displayed in this view.
Display mode		Jump back to the display mode

Main menu

The respective functions are described in the section Parameters [▶ 33].

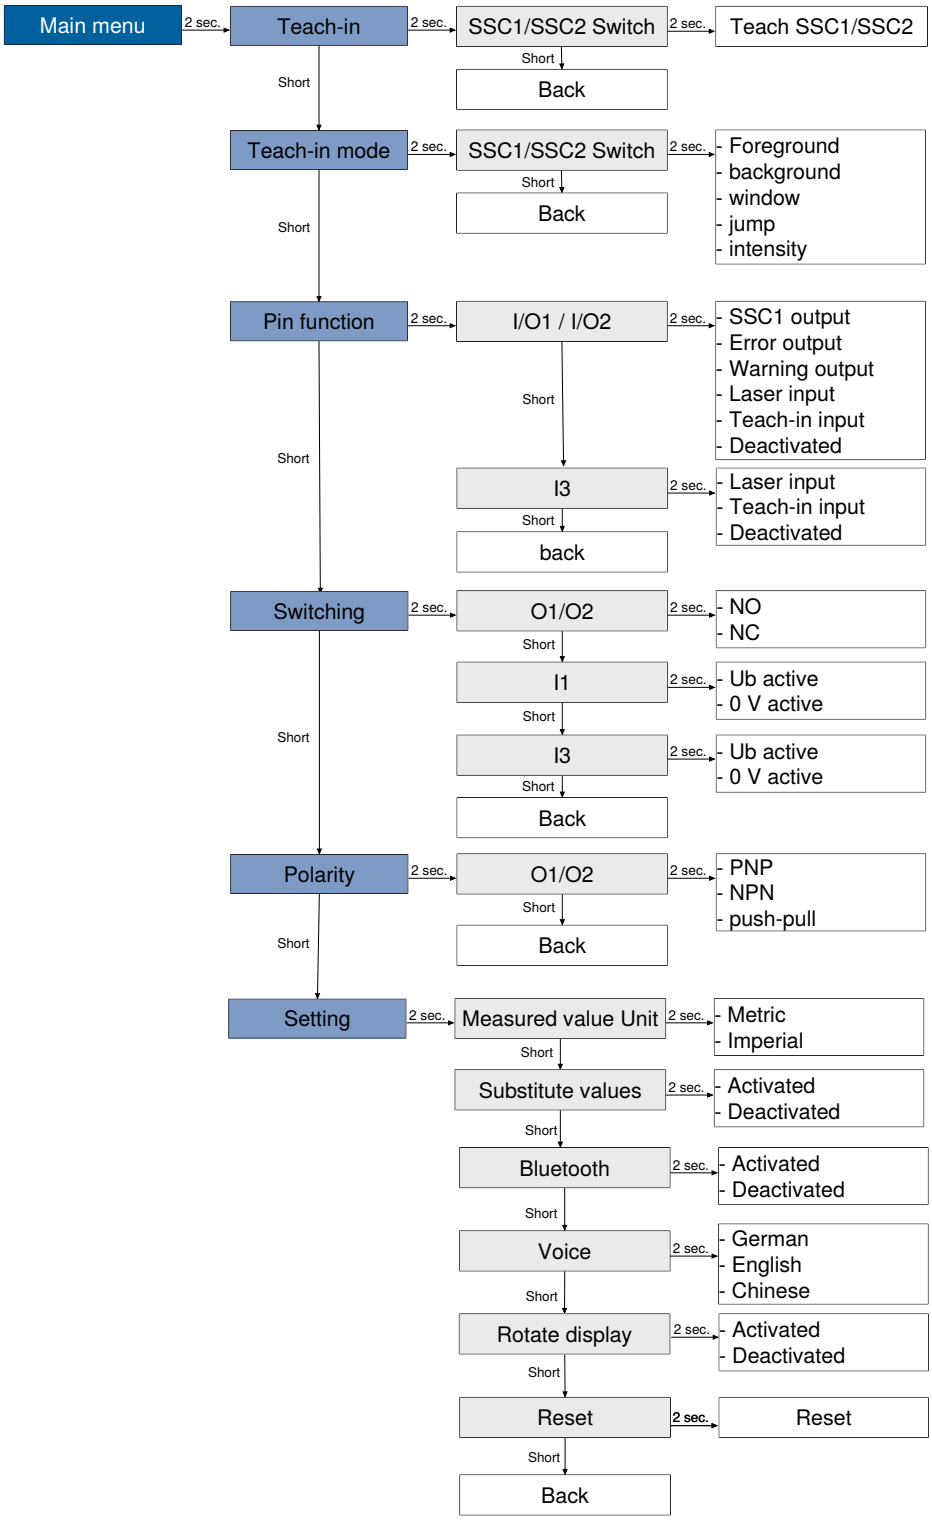

8 Function Description

The functions described in the following section can be adjusted via wTeach or IODD per IO-Link, as well as via the weCon app per Bluetooth, and the basic functions via the Display menu.

8.1 Sensor Functions

Function	Possible settings	Default
Measuring mode	**Speed** The sensor is optimized for fast applications. **Precision** The sensor is optimized for high-accuracy applications. **Precision Plus** The sensor is optimized for high-accuracy applications and even higher sensitivity to low signals. **Note!** The technical data resulting from the various modes are specified in Mode-Dependent Data [▶ 11].	Precision
Detection mode	**First Object** The signal reflected by an object that is within the working range and closest to the sensor is used. **Last Object** The signal reflected by an object that is within the working range and farthest from the sensor is used. **Highest Intensity** The signal with the highest signal strength is used. **Note!** If an object is hidden by this function, a blind spot directly behind the object results. The sensor cannot detect any objects within this blind spot. The size of the blind spot depends on the reflectance of the interfering object.	First object
Distance range	A distance range in which signals are to be evaluated can be defined within the working range. Signals outside the set distance range are ignored and are not included in the signal evaluation. This means that ranges for which no usable signals are expected can be completely hidden. This function can be used to suppress interfering signals, such as those produced by a glass disk, for instance. Depending on the set mode and the resulting working range, the distance range can be set within it. **Min. distance: working range** **Max. distance: working range** **Note!** • Objects outside the set distance range are evaluated as “No signal”. • If a distance range is set, a blind spot directly behind this range results. The sensor cannot detect any objects within the blind spot. The size of the blind spot depends on the reflectance of the interfering objects in the hidden area.	Setting range

<table>
<tr><td>Interference filter</td><td>The interference filter can be used to increase measurement reliability in the case of brief interferences in the measured section. Interferences such as rain, snow or chips in the air generate brief signals, which can result in incorrect measurements. A higher filter level allows the interfering signals to be ignored for a defined period. If the distance changes suddenly, the response time is extended. This extension of the response time depends on the filter level and the mode used. If the distance changes continuously, the response time remains unchanged when the filter is activated.
<table>
<tr><td></td><td colspan="3">Mode</td></tr>
<tr><td>Filter</td><td>Speed</td><td>Precision</td><td>Precision Plus</td></tr>
<tr><td>Off</td><td>-</td><td>-</td><td>-</td></tr>
<tr><td>1</td><td>2 ms</td><td>10 ms</td><td>20 ms</td></tr>
<tr><td>2</td><td>4 ms</td><td>20 ms</td><td>40 ms</td></tr>
<tr><td>3</td><td>6 ms</td><td>30 ms</td><td>60 ms</td></tr>
<tr><td>4</td><td>10 ms</td><td>50 ms</td><td>100 ms</td></tr>
<tr><td>5</td><td>20 ms</td><td>100 ms</td><td>200 ms</td></tr>
<tr><td>6</td><td>40 ms</td><td>200 ms</td><td>400 ms</td></tr>
<tr><td>7</td><td>60 ms</td><td>300 ms</td><td>600 ms</td></tr>
<tr><td>8</td><td>100 ms</td><td>500 ms</td><td>1,000 ms</td></tr>
<tr><td>9</td><td>200 ms</td><td>1,000 ms</td><td>2,000 ms</td></tr>
</table></td><td>Off</td></tr>
<tr><td>Emitted light</td><td>The sensor’s laser can be switched on or off.
On
Laser on
Off
Laser off
The sensor no longer supplies a measured value.
Note!
• If an input is set as a laser-off input, the emitted light can also be switched on and off via the input.
• If the laser is switched off, the sensor behavior corresponds to the status “No signal.”</td><td>On</td></tr>
<tr><td>Localization</td><td>The sensor's supply voltage indicator can be set to flash green. This makes it easy to locate the sensor in a system.
On
The supply voltage for the LED flashes green.
Off
LEDs in normal operation.</td><td>Off</td></tr>
<tr><td>Measured value unit</td><td>The measured distance can be read out in millimeters or inches.
Millimeter
Distance values read out in mm
Inch
Distance values read out in 1/10 inch</td><td>Millimeter</td></tr>
<tr><td>Bluetooth</td><td>The Bluetooth interface can be switched on/off.
On
Off</td><td>On</td></tr>
<tr><td>Bluetooth
Password
Function</td><td>The Bluetooth function can be password protected to prevent unauthorized access.
On</td><td>Off</td></tr>
</table>

	Off **Note!** Only the Bluetooth function is protected. Communication is possible via IO-Link or the OLED menu at any time.	
Bluetooth Password	Enter a Bluetooth password. To access the device using the Bluetooth app, enter this password in the app. **Note!** If the password has been forgotten, a new password can be assigned via IO-Link.	–

8.2 Display Functions

Function	Possible settings	Default
Language	Setting the menu language **German** **English** **Chinese**	English
Rotate display	Rotate display 180° **On** **Off**	Off

8.3 Input/Output Functions (I/O)

8.3.1 Pin Function

The pin function is used to define the function of pins I/O1, I/O2, and I3, as these can be used for different functions.

Pin	Possible settings	Default
I/O1	**Switching output** The switching point SSC1 is assigned to the switching output. **Error output** The error output switches when one of the assigned errors occurs, see table Status messages [▶ 28]. **Warning output** The warning output switches when one of the assigned warnings occurs, see Status Messages [▶ 28] table. **Laser off input** For explanation, see I3 **Teach-in input** For explanation, see I3 **Speed measurement reset input** See I3 for explanation **Deactivated** The pin is disabled.	Switching output
I/O2	**switching output** The switching point SSC2 is assigned to the switching output.	switching output

Pin	Possible settings	Default
	Antivalent switching output The switching output switches antivalent to switching output O1. **error output** The error output switches when one of the assigned errors occurs, see table Status messages [▶ 28]. **Warning output** The warning output switches when one of the assigned warnings occurs, see Status Messages [▶ 28] table. **Laser off input** For explanation, see I3 **teach-in input** For explanation, see I3 **Speed measurement reset input** See I3 for explanation **Deactivated** The pin is deactivated.	
I3	**Laser off input** The sensor's transmission light is deactivated as long as the input is activated. The sensor then does not provide a measured value and sets the status to "No signal." **teach-in input** teach-in The outputs can be set using the same procedure as with the teach-in key (see section Configuration with Push of Button / Teach-In [▶ 17]). An activated input corresponds to a pressed teach-in key. **Locking** If the teach-in input is permanently set to 18...30 V DC, the teach-in key is locked and protected against unintentional adjustment as long as the input signal is present. **Speed measurement Reset input** The "Speed" status message is reset. **Deactivated** The pin is deactivated.	Laser off input

8.3.2 Output Functions

The output functions are used to set the physical outputs.

Digital Outputs

Function	Possible settings	Default
Polarity	**PNP** **NPN** **Push-pull**	PNP
Circuit	**NO** Light switching (Normally Open)	NO

Function	Possible settings	Default
	The output is high when the condition has been satisfied, depending on settings (switching point, warning, error). **NC** Dark switching (normally closed) The output is low when the condition has been fulfilled depending on the setting (switching point, warning, error).	
On-delay	**0…10,000 ms**	0 ms
Off-delay	**0…10,000 ms**	0 ms

8.3.3 Input Functions



The input functions are used to set the physical inputs.



Function	Possible settings	Default
Input mode	**Supply voltage active** Function is triggered as soon as supply voltage is applied to the input. **Supply voltage inactive** Function is triggered as soon as 0 V is applied to the input or the input is opened.	Supply voltage active

8.4 Switching Point Functions (SSC1/SSC2)

The switching point functions are used to set the two switching points, SSC1 and SSC2.

SSC1 is assigned to output O1 and SSC2 is assigned to output O2.

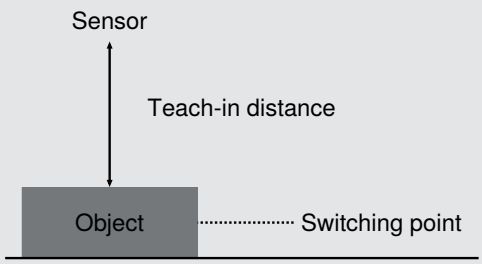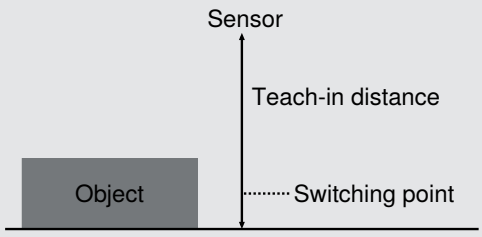Function	Possible settings	Default
Teach-in	Starts the teach-in process.	
Teach-in Mode	**Foreground Teach-In**  **Background Teach-In**  **Window Teach-In**	Foreground teach-in

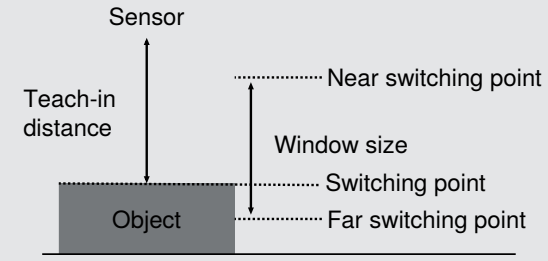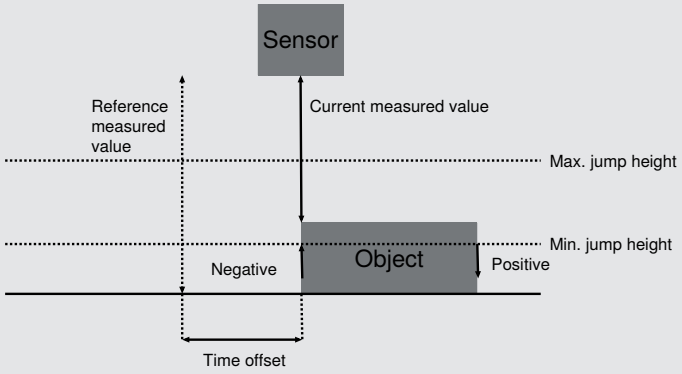Function	Possible settings	Default
	 **Jump Detection** In this mode, there is no switch to an absolute measured value, but rather to a measured value jump occurring between 2 measurements. 	
Switching point	100...100,000 mm **Note** If a distance range has been set, the switching point can only be set within the set distance range.	20,000 mm
Hysteresis	Hysteresis is the difference between the switch-on and switch-off point. 5...1,000 mm	15 mm
Window switching point close	In teach-in mode window teach-in Distance from the set window center to the switching point of the window close to the sensor. The window can be set so that it extends from the minimum setting range to the maximum setting range of the sensor. The minimum and maximum possible settings result from the respective set window center.	
Window switching point far	In teach-in mode window teach-in Distance from the set window center to the switching point of the window far from the sensor. The window can be set so that it extends from the minimum setting range to the maximum setting range of the sensor. The minimum and maximum possible settings result from the respective window center setting.	
Jump height min	In teach-in mode Jump detection The minimum jump height defines the jump in the measured value at which a jump event is to be detected. In the "Automatic" setting, the sensor calculates the smallest possible jump independently. 0 = Automatic 10...1,000 mm	50

Function	Possible settings	Default
Maximum jump height	In teach-in mode, jump detection The max. jump height defines the maximum jump in the measured value at which a jump event is to be detected. In the "No restriction" setting, there is no limit to the max. jump height. A change from a valid measured value to "No measured value" is evaluated as a negative jump. 4294967295 = No restriction 0...100.000 mm	1,000 mm
Jump direction	In teach-in mode, jump detection **Positive** A jump is detected when the measured value jumps to a higher value, i.e. the contrast value becomes brighter. **Negative** A jump is detected when the measured value jumps to a lower value, i.e. the contrast value becomes darker. **Both** A jump is detected for both positive and negative.	Negative
Cycle offset	In teach-in mode Jump detection The cycle offset specifies the time-shifted reference measured value with which the current measured value is to be compared in order to detect the jump. 1...64 Cycles	10
Jump pulse duration	In teach-in mode Jump detection **0 = hold** The output remains active until the next jump in the opposite direction is detected. 1...1.000 ms When a jump is detected, the output is activated with the corresponding pulse length.	0

8.5 Condition Monitoring Functions

8.5.1 Status Message Function

The sensor provides various status messages. Due to the process data structure, four status messages can be transmitted as individual process data.

These parameters can be used to set the status messages that are transmitted via the process data.

Function	Possible settings	Default
Message 1	See table "Status Messages" [▶ 28]	Warning signal
Message 2	See table "Status Messages" [▶ 28]	Optics dirty
Message 3	See table "Status Messages" [▶ 28]	Ambient light
Message 4	See table "Status Messages" [▶ 28]	Temperature too high

8.5.2 Warning/Error Output Function

The status messages used to trigger the collective message can be defined for the warning output and the error output respectively. The status messages are OR-linked so that the output is activated when one of the defined status messages is activated.

Function	Possible settings	Default
Warning output	See table “Status Messages”	Signal warning, optics dirty, ambient light, temperature too high, temperature too low, undervoltage, interference in the working range
Error output	See table “Status Messages”	Object too close, object too far, no signal, device error, over-temperature, short circuit

Status Messages

Warning	
Undervoltage	The supply voltage is too low.
Signal warning	The signal received is too low.
Contaminated optics	The sensor detects when the optic cover is dirty, and the signal deteriorates as a result
Ambient light	Object detection is impeded by ambient light.
Interference in the working range	When using the interference filter, the sensor detects whether a brief interfering event has occurred in the measuring range. This could be chips, water droplets, etc., for instance.
Temperature too high	The sensor’s internal temperature is high.
Temperature too low	The sensor’s internal temperature is low.
Device warning	An internal device error has occurred.
Emitted light off	The sensor’s emitted light is switched off.

Error	
Short circuit	A short circuit has occurred on at least one pin.
No signal	The sensor is not receiving a signal.
Object too close	The object is below the setting range or the set measuring range.
Object too far	The object is above the setting range or the set measuring range.
Over-temperature	The over-temperature has been exceeded. To protect the emitting unit, the laser is switched off.
Device error	A hardware error has occurred. For safety reasons, the emitted light is switched off.

Speed measurement	
Overspeed detected	The sensor has detected a speed above the set threshold via the internal speed measurement.

8.5.3 Speed Measurement

The sensor has an integrated speed measurement function. This detects the speed of objects approaching or moving axially away from the sensor.

Function	Possible settings	Default setting
Speed measurement	**On** Speed measurement activated **Off** Speed measurement deactivated	On

Function	Possible settings	Default setting
	A status message is triggered if the set threshold is exceeded. This can be linked to the warning or error output and thus trigger a corresponding switching signal (see section Warning/Error Output Function [▶ 27]).	
Speed Threshold	The threshold defines how sensitively the speed measurement reacts **0...30.000**	50
Speed filters	**0...300**	300
Speed hysteresis	**1...60.000**	10
Approach direction	The direction of approach defines the direction of movement of the object in relation to the sensor at which the set threshold triggers the status message. **Approach** **Move away** **Both**	Both

8.5.4 Signal Monitoring

The sensor can detect up to four objects in its working range. A distance and signal strength are determined for each of these objects.

Function	Possible settings	Default
Signal monitoring	**On** Signal observation activated **Off** Signal observation deactivated	Off
Object detection status	Indicates the object used for signal evaluation. **Object 1–4**	—
Object distance	Indicates the respective distance from a maximum of four objects. 50...100,000 mm	—
Object signal	Indicates the respective signal strength of a maximum of four objects. **1…1,000**	—

8.5.5 Simulation Functions

This function simulates the behavior of the sensor regardless of its current status and measured value. This allows you to check whether a system in which the sensor is integrated responds correctly to the data supplied by the sensor and processes it accordingly.

If a measured value is specified, the sensor behaves as if the specified measured value corresponds to the actual measured value. This means that the behavior of the outputs and status messages is simulated according to the specified measured value.

In addition, the individual outputs and status messages can be simulated separately from the measured value.

Function	Possible settings	Default
Simulation mode	**On** **Off**	Off
Test measured value	Current measured value min...max. measuring range	Current measured value
SSC1 Test	According to the measured value	According to measured value

Function	Possible settings	Default
	On **Off**	
SSC2 Test	According to the measured value **On** **Off**	According to measured value
Status messages test	Tests the individual status messages according to the measured value **On** **Off**	According to measured value

INFORMATION

The O1 output is used for IO-Link communication in this function and cannot be simulated.
Simulation mode is automatically terminated as soon as the voltage supply is interrupted.

9 Bluetooth

These sensors have an integrated Bluetooth interface. This interface can be used to configure and parameterize devices using a smartphone and the wenglor “weCon” app. In addition, process data is sent to the app, where it is displayed in a clear, concise manner.

9.1 weCon Installation

The wenglor app can be downloaded free of charge from the Google Play Store and Apple App Store. Download the app and follow the installation instructions.

GET IT ON Google Play

Download on the App Store

Scan the code below to access the wenglor app directly.

9.2 Establishing Connection with Sensor


Open the weCon app on your smartphone.

When the app is opened, all wenglor sensors with Bluetooth interface and within range are set to Pairing mode.

This mode is indicated by the flashing blue LED on the sensors.

Pairing mode is used to pair the app with a corresponding sensor.

Once the app is opened, a list of all sensors within range is shown.

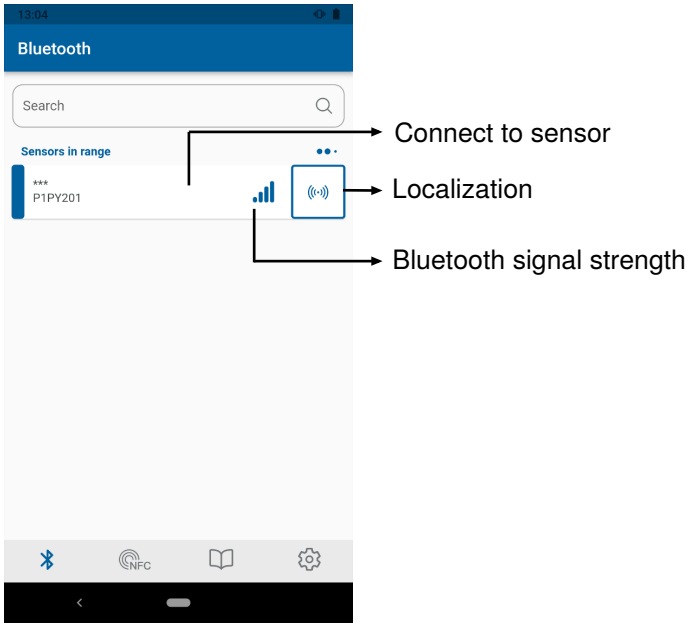


If too many sensors of the same type are fitted within the Bluetooth range, the sensor’s supply voltage LEDs can be switched to flashing green by pressing the “Localization” button. This simplifies identification.

Press the “Back” button to open the sensor list again. Pressing the “Connect with sensor” button establishes a connection to the sensor and opens the user interface.


The blue LED will continuously illuminate from now on, indicating that the sensor is paired, and Pairing mode will deactivate.

9.3 Using the weCon App

The sensor parameters are set in the "Configuration" tab. A detailed description of the individual parameters can be found in the section Function Description [▶ 21].

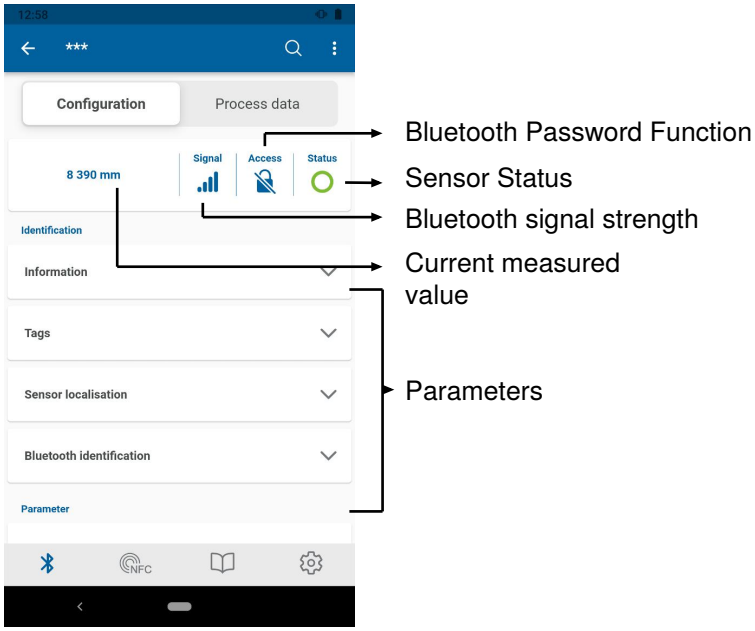

The current measured value is displayed graphically in a diagram over time in the "Process Data" tab. The scaling of the axes can be adjusted in the diagram settings.

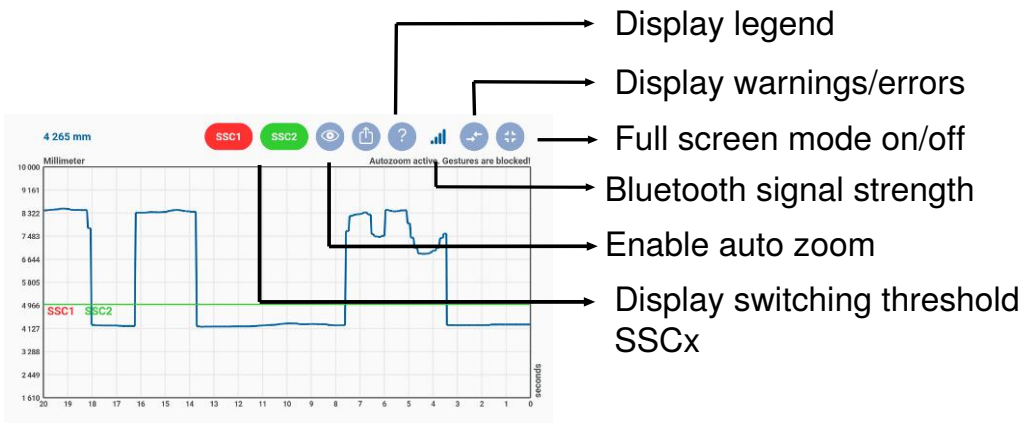

NOTICE

The Bluetooth range is approximately 10 m. If the sensor is encapsulated in a system or installed close to obstacles, the range may be reduced accordingly.

10 IO-Link

10.1 Parameters

The parameters that can be configured via IO-Link are given in the functional description in the section Function description [▶ 21].

10.2 Condition Monitoring/Process Data

The data described in the following section can be read or written cyclically via IO-Link/process data.

10.2.1 Process Data In

Data	Meaning
Measured value	Measured distance in mm or 1/10 inch As the sensor cannot determine a measured value in the following error cases, substitute values are read out: No signal: 0x7FFC / 32764 mm Object too close: 0x8008 / –32760 mm Object too far: 0x7FF8 / 32760 mm
Scale	Scaling of the measured value to the base length unit; –3 corresponds to mm.
SSC1	Switching point 1
SSC2	Switching point 2
Warning	Collective warning in the event of one of the warning status messages (see table “Status messages”) in the error output function)
Error	Collective warning in the event of one of the error status messages (see table “Status messages”) in error output function.
Message 1	Status message 1 read out see Status Message Function [▶ 27]
Message 2	Status message 2 read out see Status Message Function [▶ 27]
Message 3	Status message 3 read out see Status Message Function [▶ 27]
Message 4	Status message 4 read out see Status Message Function [▶ 27]

10.2.2 Process Data Out

Data	Meaning
Emitted light	Transmit signal on/off
Localization	Sensor flashes for easy sensor location
Teach-in SSC1	Starts the teach-in process for SSC1
Teach-in SSC2	Starts the teach-in process for SSC2

10.2.3 Events

Events are diagnostic information that is standardized by IO-Link and exchanged between the IO-Link master and the device. The following events are supported:

Name	Event code	Type	Specification
Maintenance necessary: Clean	0x8C40	Notification	IO-Link
Device error – unknown error	0x1000	Error	IO-Link
Short circuit – check installation	0x7710	Error	IO-Link
Device temperature too high: Remove heat source	0x4210	Warning	IO-Link

Name	Event code	Type	Specification
Device temperature too low: Isolate device	0x4220	Warning	IO-Link
Temperature error: Overload	0x4000	Error	IO-Link
Supply voltage too low – check tolerances	0x5111	Warning	IO-Link
Speed measurement	0x1801	Warning	wenglor-specific

11 Maintenance Instructions



NOTICE

This wenglor product is maintenance-free.

Cleaning and inspection of the plug connections at regular intervals are advisable.

Do not clean the product with solvents or cleaning agents that could damage the product.

The product must be protected against contamination during initial start-up.

12 Proper Disposal

wenglor sensoric GmbH does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.

13 Declarations of Conformity

Declarations of conformity can be found on our website at www.automationdirect.com in the product's separate download area.