

# Monitor Holder with Lock Part# 162897 Assembly Procedure



Copyright 2023, Automationdirect.com Incorporated/  
All Rights Reserved Worldwide

## Hardware Included

1x Low Profile Socket Head Cap Screw  
M8-1.25 x 14mm

2X – Low Profile Socket Head Cap Screw  
M8-1.25 x 16mm

1X – Self-tapping Screw S7 x 25mm

1X – Low Profile Socket Head Cap Screw  
M8-1.25 x 25mm

4X – 1X- Roll-in T-slot nut, slot size 10, series 45

4X – Hexagon Nut M4-0.7

1X – Hexagon Nut M8-1.25


4X – Socket Head Cap Screw M4-0.7 x 12mm

4X – Flat Washer M4


4X – 8/10 Zinc Slot Key

2X – 8/10 Plastic Slot Key

1X – Monitor Holder

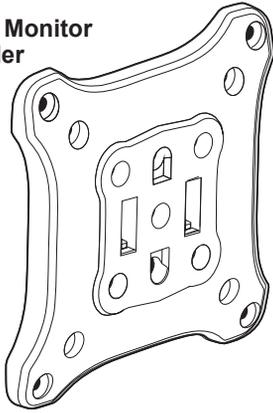


1X – Pivot joint 45 with Locking Lever

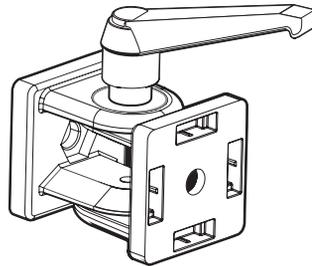


### Step 1

Insert 2X 8/10 Plastic Slot Keys into Monitor Holder.

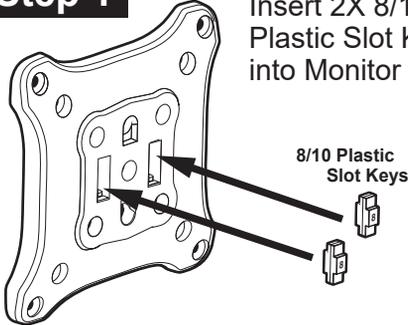


### Step 2

Insert 8/10 Zinc Slot Keys into Pivot Joint.

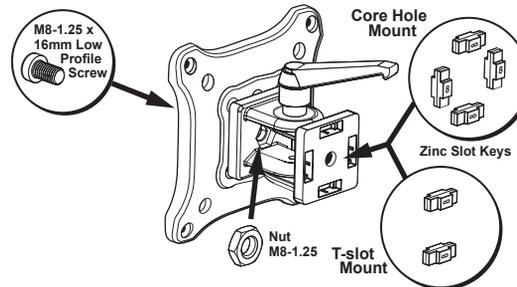


**VESA Mounting Standard**  
 100 X 100mm  
 75 X 75mm  
 4X M4-0.7 Threaded Holes

### Step 3 – Side Mount

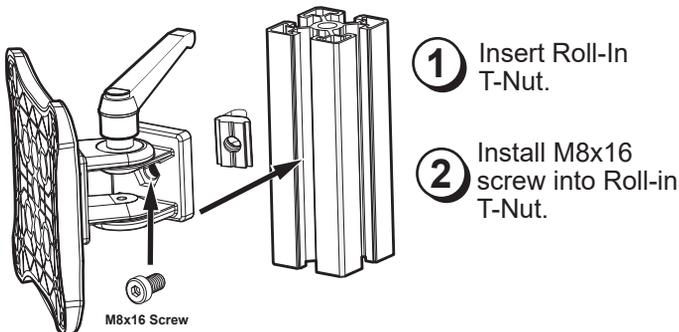


### Step 3 – End Mount

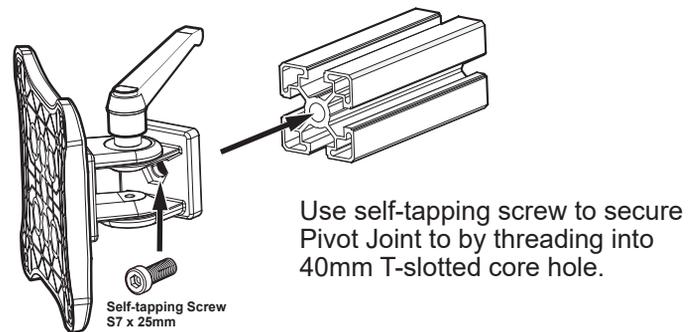

### Step 4 – T-Slot Mount

Install M4 x 12 screw with M4 x 12 washer into pre-threaded holes of third-party monitor.

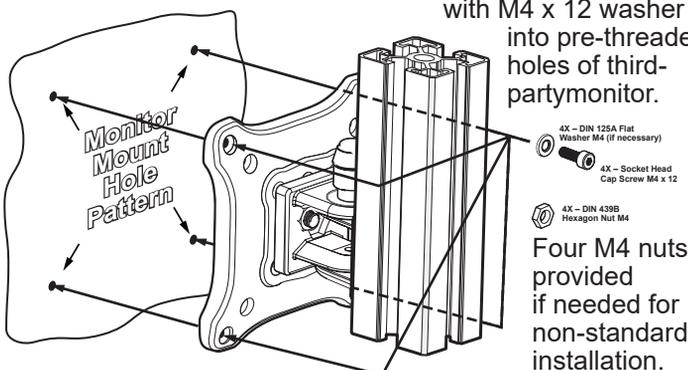

### Step 4 – Core Hole Mount

Install M4x12 screw with M4x12 washer into pre-threaded holes of third-party monitor.

