

# LAY IN WIREWAY

BUL10305

REV. A




## ASSEMBLY INSTRUCTIONS FOR LAY IN WIREWAY CONNECTION/MOUNTING

### INSTRUCTIONS :

- A USING PROVIDED HARDWARE FASTEN JOINERS ONTO BOTH ENDS OF FITTING.
- B) LOCATE AND MOUNT HANGER BRACKETS AT BOTH JOINTS.
- C) ADJUST FITTING TO APPROXIMATE DESIRED LENGTH, AND ASSEMBLE HARDWARE TO MIDDLE SECTION OF FITTING (DO NOT TIGHTEN).
- D) ATTACH FITTING ASSEMBLY TO EXISTING WIREWAY. (ENSURE THAT HANGER BRACKETS ARE LOCATED AT BOTH ENDS OF FITTING)
- E) ADJUST FITTING TO DESIRED LENGTH, AND TIGHTEN ALL REMAINING HARDWARE.
- F) REPEAT STEPS A-E FOR ADDITIONAL FITTINGS.
- G) ONLY USE ONE TELESCOPIC FITTING PER 10 FEET OF WIREWAY.

ITEM #	DESCRIPTION
1	JOINER (EXTRA COUPLING)
2	NUT 1/4-20 KEP ZP
3*	SCREW 1/4-20 X 1/2 CARRIAGE BOLT ZP
4	CWTL - TELESCOPIC FITTING
5	LAY IN WIREWAY - CEILING HANGER

AVAILABLE SIZES [IN]				
A	2.5	4.0	6.0	8.0

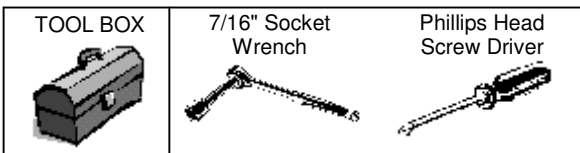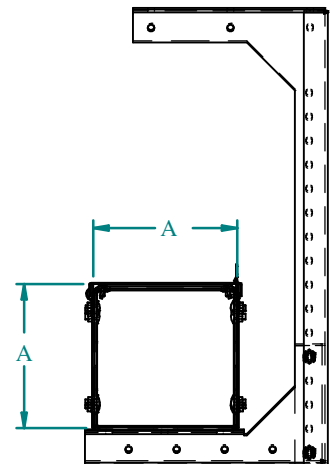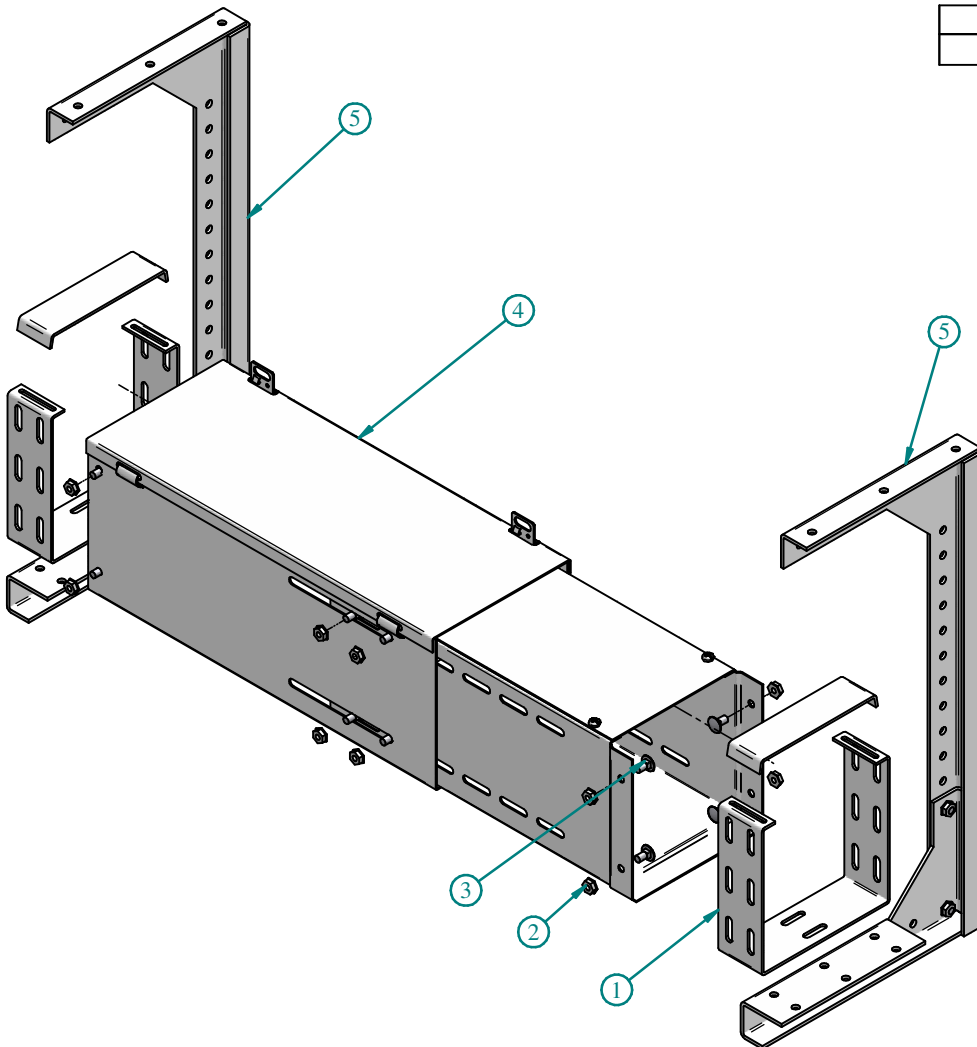

**HAMMOND**  
**MANUFACTURING™**  
**ENCLOSURES**