
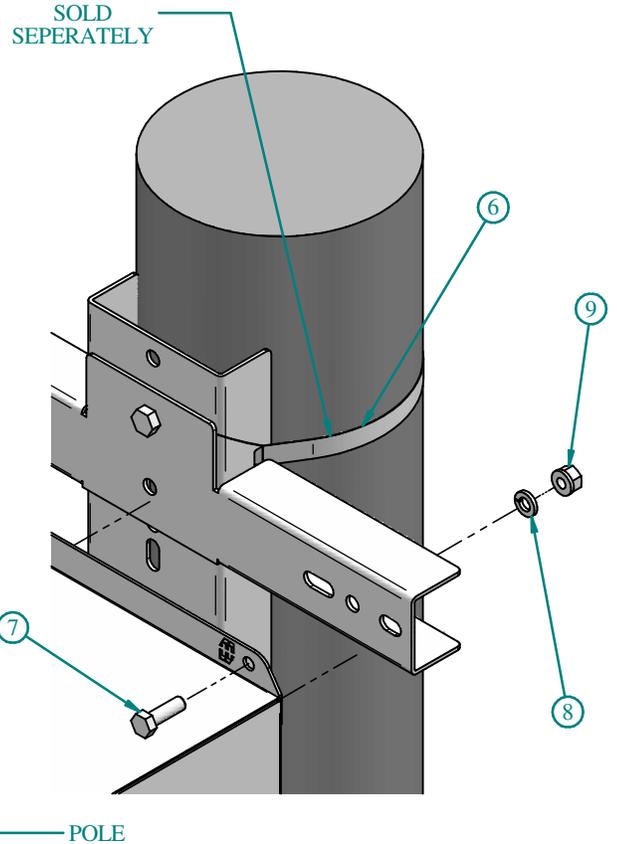


PMHGY - SERIES

BUL86393

REV. B


ASSEMBLY INSTRUCTIONS FOR PMHGY - EJ and 1414

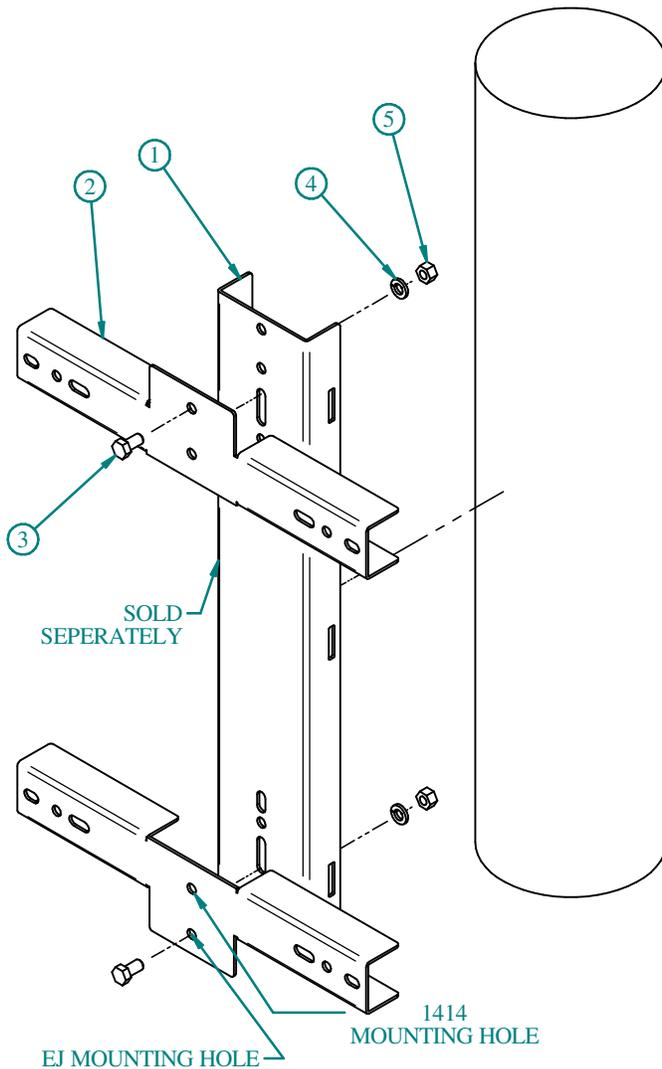

ASSEMBLY INSTRUCTIONS:

- A) Measure distance between vertical mounting centers on enclosure.
- B) Layout PMH..GY (item 2) centered on PMV...GY (item 1) with the distance measured in step A. EJ enclosures must use top hole, 1414 enclosures use the center hole.
- C) Use 3/8" x 3/4" bolt (item 3) with split lock washer (item 4) and 3/8" nut (item 5) to PMH..GY (item 2) to PMV...GY (item 1). Tighten down.
- D) Attach assembly to pole using PMSTRAP40 (up to 10" diameter pole) or PMSTRAP55 (up to 12" diameter pole).
- E) Attach enclosure to pole mount assembly using 5/16" x 1" bolts (item 7) 5/16" split lock washer (item 8) and 5/16" hex nut (item 9).

| ITEM No. | DESCRIPTION | QTY |
|----------|----------------------------|-----|
| 1 | PMV...GY - Vertical Rail | 1 |
| 2 | PMH..GY - Horizontal Rail | 2 |
| 3 | 3/8"-16 X 3/4" Bolt ZP | 2 |
| 4 | 3/8" Split Lock Washer ZP | 2 |
| 5 | 3/8"-16 Hex Nut ZP | 2 |
| 6 | PMSTRAP | 4 |
| 7 | 5/16"-18 X 1" Bolt ZP | 4 |
| 8 | 5/16" Split Lock Washer ZP | 4 |
| 9 | 5/16"-18 Hex Nut ZP | 4 |

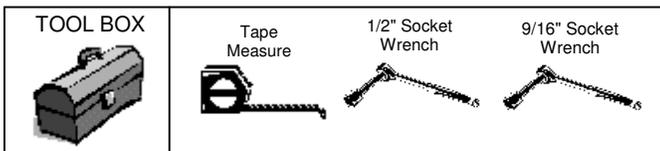


PMHGY - SERIES

BUL86393

REV. B


ASSEMBLY INSTRUCTIONS FOR PMHGY - ECLIPSE AND 1418

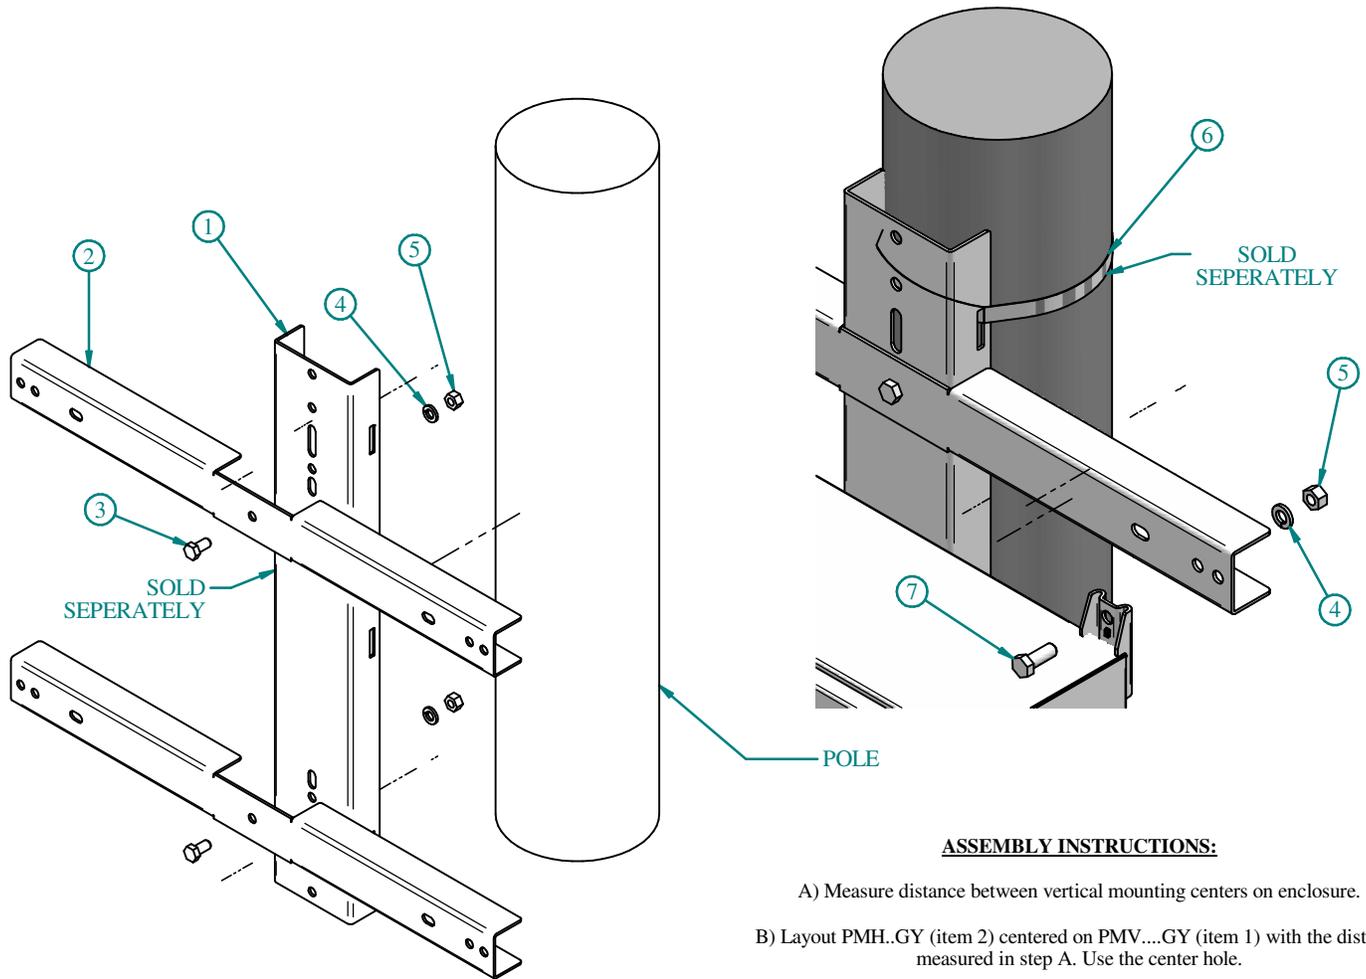

ASSEMBLY INSTRUCTIONS:

- A) Measure distance between vertical mounting centers on enclosure.
- B) Layout PMH..GY (item 2) centered on PMV...GY (item 1) with the distance measured in step A. Use the center hole.
- C) Use 3/8" x 3/4" bolt (item 3) with split lock washer (item 4) and 3/8" nut (item 5) to PMH..GY (item 2) to PMV...GY (item 1). Tighten down.
- D) Attach assembly to pole using PMSTRAP40 (up to 10" diameter pole) or PMSTRAP55 (up to 12" diameter pole).
- E) Attach enclosure to pole mount assembly using 3/8" x 1" bolts (item 7) 3/8" split lock washer (item 4) and 3/8" hex nut (item 5).

| ITEM No. | DESCRIPTION | QTY |
|----------|---------------------------|-----|
| 1 | PMV...GY - Vertical Rail | 1 |
| 2 | PMH..GY - Horizontal Rail | 2 |
| 3 | 3/8"-16 X 3/4" Bolt ZP | 2 |
| 4 | 3/8" Split Lock Washer ZP | 6 |
| 5 | 3/8"-16 Hex Nut ZP | 6 |
| 6 | PMSTRAP | 4 |
| 7 | 3/8"-16 X 1" Bolt ZP | 4 |

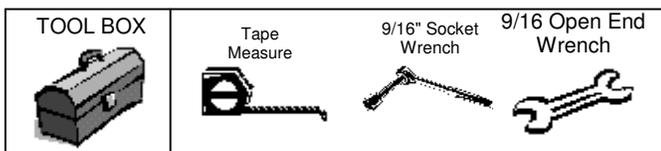

HAMMOND
MANUFACTURING™
www.hammondmfg.com