
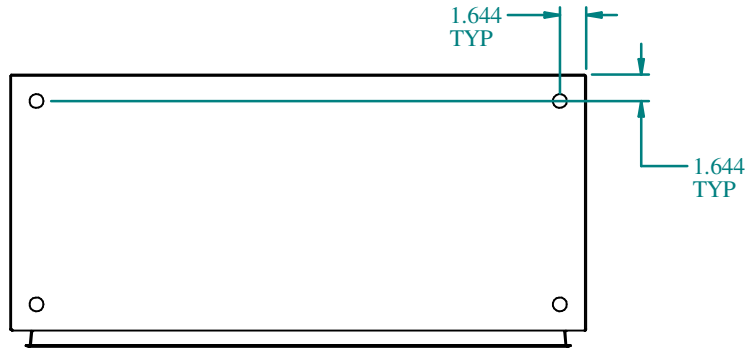


HWST - SERIES

BUL87750

REV. A

ASSEMBLY INSTRUCTIONS FOR HWST LEG KIT

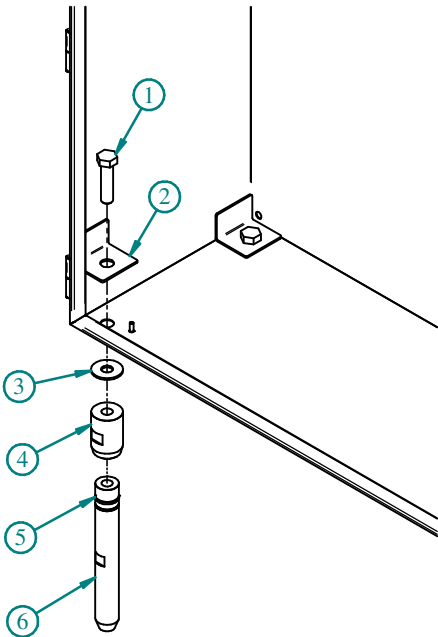

HOLE DIMENSIONS

AFIT316ST - ASSEMBLY INSTRUCTIONS

1. Mark hole locations as per the hole dimensions dwg in the bottom of the enclosure and drill the .875" hole required.
2. Place support bracket (Item 2) inside the enclosure over hole and put the 3/4" bolt (Item 1) through the hole. Place the rubber washer (Item 3) over the bolt on the outside of the enclosure and thread on the collet (Item 4). Tighten down.
3. Thread on adjustable leg (Item 6) and o-ring (Item 5) assembly into collet (Item 4). Thread into at least past the lower groove to ensure enough thread is engaged. Adjust to desired height.

AFIT316ST		
ITEM #	DESCRIPTION	QTY
1	3/4-16 X 3" BOLT	2
2	SUPPORT BRACKET	2
3	RUBBER WASHER 3/4"ID 2"OD	2
4	COLLET	2
5	O-RING	2
6	ADJUSTABLE LEG	2

