



**P/N: PMKG-IMP W/TIE  
IMPACT POLE MOUNTING KIT**

**Installation Instructions:**


The kit consists of the following components

- Item A) Mount Adapter, Black, UV – QTY (2)
- Item B) Screw, Button Head, 1/4-20 x 3/4" Long – QTY (2)
- Item C) Washer, Flat, 1/4" – QTY (2)
- Item D) Nylok Nut, 1/4-20 – QTY (2)
- Item E) Tie Wrap, Black, UV – QTY (2)

- 1) Attach Mount Adapter (A) to Enclosure base securing with Screw (B), Washer (C), & Nylok Nut (D). Tighten until snug and full nylok nut engagement.
- 2) Attach Tie Wrap (E) through slots in the Mount Adapter (A).
- 3) Wrap Tie Wrap around Pole and tighten.

**Integra Enclosures, Inc.**

7750 Tyler Blvd / Mentor, OH 44060 / Voice 440-269-8155 / Fax 440-269-4977 / [www.integraenclosures.com](http://www.integraenclosures.com) (INST-SHT-IMP-TIE\_Rev\_A)

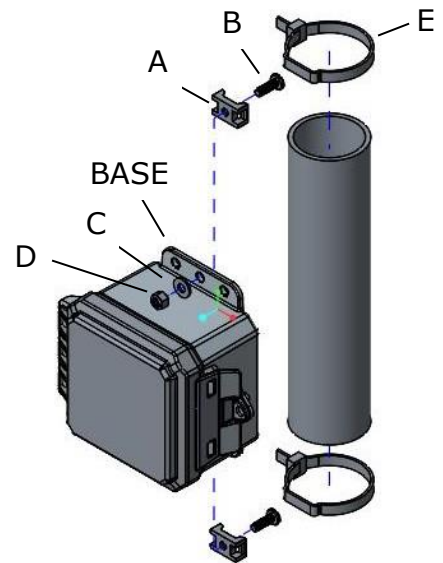

**P/N: PMKG-IMP  
IMPACT POLE MOUNTING KIT**

**Installation Instructions:**

The kit consists of the following components

- Item A) Mount Adapter, Black, UV – QTY (2)
- Item B) Screw, Button Head, 1/4-20 x 3/4" Long – QTY (2)
- Item C) Washer, Flat, 1/4" – QTY (2)
- Item D) Nylok Nut, 1/4-20 – QTY (2)
- Item E) Tie Wrap, Black, UV – QTY (2)

- 1) Attach Mount Adapter (A) to Enclosure base securing with Screw (B), Washer (C), & Nylok Nut (D). Tighten until snug and full nylok nut engagement.
- 2) Attach Tie Wrap (E) through slots in the Mount Adapter (A).
- 3) Wrap Tie Wrap around Pole and tighten.

**Integra Enclosures, Inc.**

7750 Tyler Blvd / Mentor, OH 44060 / Voice 440-269-8155 / Fax 440-269-4977 / [www.integraenclosures.com](http://www.integraenclosures.com) (INST-SHT-IMP-TIE\_Rev\_A)

