

HD PANEL SUPPORTS IN SINGLE DOOR FS

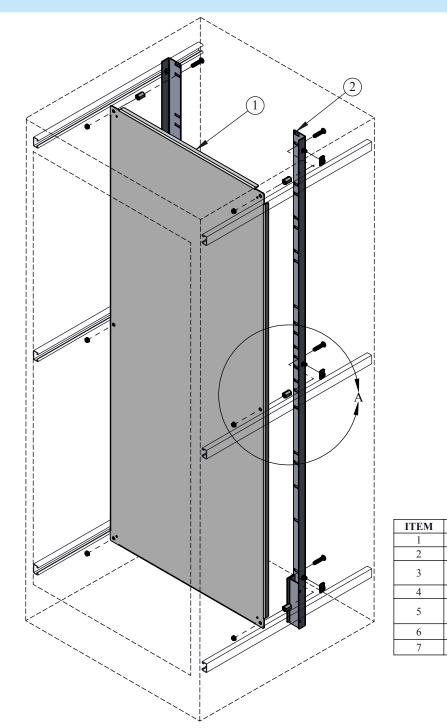

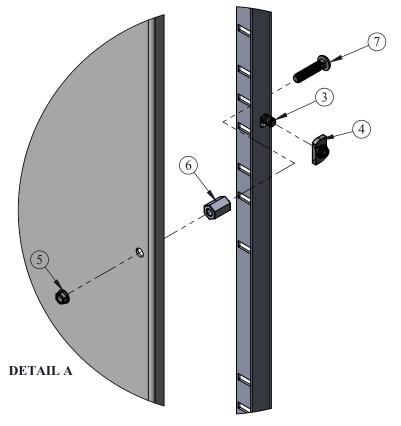

INSTALLATION INSTRUCTIONS

Step 1: Attach heavy-duty panel supports (item 2) to mounting channels inside enclosure using channel nuts and bolts (items 3 & 4).

Step 2: Attach coupling nuts and carriage bolts (items 6 & 7) tightly to panel support angles where needed. Use 4 per half panel, 6 per full panel.

Step 3: Install panel(s) (item 1) using serrated flanged nuts (item 5).

PART NAME

FULL PANEL HD PANEL SUPPORTS

SERRATED FLANGED

BOLT

CHANNEL NUT

SERRATED FLANGED

NUTS

COUPLING NUT

CARRIAGE BOLT