

Edison Selection Guide

Line Overview

The Edison family of fuses, fuse blocks and fuse holders is divided into two classes:

- 1. Current Limiting: Class CC, Class J, Class L, Class RK, Class T
- 2. General Purpose: Class M Midget and Small Dimension

The fuse selection guide below is a general summary of the specifications included for each fuse type. This selection guide does not include the many variables that can exist for specific situations such as local codes, unusual temperature, or other operating conditions. When selecting fuses, be sure to comply with any applicable PUBLIC SAFETY standards that apply to Overcurrent Protection Devices (OPD).

			Edison Fu	ses Se	lection G	auide a	nd General	Specifica	tions			
December						Curre	ent Limiting					
Description	Clas	ss J	Class	RK5	Class	RK1	Clas	ss T	Class L	(Class C	C
Fuse Type	Fast-Acting	Time-Delay		Time-	lelay		Extremely Fast-Acting		Fast-Acting	Fast-Acting	Time-Delay	
Part Number	JHL	JDL	ECNR	ECSR	LENRK	LESRK	TJN	TJS	LCU	HCLR	HCTR	EDCC
Voltage Rating	600VAC 450VDC	600VAC	250VAC 125 VDC* (1-200A) 250VDC* (201-600A)	600VAC 300VDC*	250VAC 125VDC* (10-60A) 250VDC* (70-600A)	600VAC 300VDC*	300VAC 160 VDC (15-600A)	600VAC	600V	600VAC 300VDC (15-20A)	600VAC	600VAC 300VDC (0.5-2.25A) (20-30A)
Amp Rating	1-	600	1 - 600	3 - 600	10 - 600	5 - 600	1 - 6	500	601 - 1200	0.5 - 30	0.25 - 30	0.5 - 30
Interrupting Rating	200,000 RMS Symmetrical Amps											
Current Limiting	Class J Class RK5 Class RK1 Class T Class L Class CC											
Agency Approvals	UL Listed Class J Guide JDDZ File E162363 Guide JDDZ File E162363 GSA Certified HRCI-R per C22.2, No. 248.12, No. 248.8 File 700489 ROHS FILE									363, C per C22.2		
Dimensions				See pro	oduct specific	ation page:	S.			ferrule (in): 13	3/32, lengt	h (in): 1-1/2
* Self-certified D	C ratings											

	Edison Fuses Selection Guide and General Specifications												
Description	Gener	al Purp	ose – M	idget	General Purpose – Small Dimension Electronic								
Fuse Type	Fast-Acting Time-Delay				Fast-Acting Ceramic Fast-Acti		ting Glass	Medium Time- Delay Glass	Time-Delay Ceramic	Time-Delay Glass	Fast-Acting Glass	Time- Delay Glass	
Part Number	MCL	MOL	MEQ	MEN	ABC	AGC	GMA	GMC	MDA	MDL	S500	S506	
Voltage Rating	600 VAC	250 VAC	500 VAC	250 VAC	250 VAC (0.5 to 30A) 125VDC: (0.5 to 30A)	250VAC: (0.1 to 10A) 32VAC: (15 to 30A)	250VAC (0.063 - 3A) 125VAC (4 - 15A)	250VAC (0.5 - 3A) 125VAC (4 - 10A)	250VAC 125VDC (20A)	250VAC: (0.0625 to 8A) 32VAC: (10 to 20A)	250VAC	250VAC	
Amp Rating	0.5 to 50	0.5 to 30	0.25 to 30	0.5 to 30	0.5 to 30	0.10 to 30	0.063 to 15	0.5 to 10	0.5 to 20	0.0625 to 20	0.032 to 10	0.25 to 6.3	
Interrupting Rating	100,000 RMS Amps 10,000 RMS Amps				See specifications table on product pages								
Current Limiting		N/	Α					N/A					
	UL Listed to 248.14, File E162443 CSA Cert. C22.2 Part 59.2, LR 700489			(AGC 1/100-10 A) JDYX and E19180 UL Recognition Guide and File nos. (ABC 20-30A):(AGC 11-30) JDYX2 and E19180		Designed to UL/CSA 248-14 UL Listed, Guide JDYX, File E19180 63mA-6A UL Recognition, Guide JDYX2, File E19180, 7A-15A CSA Certified, File 053787_C_000, 63mA-6A Class 1422-01		MDL 1/16-8A (Guide JDYX, File E19180 UL Recognized Card: MDA 25-30A MDL 9-30A (Guide JDYX2, File (F19180)		UL. Recognized Guide JDYX2, File E19180 Semko Approval VDE Approval BSI Approval IMQ Approval RoHS compliant			
					4 (41)	4 /4"	0.407	RoHS		4 4 /4"	0.407"	700"	
Dimensions	ferrule (in):	13/32 len	gth (in): 1-1	1/2	1/4" x 1 (6.3mm x	-1/4", 32mm)		" x 0.788" x 20mm)		1-1/4", x 32mm)	0.197" x ((5mm x 2		

tCPR-140 1-800-633-0405 **Circuit Protection**

Get Your Fuses From Us!

AutomationDirect has teamed up with Edison Fuse, a subsidiary of Cooper Industries, the worldwide leader in circuit protection, to offer the Edison line of fuses and fuse holders. Cooper Industries is a \$4.1B corporation with seven electrical products divisions, including two fuse brands. The Edison Fuse products are industry-standard fuses that are designed using the highest quality materials and manufacturing methods. All Edison fuses can be directly cross referenced and used as replacements for other namebrand fuses such as Littelfuse, Mersen, Siemens, and many more. Our fuse manufacturer cross reference list is at the end of this section.

AutomationDirect carries a wide range of fuses in convenient package sizes. Just about every electrical system requires some sort of circuit protection, so while you're ordering your other components from us, don't forget the fuses!











Fuse Blocks

Fuse Holders


Where to Use a Fuse

Fuses can be used for a variety of overcurrent and overload applications. They can be used to protect transformers, motors, DC power supplies, lighting circuits, contactors, relays and other industrial and commercial electrical equipment and conductors.

AutomationDirect now carries a vast assortment of fuse types. General purpose Midget Class fuses are typically used as supplemental protection for control loads. IWhere adherence to extensive current limiting codes is not required, the Class M Midget fuses are a great low-cost solution for both time-delay and fast-acting protection.

Current limiting fuses, frequently used in applications for motor branch circuit protection, are available in both timedelay and fast-acting models. In addition, the current limiting line is recognized for NEC branch circuit protection and Type 2 coordinated applications for IEC or NEMA starters/contactors

Small dimension fuses are perfect in size and ratings for protection in electronic applications. And, we've not forgotten the accessories you need: fuse holders and fuse blocks are available in a variety of 1, 2, and 3-pole form factors.

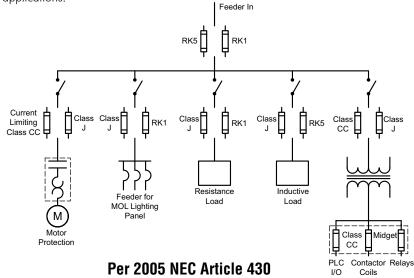

tCPR-136 Circuit Protection 1 - 800 - 633 - 0405

10 Great Reasons to Use a Fuse...

Why use a fuse?

Fuses offer a safe and economical solution for overcurrent protection of both conductors and components. Fuses can help make your control systems meet the UL and NEC codes.



North American standards

Tri-National Standards specify fuse performance and maximum allowable fuse I^p and I²t let-thru values.



Safety

Overcurrent protective devices that have tripped are often reset without first investigating the cause of the fault. Electromechanical devices may not have the reserve capacity to open safely when a second or third fault occurs. When a fuse opens it is replaced with a new fuse, so the protection level is not degraded by previous faults. Our current limiting fuses meet the UL and NEC codes.



Component protection

The high current limiting action of a fuse minimizes or eliminates component damage.



Extended protection

Devices with low interrupting ratings are often rendered obsolete by service upgrades or increases in available fault current. Updated NEC and UL standards are causing the need for potentially expensive system upgrades to non-fused systems.



Cost effective

Fuses typically are the most cost effective means of providing overcurrent protection. This is especially true where high fault currents exist or where small components such as Control Transformers or DC power supplies need protection.



Selectivity

Fuses can be easily coordinated to provide selectivity under both overload and short circuit conditions.



High interrupting rating

With most low voltage current limiting fuses (≤ 600 volts) having a 200,000 amp interrupting rating, you are not paying a high premium for a high interrupting capacity. Our current limiting fuses meet the UL and NEC codes.



Minimal maintenance

Fuses do not require periodic recalibration as do some electromechanical overcurrent protective devices.



Reliability

Fuses have no moving parts to wear out or become contaminated by dust or oil.




Long life

As a fuse ages, the speed of response will not slow down or change. A fuse's ability to provide protection will not be adversely affected by the passing of

...plus the best reason of all - our prices!

AutomationDirect has secured great pricing for our fuses, fuse holders and fuse blocks, and can pass those savings on to you. Many items are priced well below industry list prices, making fuse protection a beneficial and affordable option for almost every electrical device.

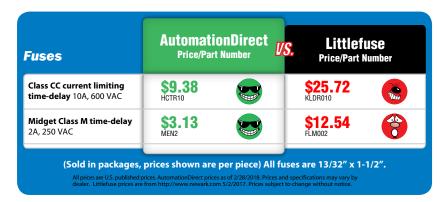

Fuse Construction and Operation


The typical fuse consists of an element which is surrounded by a filler and enclosed by the fuse body. The element is welded or soldered to the fuse contacts (blades or ferrules).

The element is a calibrated conductor. Its configuration, mass and the materials employed are selected to achieve the desired electrical and thermal characteristics. The element provides the current path through the fuse. It generates heat at a rate dependent on its resistance and the load current.

The heat generated by the element is absorbed by the filler and passed through the fuse body to the surrounding air. The filler material, such as quartz sand, provides effective heat transfer and allows for the small element cross-section typical in modern fuses. The effective heat transfer allows the fuse to carry harmless overloads. The small element cross

section melts quickly under short-circuit conditions. The filler also aids fuse performance by absorbing arc energy when the fuse clears an overload or short circuit.

When a sustained overload occurs, the element will generate heat at a faster



rate than the heat can be passed to the filler. If the overload persists, the element will reach its melting point and open. Increasing the applied current will heat the element faster and cause the fuse to open sooner. Thus, fuses have an inverse time current characteristic: that is, the greater the overcurrent, the less time

required for the fuse to open the circuit.

This characteristic is desirable because it parallels the characteristics of conductors, motors, transformers, and other electrical apparatus. These components can carry low-level overloads for relatively long periods without damage.

However, under high-current conditions, damage can occur quickly. Because of its inverse time current characteristic, a properly applied fuse can provide effective protection over a broad current range, from low-level overloads to high-level short circuits.

How to Talk Fuses

Commonly used terms

 l^2t (Ampere Squared seconds): A measure of the thermal energy associated with currentflow. l^2t is equal to $(I_{RMS})^2 \times t$, where t is the duration of current flow in seconds.

Clearing 12t: The total 12t passed by a fuse as the fuse clears a fault, with t being equal to the time elapsed from the initiation of the fault to the instant the fault has been cleared.

Melting I²t: The minimum I²t required to melt the fuse element.

Ampere Rating: The continuous current carrying capability of a fuse under defined laboratory conditions. The ampere rating is marked on each fuse.

Available Fault Current: The maximum short-circuit current that can flow in an unprotected circuit

Coordination: The use of overcurrent protective devices that will isolate only that portion of an electrical system that has been overloaded or faulted. Current-Limiting Range: The available fault currents a fuse will clear in less than ½ cycle, thus limiting the actual magnitude of current flow.

Element: A calibrated conductor inside a fuse that melts when subjected to excessive current. The element is enclosed by the fuse body and may be surrounded by an arc-quenching medium such as silica sand. The element is sometimes referred to as a link.

Fast-Acting Fuse: This is a fuse with no intentional time-delay designed into the overload range. It is sometimes referred to as a "single-element fuse" or "non-delay fuse."

Fault Current: Short-circuit current that flows partially or entirely outside the intended normal load current path of a circuit component. Values may be from hundreds to many thousands of amperes.

Ferrule: The cylindrical brass, bronze or copper mounting terminals of fuses with amp ratings up to 60 amperes. The cylindrical terminals at each end of a fuse fit into fuse clips.

Current-limiting Fuse: A fuse that meets the following three conditions:

- 1. Interrupts all available overcurrents within its interrupt rating.
- Within its current limiting range, limits the clearing time at rated voltage to an interval equal to, or less than, the first major or symmetrical current loop duration.
- Limits peak let-through current to a value less than the available peak current

Interrupting Rating: The maximum level of fault current that the fuse has been tested to safely interrupt.

tCPR-138 Circuit Protection 1 - 8 0 0 - 6 3 3 - 0 4 0 5

Our Fuses at a Glance







Fuse Holders

Fuse Series	Class	Amperage Range	Description	Application				
JDL			Most popular current limiting dual element time delay fuses available. Small physical size and high preformance characteristics makes the class J ideal for any space limited applications	All general purpose circuits with high inrush inductive loads including motor branch circuits and transformers. Also suited for lighting loads. Recommended for type 2 (no damage) protection of IEC style motors, starters, and contactors.				
JHL	IJ	1A to 600A	JHL Class J fuses combine the performance of high-speed semiconductor fuses and the convenience of Class J branch-circuit fuses in one small package. Ideal for AC and DC drives and controllers.	AC and DC drives, electronic motor controllers, power semiconductor devices that utilize diodes, GTOs, SCRs, or SSRs.				
ECNR		1A to 600A	The dual element time delay characteristics of these fuses typically allows them to be sized closer to the running ampacity	Use in AC power distribution system mains, feeders, and branch circuits. Recommended for high inrush inductive loads, like motors				
ECSR	RK5	3A to 600A	of inductive loads to reduce cost and improve over current lorotection.	and transformers, and non inductive loads like lighting, and heating lloads.				
LENRK		10A to 600A	These dual element time delay fuses have up to 40% more current limitation and up to 350% more 12t limitation under fault	Use in AC power distribution system mains, feeders, and branch circuits. Recommended for high inrush inductive loads, like motors				
LESRK	RK1	5A to 600A						
TJN TJS	Т	1A to 600A	These fuses are extremely fast-acting fuses in a compact, space- saving size.	These fuses are ideal as the main fuse protection for panel boards, load centers, meter stacks, and AC drives.				
HCLR	cc	0.5A to 30A	Fast acting characteristics with 200kA Interrupting Rating, and compact design are an excellent choice for inductive loads as well as resistive loads	Recommended for branch circuit protection, resistive heating loads, and lighting loads				
HCTR	СС	0.25A to 30A	Time delay characteristics with 200kA Interrupting Rating, and compact design are an excellent choice for high inductive loads. Meets the requirements of the NEC® 430.72 and UL508	Recommended for Motor Branch protection, short circuit protection required by NEC® 430.52 and for Primary protection for control transformer loads.				
EDCC	CC	0.5A to 30A	Low peak design was developed specifically for motor protection, Provides excellent current limiting capabilities up to 200KA 600VAC	Recommended for small horsepower motor circuits. Can provide Type 2 coordinated protection for IEC or NEMA starters/contactors				
MCL	Midget	0.5A to 50A	Provides supplemental protection to end-use equipment with a 100KA interruption rating, 600VAC. Fast acting design responds quickly to both overloads and short-circuit protection	Recommended for control circuits, street lighting, HID lighting, and electronic equipment protection				
MOL	Midget	0.5A to 30A	Provides supplemental protection to end-use equipment with a 10,000A interruption rating, economical laminated paper tube	Recommended to use as supplemental protection for non inductive control loads and lighting circuits				
MEQ	Midget	0.25 to 30A	Provides supplemental protection to high inrush loads. has a 10,000A interruption rating, 500VAC. Fiber tube construction.	Recommended to use as supplemental protection for inductive control loads such as transformers and solenoids.				
MEN	Midget	0.5A to 30A	Provides supplemental protection to high inrush loads. has a 10,000A interruption rating, fiber tube construction. Dual element allows harmless inductive surges to pass without opening.	Recommended to use as supplemental protection for inductive control loads such as transformers and solenoids, and other high inrush electronics circuits.				
ABC	1 1/4" x 1/4" Ceramic	0.5A to 30A	Fast acting 1/4" x 1-1/4" ceramic tube construction. Small dimension electronic fuses.	Recommended as supplemental protection for electronic applications				
	1 1/4" x 1/4" Glass	0.5A to 30A	Fast acting 1/4" x 1-1/4" glass tube construction. Small dimension electronic fuses.	Recommended as supplemental protection for electronic applications				
	5mm x 20mm Glass	0.063A to 15A	Fast acting 5mm x 20mm glass tube construction. Small dimension electronics fuses.	Recommended as supplemental protection for electronic applications				
	5mm x 20mm Glass	0.5A to 10A	Medium Time Delay 5mm x 20mm glass tube construction. Small dimension electronics fuses.	Recommended as supplemental protection for electronic applications				
MDA	1 1/4" x 1/4" Ceramic	0.5A to 20A	Time Delay 1/4" x 1-1/4" ceramic tube construction. Small dimension electronics fuses.	Recommended as supplemental protection for electronic applications				
MDL	1 1 ///" v 1 ///"	0.0625A to 20A	Time Delay 1/4" x 1-1/4" glass tube construction. Small dimension electronics fuses.	Recommended as supplemental protection for electronic applications				
<i>\$500</i>	5mm x 20mm Glass	0.032A to 10A	Fast acting 5mm x 20mm glass tube construction. Small dimension electronics fuses.	Recommended as supplemental protection for electronic applications				
S506	5mm x 20mm Glass	0.25A to 6.3 A	Time Delay 5mm x 20mm glass tube construction. Small dimension electronics fuses.	Recommended as supplemental protection for electronic applications				
LCU	L	601-1200 A	Fast acting current limiting for non-inductive applications.	Suited for protection of low interrupting circuit breakers and non- inductive loads.				

Cross Reference Guide



DOTAMAN GOOLD	CCCEFCO LITTELFUS CCMR KLDR KLKR
Time-Delay	KLDR
Time-Delay	KLDR
Fast-Acting Fast-Acting Fast-Acting East-Acting	
RK1	-R KLKR
RK1	
RK5 Time-Delay Dual Element 250 ECNR - EPS-RK-SP A6DR -	LLNRK
Time-Delay Dual Element G00 ECSR - FRS-R TRS -	LLSRK
Time-Delay Dual Element 600 JDL - LPJ AJT - High-Speed AC Drive 600 JHL - DFJ HSJ - Extremely Fast-Acting 300 TJN - JJN A3T - Extremely Fast-Acting 600 TJS - JJS A6T - WIL CLASS GENERAL PURPOSE FUSES ON	FLNR
High-Speed AC Drive	FLSR
High-Speed AC Drive 600 JHL - DFJ HSJ -	JTD
T Extremely Fast-Acting 600 TJS - JJS A6T - ### UL CLASS GENERAL PURPOSE FUSES ### UL CLASS GENERAL	_
Fast-Acting	JLLN
Fast-Acting	JLLS
Fast-Acting 250 MOL MOL BAF/BAN OTM -	
Midget 250 MOL MOL BAF/BAN OTM	KLK
Time-Delay Time-Delay 500 MEQ MEQ FNQ ATQ -	BLF
250 MEN MEN FNM TRM	FLQ
1/4"x 1-1/4" Glass	FLM
1/4"x 1-1/4" Glass 250/32 AGC AGC AGC GGC - 1/4"x 1-1/4" Ceramic Time-Delay 250 MDA MDA MDA - - 1/4"x 1-1/4" Glass Time-Delay 250/32 MDL MDL MDL GDL - 1/4"x 1-1/4" Glass 250/125 GMA GMA GGM -	314
Time-Delay 250/32 MDL MDL GDL -	312
1/4"x 1-1/4" Glass	326
Fast-Acting 250/125 GMA GMA GMA GGM -	313
	235
5x20 mm Glass Medium Time-Delay 250/125 GMC GMC GMC GSC -	_
Fast-Acting 250 S500 BDB GDB GSB —	217
5x20 mm Glass Time-Delay 250 S506 BDC GDC GDG -	218
Fuse Puller	,
Fuse Puller FP-2	

tCPR-218 Circuit Protection 1 - 8 0 0 - 6 3 3 - 0 4 0 5