Do-more H2 Series PLC System Specifications

General Specifications

General Specifications		
Operating Temperature 32°F to 131°F (0°C to 55°C)		
Storage Temperature	-4°F to 158°F (-20°C to 70°C)	
Ambient Humidity	30% to 95% relative humidity (non-condensing)	
Environmental Air	No corrosive gases	
Vibration	MIL STD 810C, Method 514.2 IEC60068-2-6 JIS C60068-2-6 (Sine wave vibration test)	
Shock	MIL STD 810C, Method 516.2 IEC60068-2-27 JIS C60068-2-27	
Noise Immunity	NEMA ICS3-304	
Agency Approvals	UL508 (File No. E157382, E316037) CE (EN61131-2)	

1-800-633-0405 CPU Modules Specifications




<u>H2-DM1</u> \$411.00



H2-DM1E \$549.00

Feature	H2-DM1	H2-DM1E
Total Memory (bytes)	262144 t	
Ladder Memory (instruction words)	65536 instruct	ion words
V-Memory (words)	Configurable up to 65	536 (4096 default)
Non-volatile V Memory (words)	Configurable up to 65	536 (4096 default)
D-memory (DWORDs)	Configurable up to 655	536 (4096 default)
Non-volatile D Memory (DWORDs)	Configurable up to 65	536 (4096 default)
R-memory (REAL DWORDs)	Configurable up to 65	()
Non-volatile R Memory (REAL DWORDs)	Configurable up to 65	536 (4096 default)
Boolean execution/K	50us	;
Stage Programming	Yes	
Number of Stages	128 per Program code-block; numbe memory	
Handheld Programmer	No	
Programming Software for Windows	FREE Do-more	e Designer
Built-In communications ports	USB, RS-232	USB, RS-232, Ethernet (10/100 Base-T)
Program Memory	Flash R	ОМ
Total I/O points available	X, Y, each configurable up to 65536 (20 each configurable up to	
Local I/O points available	256	
Ethernet Remote I/O Discrete points	13107	2
Ethernet Remote I/O Analog I/O Channels	3276	8
Max Number of Ethernet slaves per Channel	16	
I/O points per Remote Channel	3276	8
Discrete I/O Module Point Density	4/8/12/1	6/32
Slots per Base	3/4/6/	9
Number of instructions available	>160	>170
Control relays	Configurable up to 655	536 (2048 default)
Special relays (system defined)	1024	
Special registers (system defined)	512	
Timers	Configurable up to 65	536 (256 default)
Counters	Configurable up to 65	536 (256 default)
System Date/Time structures	8	
User Date/Time structures	Configurable up to 65	5536 (32 default)
ASCII String/Byte buffer structures	Configurable up to memo	ory limit (192 default)
Modbus Client memory	Yes, configurable up to memory limit, de 2048 input registers, 20	
DL Classic Client memory	Up to memory limit, default 51	2 X, 512 Y, 512 C, 2048 V
Immediate I/O	No	
Interrupt input (hardware / timed)	No	
Subroutines	Program and Task code-blo	cks, up to memory limit
Drum Timers	Yes, up to me	mory limit
Table Instructions	Yes	
Loops	FOR/NEXT, WHILE/WEND	, REPEAT/UNTIL loops
Math	>60 operators and functions: Intege Statistical, Logical,	
ASCII	Yes, IN/OUT, Serial, Ethernet TCP and	· ·
PID Loop Control, Built In	Yes, configurable to men	nory limit (over 2000)
Time of Day Clock/Calendar	Yes	
Run Time Edits	Yes	
Supports True Force	Yes	
Internal Diagnostics	Yes	
Password security	Multi-user, credentialed, s	ession-based security
System error log	Yes	
User error log	Yes	
Battery backup	Yes (Battery	included)

Do-more H2 PLCs tDMH-13

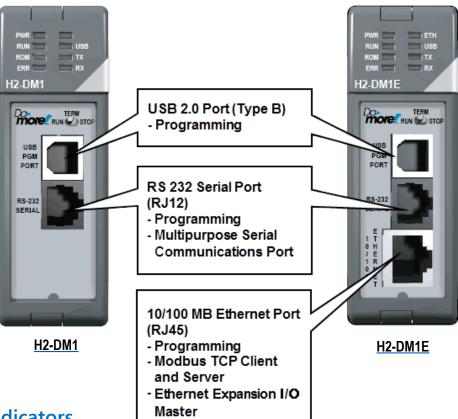

LED Status Indicators

PWR	-
RUN	USB
ROM	TX
ERR 🕅	RX RX
H2-DM1	

H2-DM1



H2-DM1E

PLC Mode Switch



LED Indicators		
Indicator	Status	Description
PWR	Green	Base Power ON
PWK	Yellow	Low Battery
RUN	Green	CPU is in RUN Mode
RUN	Yellow	Forces are Active
ROM	Yellow	CPU is updating Non-volatile Memory
ERR	Red	CPU Fatal Error
ЕТН	Green	Ethernet Link Good
EIH	Yellow	Ethernet Activity
USB	Green	USB Receive Activity
030	Yellow	USB Transmit Activity
ТΧ	Green	RS-232 Transmit Activity
RX	Green	RS-232 Receive Activity


Mode Switch Functions		
Mode Switch Position	CPU Action	
RUN (Run Program)	CPU is forced into RUN Mode if no errors are encountered.	
TERM (Terminal)	RUN, PROGRAM and DEBUG modes are available. In this mode, the mode of operation can be changed through the Programming Software.	
STOP (Stop Program)	CPU is forced into STOP Mode.	

Communication Ports

USB Port

Used exclusively for programming and monitoring via a PC running Do-more Designer.

USB Port Specifications		
Description	Standard USB 2.0 Slave input for programming and online monitoring, with built-in surge protection. Not compatible with older full speed USB devices.	
Cables (ADC part #)	USB Type A to USB Type B: <u>USB-CBL-AB3</u> (3 ft) <u>USB-CBL-AB6</u> (6ft) <u>USB-CBL-AB10</u> (10ft) <u>USB-CBL-AB15</u> (15ft)	



Pin	Description	
1	5V	Bus Voltage Sense
2	D-	Data -
3	D+	Data +
4	0V	Ground

RS-232 Port

RJ-12 style connector used for:

- Connection to a PC running Do-more Designer
- Modbus RTU Master connections
- Modbus RTU Slave connections
- ASCII Incoming and Outgoing communications
- Custom Protocol Incoming and Outgoing communications

	The second s
6	
1	
1	
, L	nin R 140 Female
	pin RJ12 Female

RS-232 Port Specifications		
Description	Non-isolated, full duplex RS-232 DTE port used for programming, online monitoring or can connect the CPU as a Modbus RTU or ASCII master or slave to a peripheral device. Includes ESD and built-in surge protection.	
Baud Rates	1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200	
+5V Cable Power Source	220mA maximum at 5V, \pm 5%. Reverse polarity and overload protected.	
Maximum Output Load (TXD/RTS)	3kV, 1000pf	
Minimum Output Voltage Swing	±5V	
Output Short Circuit Protection	±15mA	
Cable Options (ADC part #)	D2-DSCBL FA-CABKIT FA-ISOCON for converting RS-232 to isolated RS-422/485	

Pin	Description	
1	ov	Power (-) connection (GND)
2	5V	Power (+) connection (220mA max.)
3	RXD	Receive Data (RS-232)
4	TXD	Transmit Data (RS-232)
5	RTS	Request to Send (RS-232)
6	CTS	Clear to Send (RS-232)

For a list of protocols supported by each port, please refer to the Communications topic of the Do-more H2 Series PLC Overview in this section.


Ethernet Port

RJ-45 style connector used for:

- Connection to a PC running Do-more Designer
- Modbus TCP Client connections (Modbus requests sent from the CPU)
- Modbus TCP Server connections (Modbus requests received by the CPU)
- Ethernet Expansion I/O Master

Ethernet Port Specifications		
Description Standard transformer isolated Ethernet port with built-in surge protection for programming, online monitoring, Modbus/TCP clien server connections (fixed IP or DHCP) and Ethernet Expansion I/C capabilities.		
Transfer Rate	10/100 Mbps; Auto-MDX (Crossover)	
	1 2 3 4 5 6 7 8 8-pin RJ45	

Connector (8P8C)

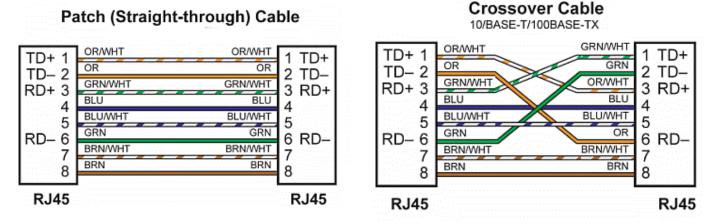

For a list of protocols supported by each port, please refer to the Communications topic of the Do-more H2 Series PLC Overview in this section.


Battery Specifications

A battery is included with the Do-more CPU and is used to retain the Time and Date along with any Tagname values that are set up as retentive. It is recommended that the battery be replaced once every five years or when one year of cumulative OFF time has been exceeded.

Up to two hours is allowed to change out a battery without loss of data.

<u>D0-MC-BAT</u> is \$3.00.

Battery		
D0-MC-BAT	Coin type, 3.0 V Lithium battery, number CR2032	

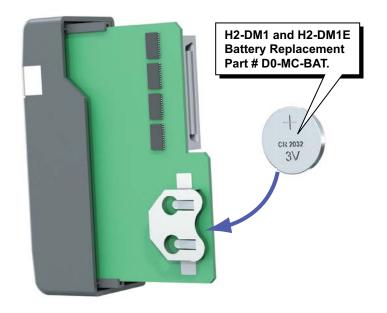

Ethernet Expansion I/O

With Do-more Designer Software version V1.1 and newer, the <u>H2-DM1E</u> CPU's built-in Ethernet port can be configured as an Ethernet Expansion I/O master. Much like the <u>H2-ERM100</u> module, the Ethernet Expansion I/O feature allows expansion beyond the local chassis to slave I/O using the onboard high-speed Ethernet link.

The onboard Ethernet port can support up to 16 slave devices. The slave I/O modules supported are:

- <u>H2-EBC100</u>
- T1H-EBC100 (Terminator I/O)
- GS-EDRV100 (GS Drives)

The Ethernet Expansion I/O network uses Category 5 UTP cables for cable runs up to 100 meters (328 ft.) with extended distances achieved through Ethernet switches.

It is highly recommended that a dedicated network be used with the Ethernet Expansion I/O feature. Ethernet Expansion I/O networks and ECOM/office networks should be isolated from one another to prevent network delays.

