## DL05/06 Option Modules


## <u>F0-2AD2DA-2</u> \$264.00

2-channel analog voltage input and 2-channel analog voltage output module

F0-2AD2DA-2 Input Specifications		
Number of Channels	2, single ended (one common)	
Input Range	0 to 5 VDC or 0 to 10 VDC (jumper selectable)	
Resolution	12-bit (1 in 4096)	
Step Response	10.0 ms to 95% of full step change	
Crosstalk	1/2 count max (-80db)*	
Active Low-pass Filtering	-3dB at 300Hz (-12dB per octave)	
Input Impedance	>20kΩ	
Absolute Max Ratings	±15V	
Linearity Error (end to end)	±2 counts (0.025% of full scale) max*	
Input Stability	±1 count*	
Gain Error	±6 counts max*	
Offset Error	±2 counts max*	
Max Inaccuracy	±0.3% at 25-C (77-F) ±0.6% at 0 to 60C (32 to 140-F)	
Accuracy vs. Temperature	±100 ppm/-C typical	

F0-2AD2DA-2 Output	Specifications
Number of Channels	2, single ended (one common)


	(one common)
Output Range	0 to5 VDC or 0 to 10 VDC (jumper selectable)
Resolution	12-bit (1 in 4096)
Conversion Settling Time	50µs for full scale change
Crosstalk	1/2 count max (-80db)*
Peak Output Voltage	±supply limited)
Offset Error	0.1% of range
Gain Error	0.4% of range
Linearity Error (end to end)	±1 counts (0.075% of full scale) max*
Output Stability	±2 counts*
Load Impedance	$2k\Omega$ min
Load Capacitance	0.01 µF max
Terminal Type (Included)	Removable: F0-IOCON
Accuracy vs. Temperature	±50ppm /°C typical



\* One count in the specification table is equal to one least significant bit of the analog data value (1 in 4096)



See Wiring Solutions for part numbers of ZIPLink cables and connection modules compatible with this I/O module.

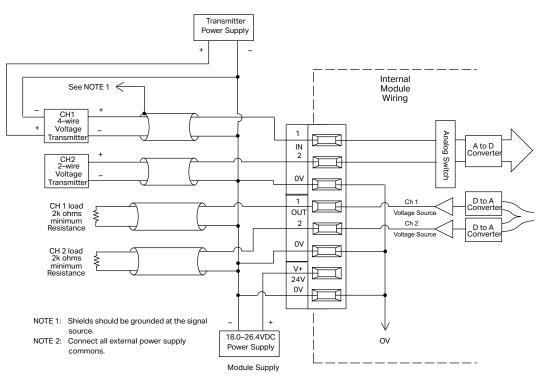



**Wiring Solutions** 

### Wiring Solutions using the **ZIP**Link Wiring System

**ZIP**Links eliminate the normally tedious process of wiring between devices by utilizing prewired cables and DIN rail mount connector modules. It's as simple as plugging in a cable connector at either end or terminating wires at only one end. Prewired cables keep

installation clean and efficient, using half the space at a fraction of the cost of standard terminal blocks. There are several wiring solutions available when using the **ZIP**Link System ranging from

### Solution 1: DirectLOGIC I/O Modules to ZIPLink Connector Modules

When looking for quick and easy I/O-to-field termination, a **ZIP**Link connector module used in conjunction with a prewired **ZIP**Link cable, consisting of an I/O terminal block at one end and a multi-pin connector at the other end, is the best solution.

PLC I/O-to-**ZIP**Link Connector Modules that are ready for field termination, options for connecting to third party devices, GS, DuraPulse and SureServo Drives, and specialty relay, transorb and communications modules. Pre-printed I/O-specific adhesive label strips for quick marking of **ZIP**Link modules are provided with **ZIP**Link cables. See the following solutions to help determine the best **ZIP**Link system for your application.

Using the PLC I/O Modules to **ZIP**Link Connector Modules selector tables located in this section,

- 1. Locate your I/O module/PLC.
- 2. Select a **ZIP**Link module.
- 3. Select a corresponding **ZIP**Link cable.



#### Solution 2: DirectLOGIC I/O Modules to 3rd Party Devices

For connecting I/O to another device within close proximity of the I/O modules, no extra terminal blocks are necessary when using the **ZIP**Link Pigtail Cables. **ZIP**Link Pigtail Cables are prewired to an I/O terminal block with color-coded pigtail with soldered-tip wires on the other end.

Using the I/O Modules to 3rd Party Devices selector tables located in this section,

- 1. Locate your PLC I/O module.
- 2. Select a **ZIP**Link pigtail cable that is compatible with your 3rd party device.



## Solution 3: GS Series and DuraPulse Drives Communication Cables

Need to communicate via Modbus RTU to a drive or a network of drives?

**ZIP**Link cables are available in a wide range of

configurations for connecting to PLCs and SureServo, SureStep, Stellar soft starters and AC drives. Add a **ZIP**Link communications module to quickly and easily set up a multi-device network. Using the Drives Communication selector tables located in this section,

- 1. Locate your drive and type of communications.
- 2. Select a **ZIP**Link cable and other associated hardware.





# Wiring Solutions

#### Solution 4: Serial Communications Cables

**ZIP**Link offers communications cables for use with DirectLOGIC, CLICK, and Productivity3000 CPUs, that can also be used with other communications devices. Connections include a 6-pin RJ12 or 9-pin, 15-pin and 25-pin D-sub connectors which can be used in conjunction with the RJ12 or D-Sub Feedthrough modules.

Using the Serial Communications Cables selector table located in this section,

Locate your connector type.
Select a cable.



#### Solution 5: Specialty ZIPLink Modules

For additional application solutions, **ZIP**Link modules are available in a variety of configurations including stand-alone relays, 24VDC and 120VAC transorb modules, D-sub and RJ12 feedthrough modules, communication port adapter and distribution modules, and SureServo 50-pin I/O interface connection.

Using the **ZIP**Link Specialty Modules selector table located in this section,

1. Locate the type of application.

Select a **ZIP**Link module.



#### Solution 6: ZIPLink Connector Modules to 3rd Party Devices

If you need a way to connect your device to terminal blocks without all that wiring time, then our pigtail cables with colorcoded soldered-tip wires are a good solution. Used in conjunction with any compatible **ZIP**Link connector modules, a pigtail cable keeps wiring clean and easy and reduces troubleshooting time.

Using the Universal Connector Modules and Pigtail Cables table located in this section,

- 1. Select module type.
- 2. Select the number of pins.
- 3. Select cable.





## **PLC I/O Modules to ZIPLink Connector Modules - DL05/06**

DL05/06 PLC Input Module <i>ZIP</i> Link Selector				
P	LC	<i>ZIP</i> Link		
Input Module	# of Terms	Component	Module Part No.	Cable Part No.
<u>D0-10ND3</u>	13	Feedthrough		ZL-D0-CBL13
<u>D0-10ND3F</u>	13	Feedthrough	ZL-RTB20	
		Feedthrough		ZL-D0-CBL24-L
<u>D0-16ND3</u>	24	Sensor	ZL-LTB16-24-1	ZL-D0-CBL24-1L ZL-D0-CBL24-2L
F0-08NA-1	10	See Note 2		

DL05/06 PLC Combo In/Out Module ZIPLink Selector				
P	PLC ZIPLink			
Combo Module	# of Terms	Component Module Part Cable Part No.		
<u>D0-07CDR</u>	10	See Note 2		
D0-08CDD1	13	Feedthrough ZL-RTB20 ZL-D0-CBL13		

DL05/06 PLC Analog Module <i>ZIP</i> Link Selector				
PL	C	ZIPLink		
Analog Module	# of Terms	Component Module Cable		Cable
<u>F0-04AD-1</u>	8	See Note 2		
F0-04AD-2	8	See Note 2		
F0-08ADH-1	13			
F0-08ADH-2	13			
F0-04DAH-1	13	Foodthrough		
<u>F0-08DAH-1</u>	13	Feedthrough ZL-RTB20 ZL-D0-CBL		ZL-DU-GBL13
F0-04DAH-2	13			
<u>F0-08DAH-2</u>	13			
F0-2AD2DA-2	8	See Note 2		
F0-4AD2DA-1	8			
F0-4AD2DA-2	8			
<u>F0-04RTD</u>	Matched Only			
<u>F0-04THM</u>	Matched Only			



Note: ZIPLink Connector Modules and ZIPLink Cables specifications are in the **ZIP**Link catalog section.

DL05/06 PLC Output Module ZIPLink Selector				
	PLC ZIPLink			
Output Module	# of Terms	Component	Module Part No.	Cable Part No.
<u>D0-10TD1</u>	13	Feedthrough	ZL-RTB20	ZL-D0-CBL13
		Feedthrough	ZL-RTB20	ZL-D0-CBL24 *
<u>D0-16TD1</u>	24	Fuse	ZL-RFU20 <sup>3</sup>	ZL-D0-CBL24 *
		Relay (sinking)	ZL-RRL16-24-1	ZL-D0-CBL24 *
<u>D0-10TD2</u>	13	Feedthrough	ZL-RTB20	ZL-D0-CBL13
		Feedthrough	ZL-RTB20	ZL-D0-CBL24 *
D0-16TD2	24	Fuse	ZL-RFU20 <sup>3</sup>	ZL-D0-CBL24 *
		Relay (sourcing)	ZL-RRL16-24-2	ZL-D0-CBL24 *
<u>D0-08TR</u>	10	See Note 2		
<u>F0-04TRS</u> 1	13	Feedthrough ZL-RTB20 ZL-D0-CBL13		

DL05/06 PLC Fixed I/O ZIPLink Selector				
	PLC ZIPLink			
PLC	# of Terms	Component Module Part No.		
DL05	18	See Note 2		
	20 (Input side only)	Feedthrough	ZL-RTB20	ZL-D06X-CBL20
DL06     20 (Output side only)     Feedthrough     ZL-RTB20     ZL-D06Y-CBL20				

\* Select the cable length by replacing the \* with: Blank = 0.5 m, -1 = 1.0 m, or -2 = 2.0 m. <sup>1</sup> Caution: The F0-04TRS relay outputs are derated not to exceed 2A per point

when used with the ZIPLink wiring system.

<sup>2</sup> These modules are not supported by the ZIPLink wiring system.

<sup>3</sup> Note: Fuses (5 x 20 mm) are not included. See Edison Electronic Fuse section for (5 x 20 mm) fuse. S500 and GMA electronic circuit protection for fast-acting maximum protection. S506 and GMC electronic circuit protection for time-delay performance. Ideal for inductive circuits.

To ensure proper operation, do not exceed the voltage and current rating of ZIPLink module. ZL-RFU20 = 2A per circuit; ZL-RFU40 = 400mA per circuit.



## Power Budgeting for the DL06

The DL06 has four option module slots. To determine whether the combination of modules you select will have sufficient power, you will need to perform a power budget calculation.

### **Power supplied**

Power is supplied from two sources: the internal base unit power supply and, if required, an external supply (customer furnished). The D0-06xx (AC powered) PLCs supply a limited amount of 24VDC power. The 24VDC output can be used to power external devices.

For power budgeting, start by considering the power supplied by the base unit. All DL06 PLCs supply the same amount of 5VDC power. Only the AC units offer 24VDC auxiliary power.

Be aware of the trade-off between 5VDC power and 24VDC power. The amount of 5 VDC power available depends on the amount of 24VDC power being used, and the amount of 24VDC power available depends on the amount of 5VDC power consumed. Determine the amount of internally supplied power from the table to the right.

# Power required by base unit

Because of the different I/O configurations available in the DL06 family, the power consumed by the base unit itself varies from model to model. Subtract the amount of power required by the base unit from the amount of power supplied by the base unit. Be sure to subtract 5VDC and 24VDC amounts.

# Power required by option modules

Next, subtract the amount of power required by the option modules you are planning to use. Again, remember to subtract both 5VDC and 24VDC.

If your power budget analysis shows surplus power available, you should have a workable configuration.

DL06 Power Supplied by Base Units				
Part Number 5 VDC (mA) 24 VDC (mA)				
D0.00	1500mA	300mA		
D0-06xx	2000mA	200mA		
<b>D0-06xx-D</b> 1500mA none				

DL06 Base Unit Power Required			
Part Number	5 VDC (mA)	24 VDC (mA)	
<u>D0-06AA</u>	800mA	none	
<u>D0-06AR</u>	900mA	none	
<u>D0-06DA</u>	800mA	none	
<u>D0-06DD1</u>	600mA	280mA*	
D0-06DD2	600mA	none	
<u>D0-06DR</u>	950mA	none	
<u>D0-06DD1-D</u>	600mA	none	
<u>D0-06DD2-D</u>	600mA	none	
<u>D0-06DR-D</u>	950mA	none	

\* Only if auxiliary 24VDC power is connected to V+ terminal.

DL06 Power Consumed by Other Devices			
Part Number	5 VDC (mA)	24 VDC (mA)	
<u>D0-06LCD</u>	50mA	none	
D2-HPP	200mA	none	
DV-1000	150mA	none	
C-more Micro-Graphic	210mA	none	

Power Budgeting Example			
Power Source		5VDC power (mA)	24VDC power (mA)
D0-06DD1	A	1500mA	300mA
(select row A or B)	в	2000mA	200mA
Current Require	d	5VDC power (mA)	24VDC power (mA)
D0-06DD1		600mA	280mA*
D0-16ND3		35mA	0
<u>D0-10TD1</u>		150mA	0
<u>D0-08TR</u>		280mA	0
F0-4AD2DA-1		100mA	0
D0-06LCD		50mA	0
Total Used		1215mA	280mA
Pomoining	А	285mA	20mA
Remaining	В	785mA	note 1

 $^{\ast}$  Auxiliary 24 VDC used to power V+ terminal of D0-06DD1 sinking outputs.

Note 1: If the PLC's auxiliary 24 VDC power source is used to power the sinking outputs, use power choice A, above.

DL05/06 Power Consumed		
by Option Modules		
Part Number	5 VDC (mA)	24 VDC (mA)
<u>D0-07CDR</u>	130mA	none
<u>D0-08CDD1</u>	100mA	none
<u>D0-08TR</u>	280mA	none
<u>D0-10ND3</u>	35mA	none
<u>D0-10ND3F</u>	35mA	none
<u>D0-10TD1</u>	150mA	none
<u>D0-10TD2</u>	150mA	none
<u>D0-16ND3</u>	35mA	none
<u>D0-16TD1</u>	200mA	none
<u>D0-16TD2</u>	200mA	none
<u>F0-04TRS</u>	250mA	none
<u>F0-08NA-1</u>	5mA	none
<u>F0-04AD-1</u>	50mA	none
<u>F0-04AD-2</u>	75mA	none
<u>F0-08ADH-1</u>	25mA	25mA
<u>F0-08ADH-2</u>	25mA	25mA
<u>F0-04DAH-1</u>	25mA	150mA
<u>F0-08DAH-1</u>	25mA	220mA
<u>F0-04DAH-2</u>	25mA	30mA
<u>F0-08DAH-2</u>	25mA	30mA
<u>F0-2AD2DA-2</u>	50mA	30mA
<u>F0-4AD2DA-1</u>	100mA	40mA
<u>F0-4AD2DA-2</u>	100mA	none
<u>F0-04RTD</u>	70mA	none
<u>F0-04THM</u>	30mA	none
<u>DO-DEVNETS</u>	45mA	none
<u>H0-CTRIO2</u>	250mA	none
<u>H0-ECOM100</u>	300mA	none
<u>F0-08SIM</u>	1mA	none
<u>D0-DCM</u>	250 mA	none
<u>F0-CP128</u>	150 mA	none
<u>F0-08SIM</u>	1 mA	none