
3505 HUTCHINSON ROAD CUMMING, GA 30040-5860 1-800-633-0405

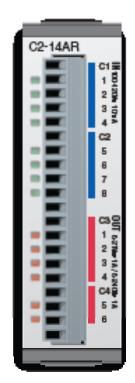

C2-14AR OPTION SLOT MODULE

- 8 discrete AC inputs
- 6 discrete relay outputs

General Specifications		
Operating Temperature	32°F to 131°F [0°C to 55°C]	
Storage Temperature	–4°F to 158°F [–20°C to 70°C]	
Ambient Humidity	30% to 95% relative humidity (non–condensing)	
Altitude	Up to 2,000m	
Environmental Air	No corrosive gases Pollution Degree 2 (UL840)	
Environment	For Indoor Use Only	
Vibration	5–9Hz: 3.5 mm amplitude; 9–150Hz: 1.0 G 10 sweep cycles per axis on each of 3 mutually perpendicular axes.	
Shock	15G peak, 11ms duration, 3 shocks in each direction per axis, on 3 mutually perpendicular axes.	
Weight	63g	
Bus Power Required	Max 75mA (all points ON)	
Agency Approvals	UL61010 (File No. E157382); CE (EN61131-2); CUL Canadian C22.2	
Other	RoHS 2011/65/EU Amendment (EU)2015/863	

Please read and understand the information in these installation instructions prior to installation, operation, or servicing this equipment. This module is intended to be used with a CLICK PLUS CPU. Ensure the CPU is installed in accordance with its installation and safety instructions.

PLEASE REVIEW SAFETY WARNINGS ON PAGE 2!

Input Specifications			
Inputs per Module	8		
Operating Voltage Range	100-120VAC		
Input Voltage Range	80-144VAC		
AC Frequency	47–63Hz		
Input Current	8.5 mA @ 100VAC (50Hz), typical 10mA @ 100VAC (60Hz), typical		
Max. Input Current	16mA @ 144VAC		
Input Impedance	15kΩ @ 50Hz, 12kΩ @ 60Hz		
ON Voltage Level	> 60VAC		
OFF Voltage Level	< 20VAC		
Minimum ON Current	5mA		
Maximum OFF Current	2mA		
OFF to ON Response	< 40ms		
ON to OFF Response	< 40ms		
Input Filter	1ms unit (set from 1 to 99 ms)*		
Status Indicators	8 Green LEDs		
Commons	2 (4 points/common) Isolated		

^{*} Set from CLICK Tool.

Output Specifications			
Outputs per Module	6		
Operating Voltage Range	6-27VDC, 6-240VAC (47-63Hz)		
Output Voltage Range	5-30VDC, 5-264VAC (47-63Hz)		
Output Type	Relay, Form A(SPST)		
Max. Output Current	1A/point, C3: 4A/common; C4: 2A/common		
Min. Load Current	5mA @ 5VDC		
Max. Inrush Current	3A for 10ms		
OFF to ON Response	< 15ms		
ON to OFF Response	< 15ms		
Status Indicators	6 Red LEDs		
Commons	2 (4 points or 2 points/common)		



C2-14AR Option Slot Module PLUS Installation Instructions

VAUTOMATIONDIRECT[§]

3505 HUTCHINSON ROAD CUMMING, GA 30040-5860 1-800-633-0405

Safety Warnings

Please follow these instructions for personal and operational safety.



WARNING Assumes that incorrect handling may cause hazardous conditions, resulting in severe injury or death.



CAUTION Assumes that incorrect handling may cause hazardous conditions, resulting in medium or slight injury, or may cause equipment damage.



- Don't use this equipment in a flammable or explosive environment in order to avoid accidental injury or fire.
- You should use external electromechanical devices that are independent of the PLC (Programmable Logic Controller) system to provide protection for any part of the system; otherwise malfunction or output failures may result in a hazardous accident.
- 24VDC power is required from a secondary circuit or a specific power supply unit only.
- Ensure the Ground Terminal of the Power Supply (C0-00AC/ C0-01AC) for the CLICK PLUS CPU is connected to Earth Ground to avoid electric shock or equipment damage during a
- Don't operate the equipment with a nonconforming external power supply to avoid electric shock, equipment damage or fire.
- Don't intentionally fault the wiring; this may cause equipment damage or fire.
- To avoid electric shock or malfunctions which might result in an accident, don't touch any terminal while the PLC power is on.
- Don't put metals (e.g. screwdriver) into vent holes, or drop trash or foreign objects (e.g. wire cut-offs) into the device, in order to avoid electric shock or equipment damage.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be invalidated.

CAUTION

- For use in Pollution Degree 2 Environment. Use and store the equipment in an environment described in the specifications (regarding temperature, humidity, vibrations, shock, etc.) in order to avoid equipment damage or fire.
- Ensure all wiring has strain reliefs in order to avoid damage to insulation that might result in electric shock or fire.
- Ensure secondary external power circuits are only live after PLC control program is started; otherwise a malfunction or output failure may result in a hazardous accident.
- Don't block the vent holes. This may cause an increase of internal temperature resulting in equipment damage or fire.
- Don't disassemble or modify equipment so as to avoid electric shock, equipment damage, or fire.
- Cut off all phases of the external power source before maintenance work, thus avoiding electric shock or equipment damage.

Hardware Installation




CAUTION Discharge static electricity before installation or wiring to avoid electric equipment damage.





CAUTION Cut off all phases of the power source externally and wait 5 seconds before installing or removing the Option Slot Module of a running system.

INSTALL OR REMOVE THE OPTION SLOT MODULE



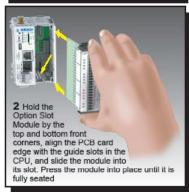

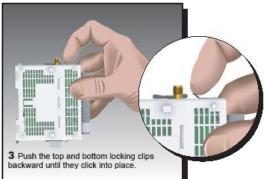

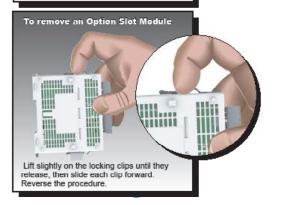

C2-14AR Option Slot ModuleInstallation Instructions

VAUTOMATION DIRECT § 3505 HUTCHINSON ROAD CUMMING, GA 30040-5860 1-800-633-0405

Hardware Installation, continued

WIRING

16–28 AWG wiring is supported. We recommend using crimping ferrules on all wire terminations for a more secure connection. The following crimping ferrules are recommended for the I/O terminals.


Company	Туре	Model No.	Compliant Wire
AutomationDirect	Ferrule	V30AE000009 V30AE000041	0.2–0.5 mm² (22–26AWG)

^{*} Rated torque is 0.22 to 0.25 N·m.

Take care not to contact adjacent terminal.


Terminal Block Specifications		
Connector Type	Pluggable Terminal Block	
Number of Pins	20	
Pitch	3.50 mm	
Wire Size Range	16–28 AWG	
Stripping Length	7.0 mm	
Wire Specification	Lead-free, heat resistant, polyvinyl chloride insulated copper wire, rated over 80°C	
Screw Thread	M2.0	
Tightening Torque	2.0-2.2 inch-lb [0.22-0.25 N·m]	

WIRING DIAGRAM

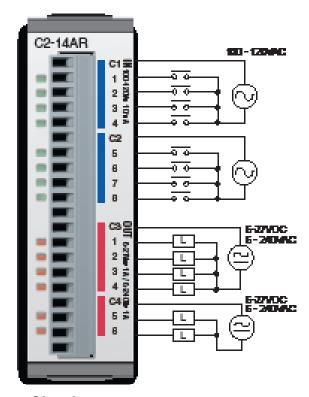


EQUIVALENT CIRCUITS

Equivalent Discrete Input Circuit

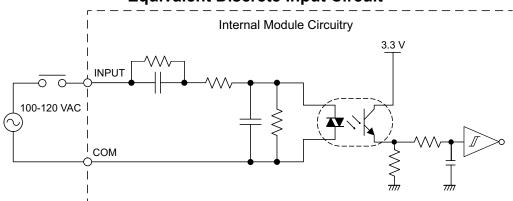


Equivalent Discrete Output Circuit

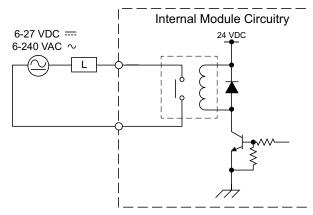

3505 HUTCHINSON ROAD CUMMING, GA 30040-5860 1-800-633-0405

Hardware Installation, continued

DERATING CHARTS

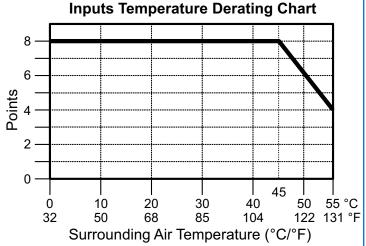

Outputs Temperature Derating Chart 8 6 45 0 10 20 30 40 50 55 °C 104 32 50 68 85 122 131 °F Surrounding Air Temperature (°C/°F)

INSULATION REQUIREMENTS FOR IEC/UL 61010-1 AND 61010-2-201 (SECTIONS 6.5 AND 6.7)

Input to Output Insulation

Basic insulation is provided between Relay Output 1 and the closest Input terminal. When connecting the Relay Output to a circuit that exceeds 100VAC (141VDC) more than the closest input circuit an additional basic insulation layer must be added to the input circuit.

Output to Output Insulation

Basic insulation is provided between Relay Outputs. When connecting a Relay Output to a circuit that exceeds 100VAC (141VDC) more than the adjacent Relay Outputs, an additional basic insulation layer must be added to the adjacent Relay Output circuits.

Additional Basic Insulation Examples

- Supplementary Insulation: Interposing relay, additional insulating material,... (sec. 6.5.3)
- Automatic Disconnection of the Supply: Properly sized breaker (sec. 6.5.5)
- Current or Voltage Limiting device: Properly sized fuse (sec. 6.5.6)

Basic insulation requires a clearance distance of 1.5 mm or more, a creepage distance of 2.5 mm or more, and dielectric voltage withstand of 1500Vrms.

AC input1 (X1-X4)		
AC input2 (X5-X8)	Internal circuit	
Relay output1 (Y1-Y4)		
Relay output2 (Y5-Y6)		
:	No insulation	
:	Basic insulation	
 :	Reinforced insulation	

Symbols listed on the equipment are shown below.

Name	Description	Symbol	
DC	DC power supply	===	IEC60417 No. 5031
AC	AC power supply	~	IEC60417 No. 5032
CAUTION	Refer to QR code link for product handling Use Copper Conductor Only	<u> </u>	ISO 7000 No.0434B



For additional technical support or questions, call our Technical Support team at 1-800-633-0405 or 770-844-4200.